



Super King Air 200 Series

COMMUTER CATEGORY CONVERSION ILLUSTRATED PARTS CATALOG

AIRPLANE SERIAL NO: _____

Manual No. **006-40**
November 16, 2018

Waco Regional Airport • P.O. Box 5500 • Waco, Texas 76708



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

INTRODUCTION

SCOPE

This section provides an illustrated list of the equipment installed under STC SA11103SC for Beechcraft King Air 200 series aircraft. The information contained herein should be used as reference only to help with ordering replacement parts when necessary. The STC drawings contain the FAA approved data and may supersede the information in the parts lists until this section is updated to reflect the latest drawings.

FORMAT

This Illustrated Parts Catalog (IPC) is broken down into systems, installations, assemblies & detail parts. The example below shows the basic format. The following terms used in the parts lists are defined below.

ITEM – the item number in the parts list corresponds to the item number in the illustration.

PART NUMBER – lists the part number of the item. The number can be a CTA part number, a vendor number, or a mil-spec number.


NOMENCLATURE – name of the part and if it is a detail part, an assembly or installation.

EFFECTIVITY – if listed, the serial numbers of the aircraft eligible for the specific part installation. If the parts are eligible for installation on all serial number airplanes, the column is left blank.

UNITS/ASSY – quantity of the parts used for the next higher assembly of the part. Quantity of “ATTACHING PARTS” is the number of parts required to attach one unit of the part they attach.

EXAMPLE

The example shows how parts are illustrated and listed by installation, assembly, etc.

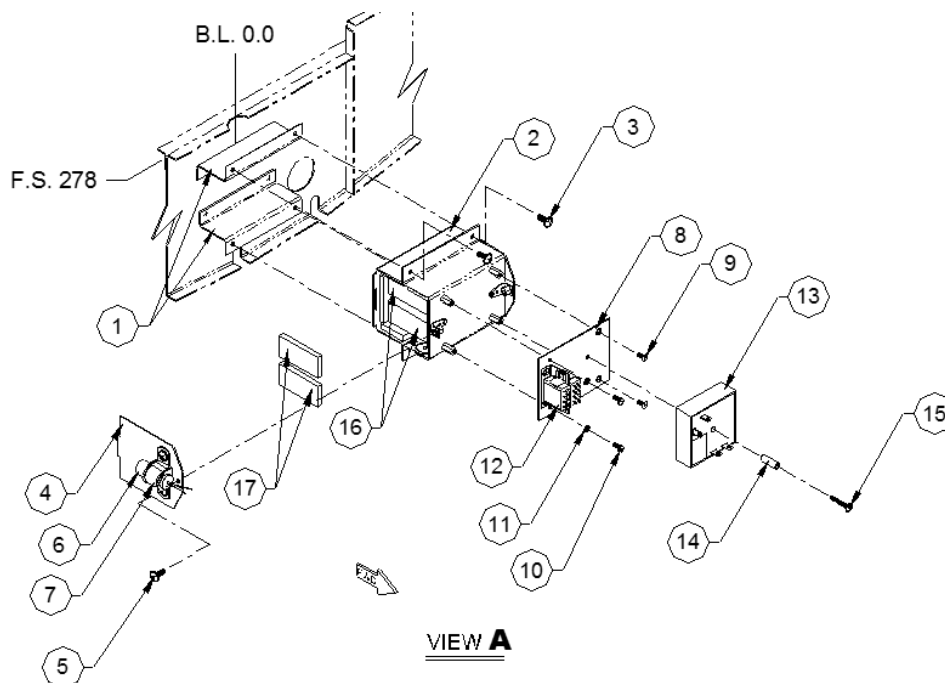



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1005-0000-1	INSTALLATION, EMERGENCY LIGHTING		1
1	006-1005-0005-1	. ANGLE ASSEMBLY		2
		ATTACHING PARTS		
	CR3213-4-02	. RIVET		2
		-----*-----		
2	006-1005-0003-1	. POWER SUPPLY ASSEMBLY		1
		ATTACHING PARTS		
3	AN525-832R7	. SCREW		4
		-----*-----		
4	006-1005-0001-5	. . LID ASSEMBLY		1
		ATTACHING PARTS		
5	AN525-832R7	. . SCREW		1
		-----*-----		
6	6UO-627/2	. . G-SWITCH		1
		ATTACHING PARTS		
7	006-1005-0029-1	. . CLAMP		1
	AN525-832R5	. . SCREW		2
		-----*-----		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

CHAPTER 11 – PLACARDS AND MARKINGS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION	FIGURE	EFFECTIVITY
PLACARDS			
PLACARDS & MARKINGS	11-10	00	
PLACARDS & MARKINGS (WITH CARGO DOOR)	11-10	01	



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**11-10-00
PLACARDS & MARKINGS**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

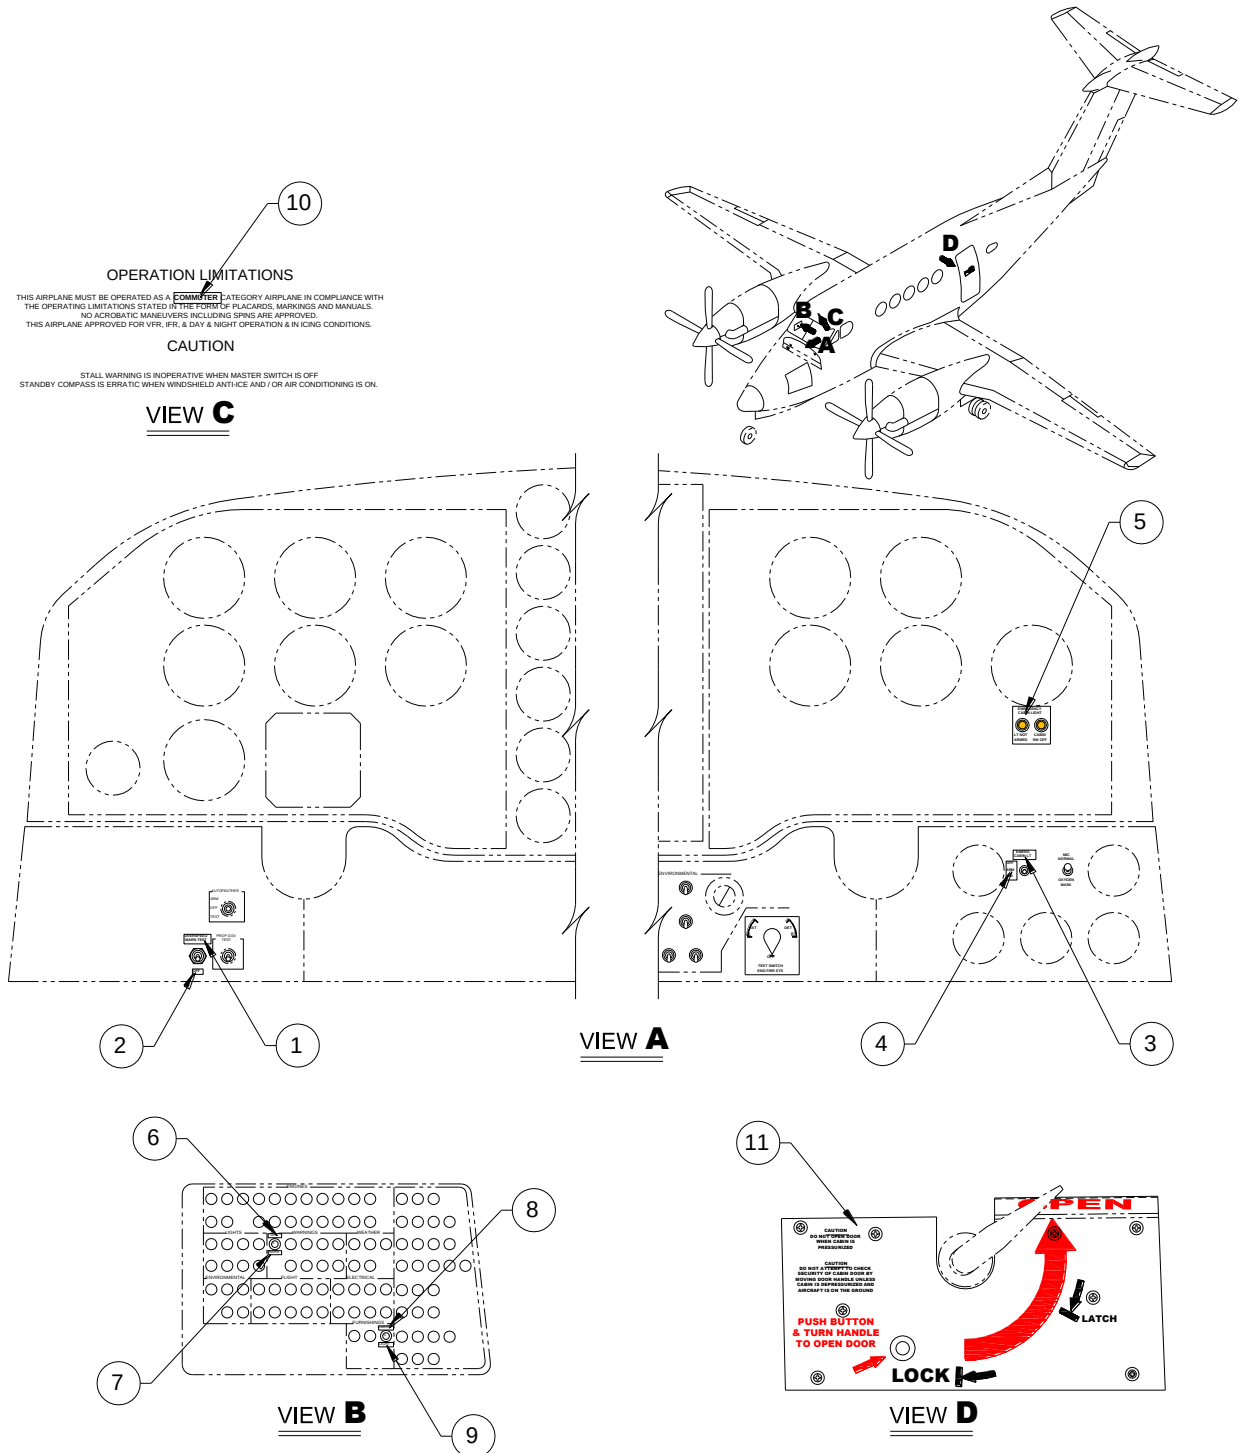


**FIGURE 10-00 PLACARDS & MARKINGS
SHEET 1 OF 3**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

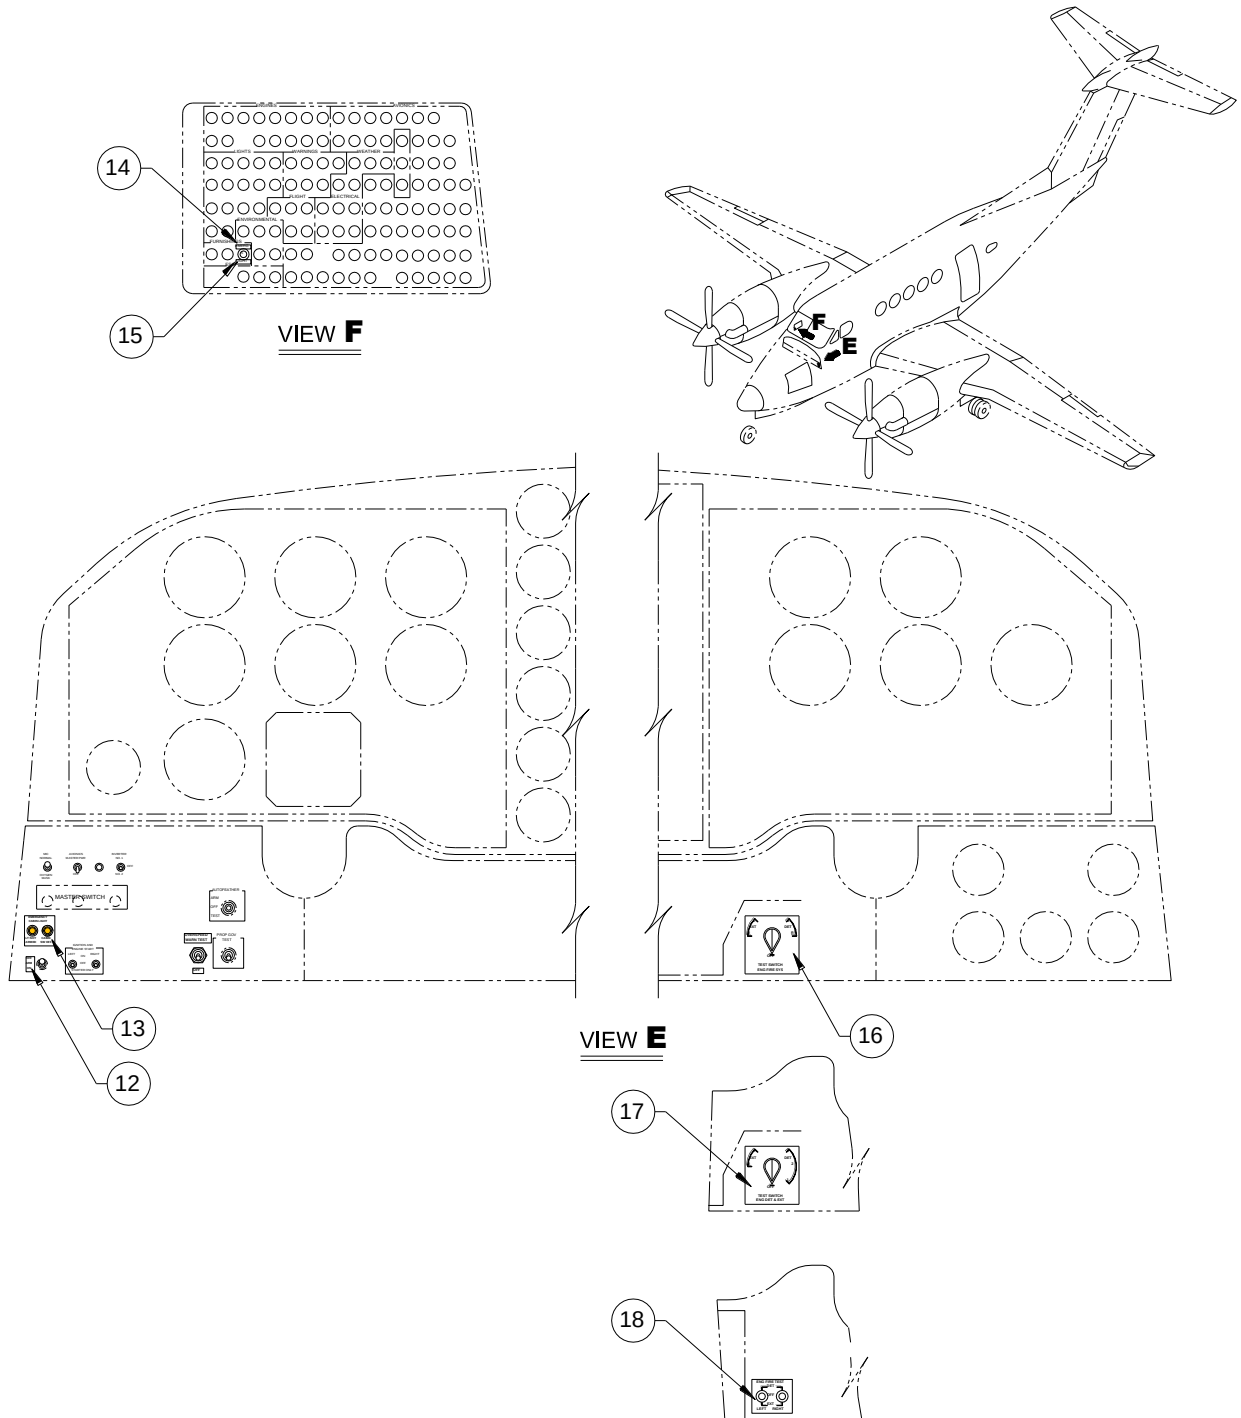

**FIGURE 10-00 PLACARDS & MARKINGS
SHEET 2 OF 3**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

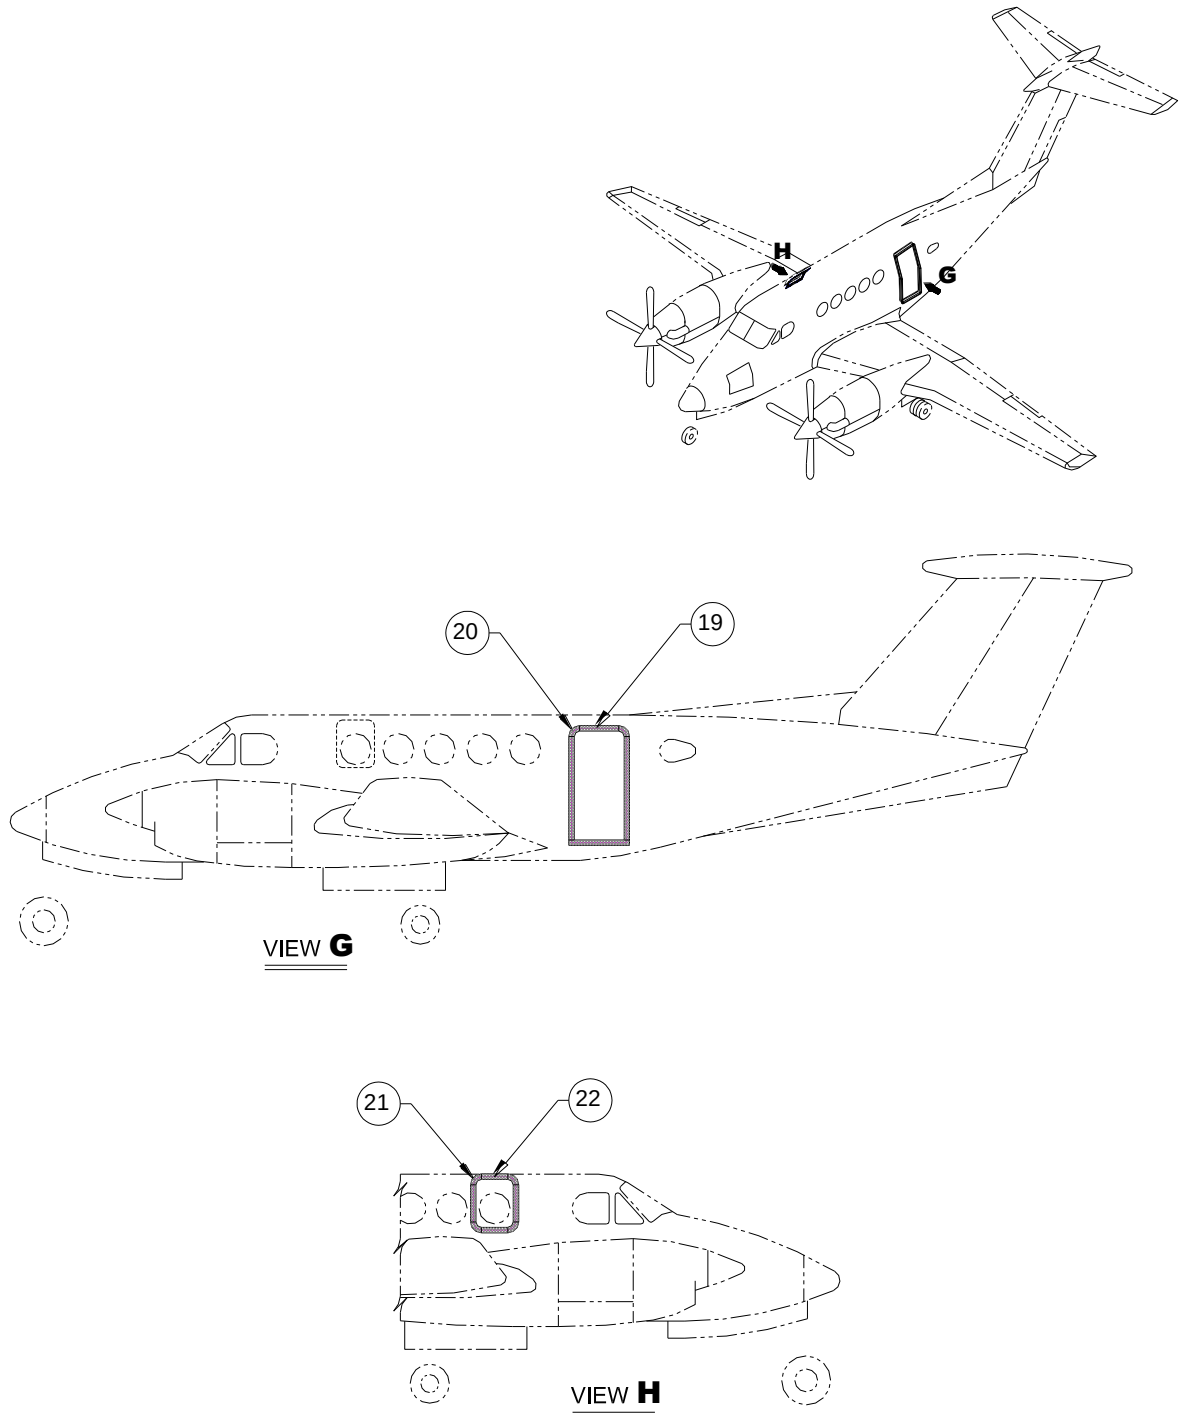

**FIGURE 10-00 PLACARDS & MARKINGS
SHEET 3 OF 3**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1001-0000-1	INSTALLATION, PLACARDS & MARKINGS (STANDARD DOOR)		1
1	006-1001-0001-1	. PLACARD, "OVERSPEED WARN TEST"		1
2	006-1001-0001-2	. PLACARD, "OFF"		1
3	006-1001-0001-5	. PLACARD, "EMERG CABIN LT" (OPTIONAL PLACEMENT)		1
4	006-1001-0001-7	. PLACARD, "OFF – ARM – ON" (OPTIONAL PLACEMENT)		1
5	006-1001-0001-8	. PLACARD, "EMERGENCY...SW OFF" (OPTIONAL PLACEMENT)		1
6	006-1001-0001-3	. PLACARD, "O/S"		1
7	006-1001-0001-4	. PLACARD, "WARN"		1
8	006-1001-0001-6	. PLACARD, "EMERG"		1
9	006-1001-0001-13	. PLACARD, "LIGHT"		1
10	006-1001-0001-15	. PLACARD, "COMMUTER"		1
11	006-1001-0002-1	. PLACARD ASSEMBLY		1
12	006-1001-0001-7	. PLACARD, "OFF – ARM – ON"	A	1
13	006-1001-0001-8	. PLACARD, "EMERGENCY ... SW OFF"	A	1
14	006-1001-0001-6	. PLACARD, "EMERG"	A	1
15	006-1001-0001-13	. PLACARD, "LIGHT"	A	1
16	006-1001-0001-9	. PLACARD, "TEST SWITCH ... FIRE SYS"	B	1
17	006-1001-0001-10	. PLACARD, "TEST SWITCH ... EXT"	C	1
18	006-1001-0001-11	. PLACARD, "ENG FIRE ... LEFT RIGHT"	D	1
19	006-1001-0003-4G	. BORDER, STRAIGHT, GRAY		4
	006-1001-0003-4B	. BORDER, STRAIGHT, BLACK (ALT.)		4
20	006-1001-0003-2G	. BORDER, CORNER, GRAY		2
	006-1001-0003-2B	. BORDER, CORNER, BLACK (ALT.)		2
21	006-1001-0003-1G	. BORDER, CORNER, GRAY		4
	006-1001-0003-1B	. BORDER, CORNER, BLACK (ALT.)		4
22	006-1001-0003-3G	. BORDER, STRAIGHT, GRAY		4
	006-1001-0003-3B	. BORDER, STRAIGHT, BLACK (ALT.)		4
		"END"		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	A	B200 & B200GT WITH PRO LINE		
	B	BB1439, BB1444 – BB1977, BB1979 – BB1987; BL0139 – BL0151; BT0035 – BT0046; BN0005 – BN0009; A/C WITH BEECHCRAFT KIT 101-9077		
	C	BB0001 - BB1438, BB1440 – BB1443; BL0001 – BL0138, BT0001 – BT0034, BN0001 – BN0004; A/C WITHOUT BEECHCRAFT KIT 101-9077		
	D	BB1978 – BB1978, BB1988 & UP; BL0152 & UP; BT0047 & UP; BN0010 & UP; BY001 & UP; BZ-1 & UP		
		“END”		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**11-10-01
PLACARDS & MARKINGS
(WITH CARGO DOOR)**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

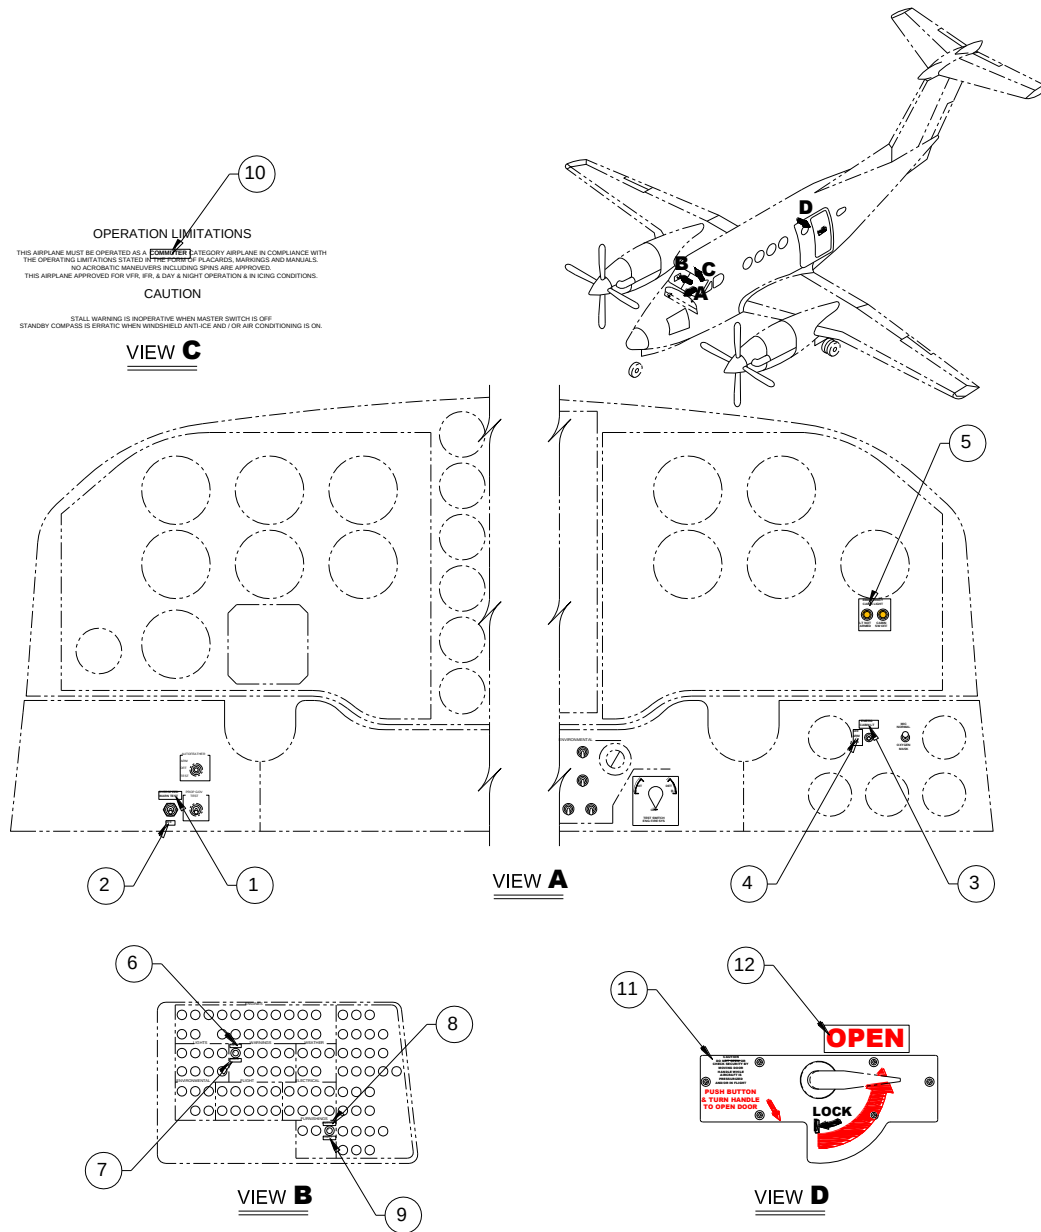


**FIGURE 10-01 PLACARDS & MARKINGS (WITH CARGO DOOR)
SHEET 1 OF 3**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

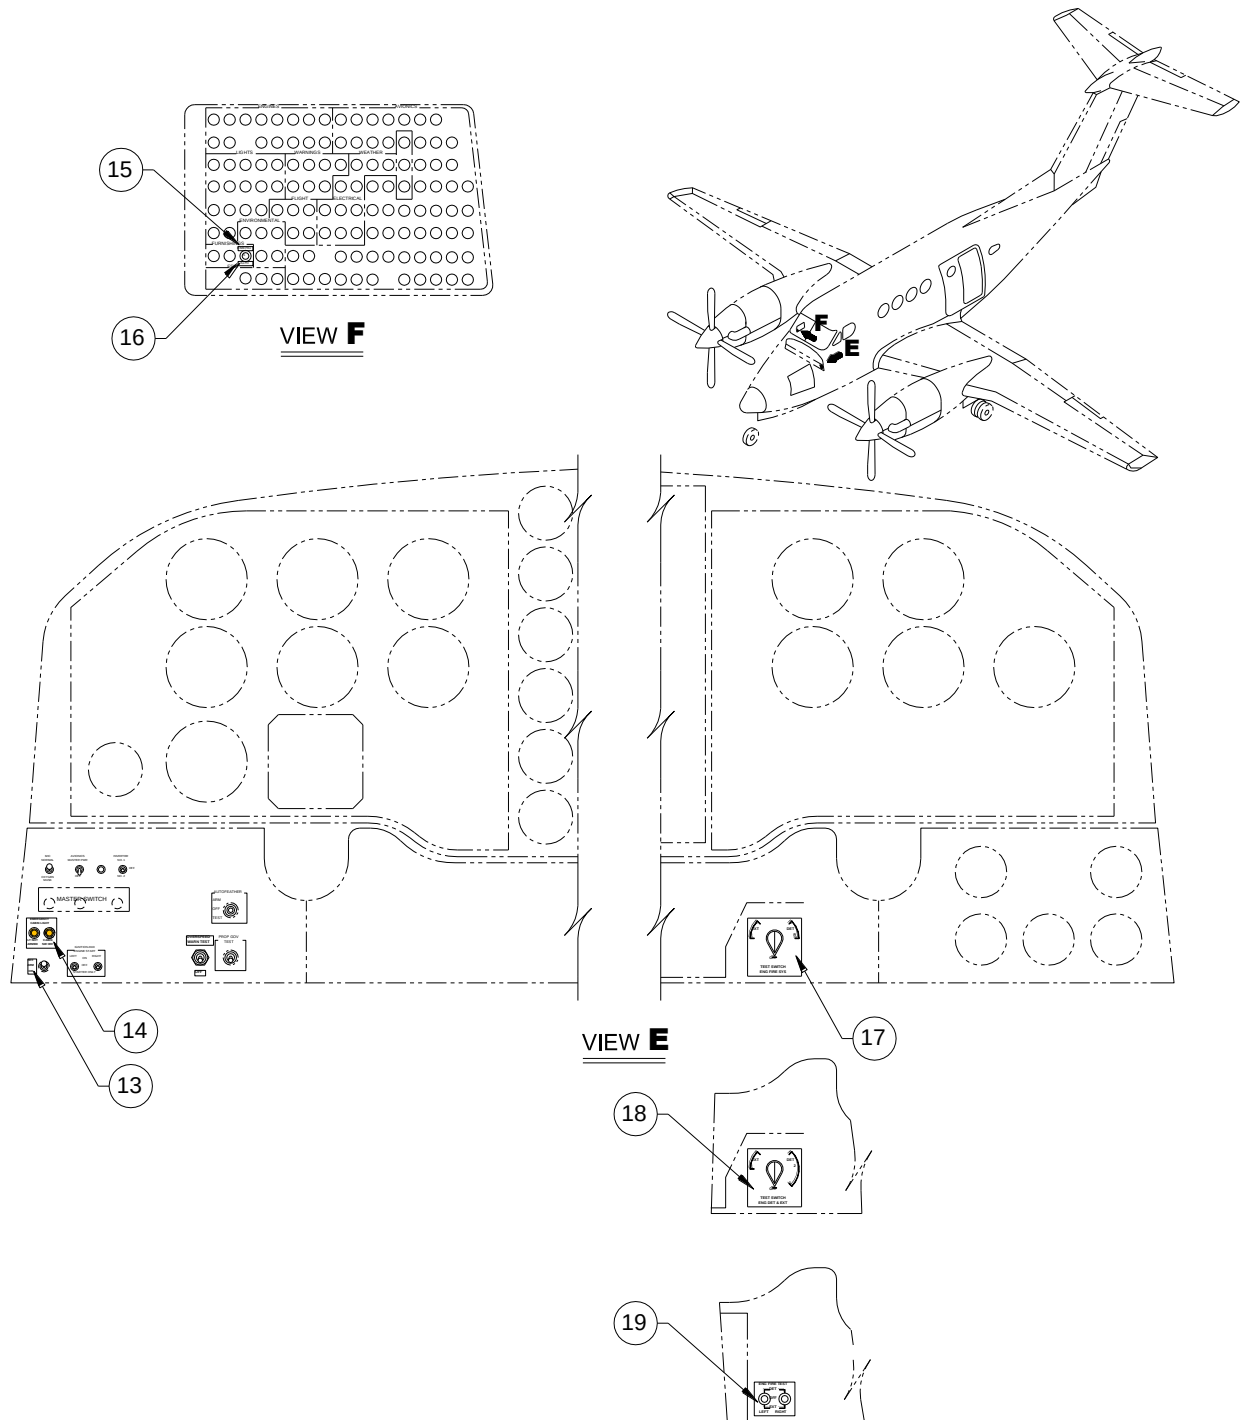

**FIGURE 10-01 PLACARDS, & MARKINGS (WITH CARGO DOOR)
SHEET 2 OF 3**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

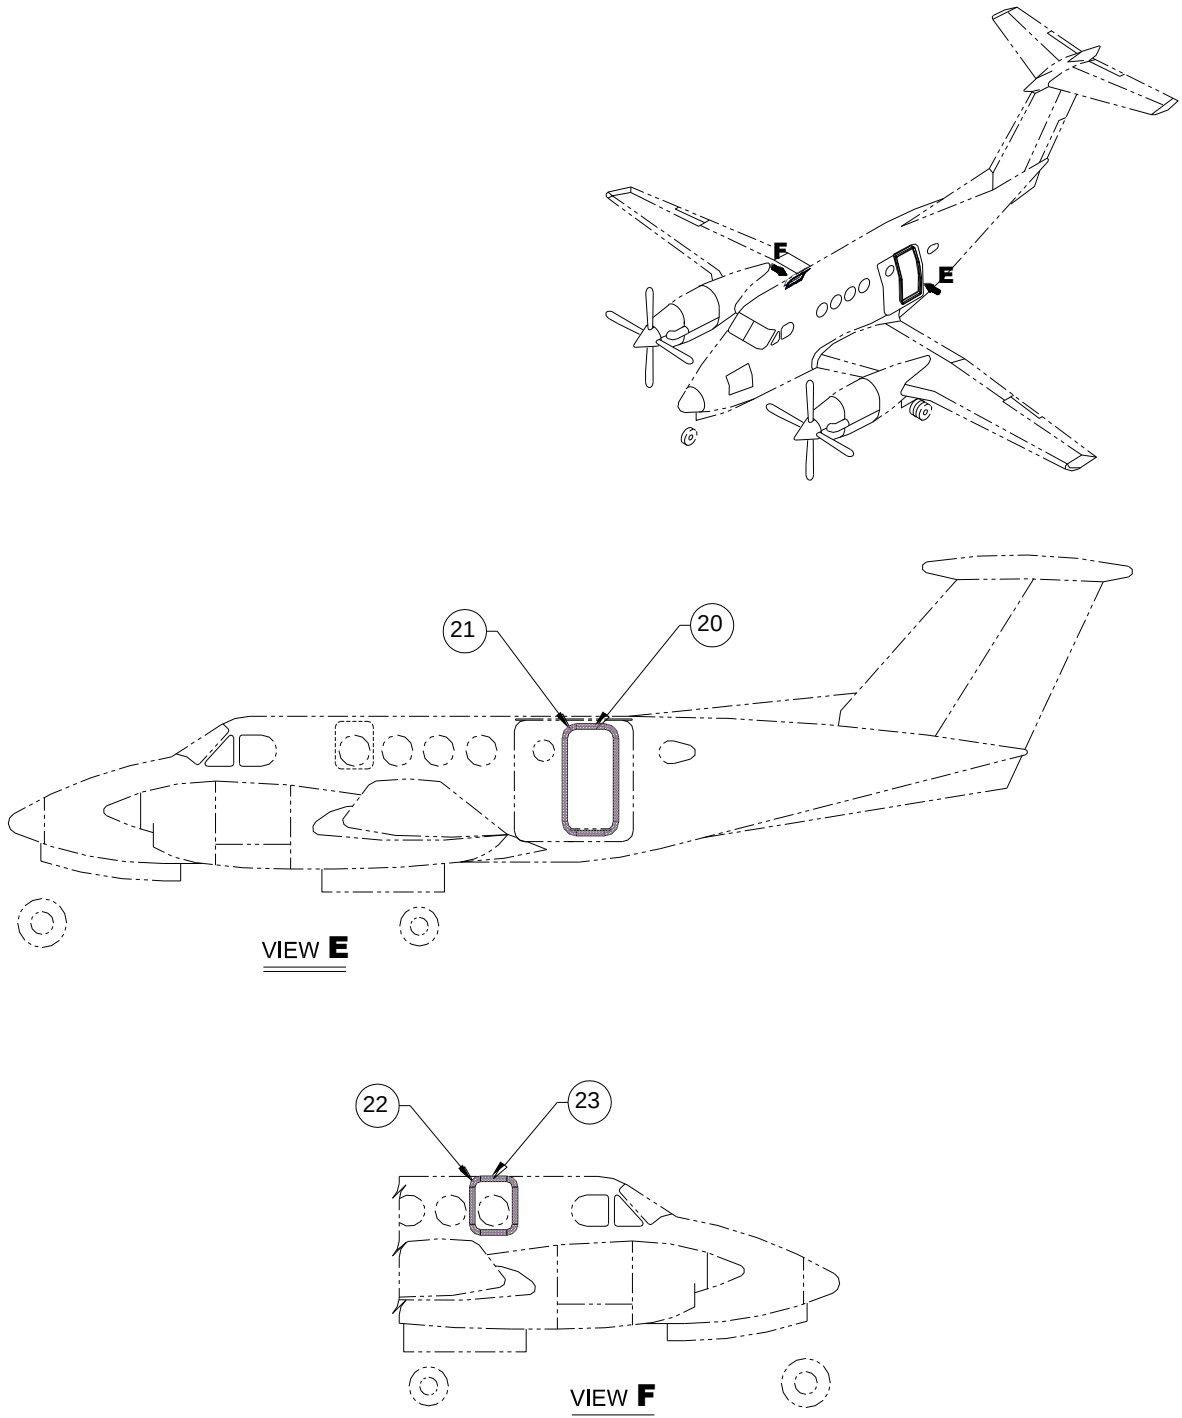

**FIGURE 10-01 PLACARDS, & MARKINGS (WITH CARGO DOOR)
SHEET 3 OF 3**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1001-0000-2	INSTALLATION, PLACARDS & MARKINGS (CARGO DOOR)		1
1	006-1001-0001-1	. PLACARD, "OVERSPEED WARN TEST"		1
2	006-1001-0001-2	. PLACARD, "OFF"		1
3	006-1001-0001-5	. PLACARD, "EMERG CABIN LT" (OPTIONAL PLACEMENT)		1
4	006-1001-0001-7	. PLACARD, "OFF – ARM – ON" (OPTIONAL PLACEMENT)		1
5	006-1001-0001-8	. PLACARD, "EMERGENCY...SW OFF" (OPTIONAL PLACEMENT)		1
6	006-1001-0001-3	. PLACARD, "O/S"		1
7	006-1001-0001-4	. PLACARD, "WARN"		1
8	006-1001-0001-6	. PLACARD, "EMERG"		1
9	006-1001-0001-13	. PLACARD, "LIGHT"		1
10	006-1001-0001-15	. PLACARD, "COMMUTER"		1
11	006-1001-0004-1	. PLACARD ASSEMBLY		1
12	006-1001-0001-17	. PLACARD, "OPEN"		1
13	006-1001-0001-7	. PLACARD, "OFF – ARM – ON"	A	1
14	006-1001-0001-8	. PLACARD, "EMERGENCY...SW OFF"	A	1
15	006-1001-0001-6	. PLACARD, "EMERG"	A	1
16	006-1001-0001-13	. PLACARD, "LIGHT"	A	1
17	006-1001-0001-9	. PLACARD, "TEST SWITCH ... FIRE SYS"	B	1
18	006-1001-0001-10	. PLACARD, "TEST SWITCH ... EXT"	C	1
19	006-1001-0001-11	. PLACARD, "ENG FIRE ... LEFT RIGHT"	D	1
20	006-1001-0003-4G	. BORDER, STRAIGHT, GRAY		4
	006-1001-0003-4B	. BORDER, STRAIGHT, BLACK (ALT.)		4
21	006-1001-0003-5G	. BORDER, CORNER, GRAY		4
	006-1001-0003-5B	. BORDER, CORNER, BLACK (ALT.)		4
22	006-1001-0003-1G	. BORDER, CORNER, GRAY		4
	006-1001-0003-1B	. BORDER, CORNER, BLACK (ALT.)		4
23	006-1001-0003-3G	. BORDER, STRAIGHT, GRAY		4
	006-1001-0003-3B	. BORDER, STRAIGHT, BLACK (ALT.)		4



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	A	B200 & B200GT WITH PRO LINE		
	B	BB1439, BB1444 – BB1977, BB1979 – BB1987; BL0139 – BL0151; BT0035 – BT0046; BN0005 – BN0009; A/C WITH BEEHCRAFT KIT 101-9077		
	C	BB0001 - BB1438, BB1440 – BB1443; BL0001 – BL0138, BT0001 – BT0034, BN0001 – BN0004; A/C WITHOUT BEEHCRAFT KIT 101-9077		
	D	BB1978 – BB1978, BB1988 & UP; BL0152 & UP; BT0047 & UP; BN0010 & UP; BY001 & UP; BZ-1 & UP		
		“END”		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

CHAPTER 25 – EQUIPMENT/FURNISHINGS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION	FIGURE	EFFECTIVITY
PASSENGER COMPARTMENT			
FLOOR PATH MARKING (CARPETED CENTER AISLE)	25-10	00	
FLOOR PATH MARKING (FLOORS W/O CARPETING)	25-10	01	
EMERGENCY EXIT SIGNS (SELF LUMINESCENT)	25-20	50	
EMERGENCY EXIT SIGNS (POWERED)	25-20	51	



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**25-10-00
FLOOR PATH MARKING
(CARPETED CENTER AISLE)**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

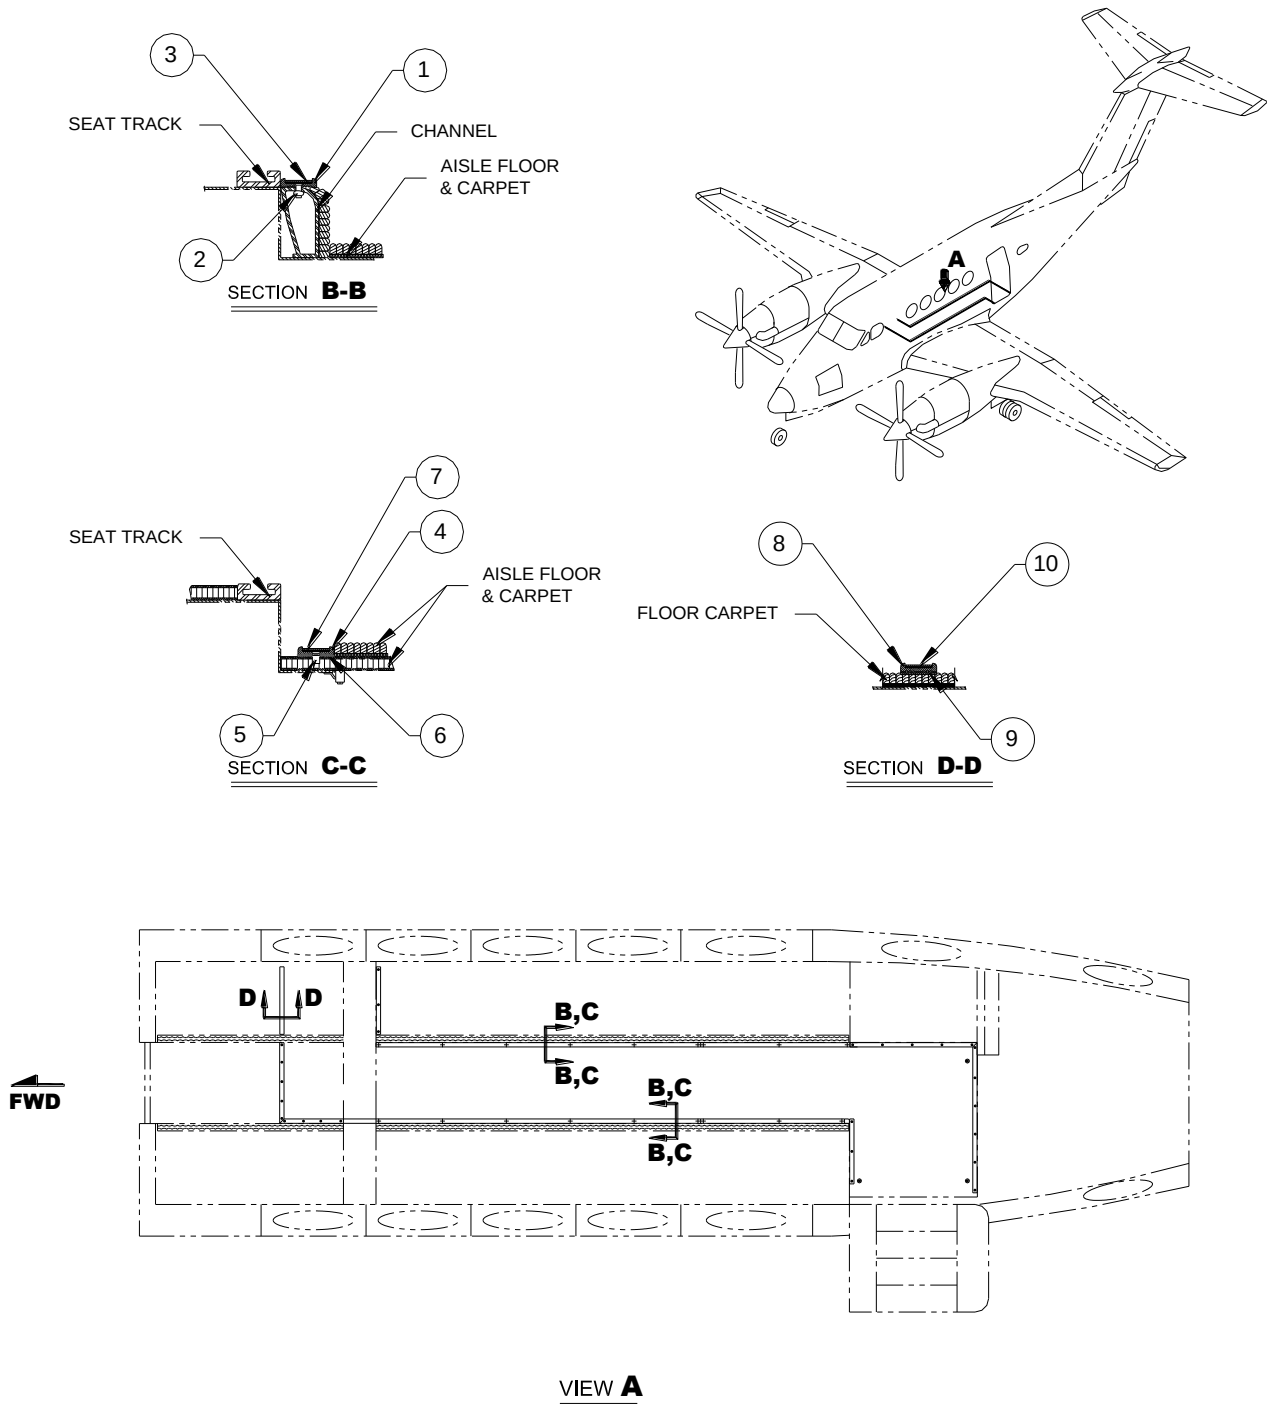

**FIGURE 10-00, FLOOR PATH MARKING
SHEET 1 OF 2**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

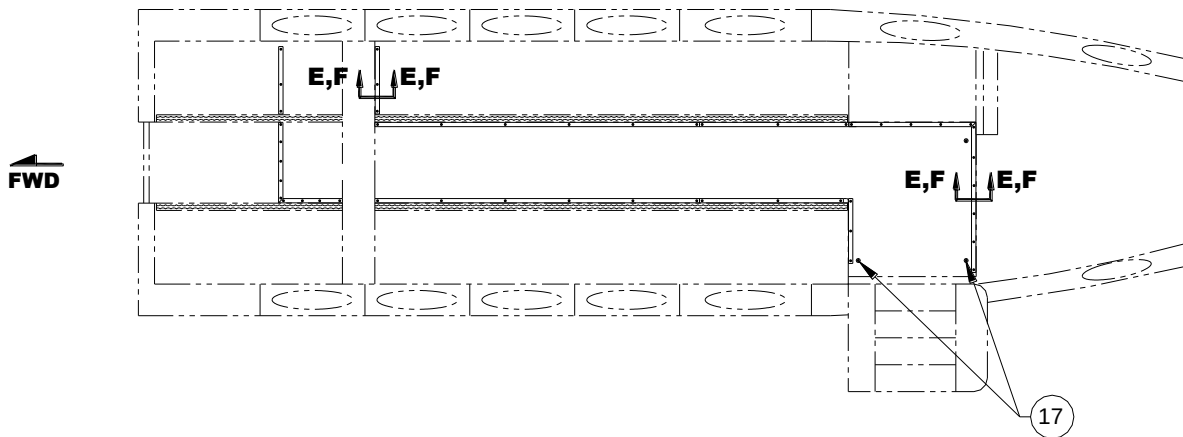

**FIGURE 10-00, FLOOR PATH MARKING
SHEET 2 OF 2**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1003-0000	INSTALLATION, FLOOR PATH MARKING		
1	006-1003-0021-1	. TRACK (5-FT LENGTH) ATTACHING PARTS	A	3
2	CR3212-4-04	. RIVET -----*-----	A	A/R
3	006-1003-0021-2	. GUIDANCE STRIP (5-FT LENGTH)	A	3
4	006-1003-0021-1	. TRACK (5-FT LENGTH) ATTACHING PARTS	B	3
	MS24693S48	. SCREW	B	6
5	006-1003-022-1	. T-NUT	B	6
6	9309	. ADHESIVE (OPTIONAL) -----*-----	B	A/R
7	006-1003-0021-2	. GUIDANCE STRIP (5-FT LENGTH)		3
8	006-1003-0021-1	. TRACK (1-FT LENGTH) ATTACHING PARTS		1
9	006-103-0001-1	. HOOK TAPE -----*-----		A/R
10	006-1003-0021-2	. GUIDANCE STRIP (1-FT LENGTH)		1
11	006-1003-0021-1	. TRACK (5-FT LENGTH) ATTACHING PARTS		1
	MS24693S48	. SCREW		6
12	006-1003-022-1	. T-NUT -----*-----		6
13	006-1003-0021-2	. GUIDANCE STRIP (5-FT LENGTH)		1
14	006-1003-0021-1	. TRACK (5-FT LENGTH) ATTACHING PARTS		1
	MS24693S48	. SCREW		6
15	006-1003-022-1	. T-NUT -----*-----		6
16	006-1003-0021-2	. GUIDANCE STRIP (5-FT LENGTH)		1
17	MS24694-S278	. SCREW		2



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	A	BB1438, BB1440 – BB1443, BL0001 – BL0140; BT0001 – BT0034 (W/ CARPETED CENTER AISLE & SIDE CHANNELS)		
	B	BB1439, BB1444 & UP; BL0141 & UP; BT0035 & UP (W/ CARPETED CENTER AISLE & STANDARD PASSENGER SEATING)		
		“END”		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**25-10-01
FLOOR PATH MARKING
(FLOORS WITHOUT CARPETING)**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

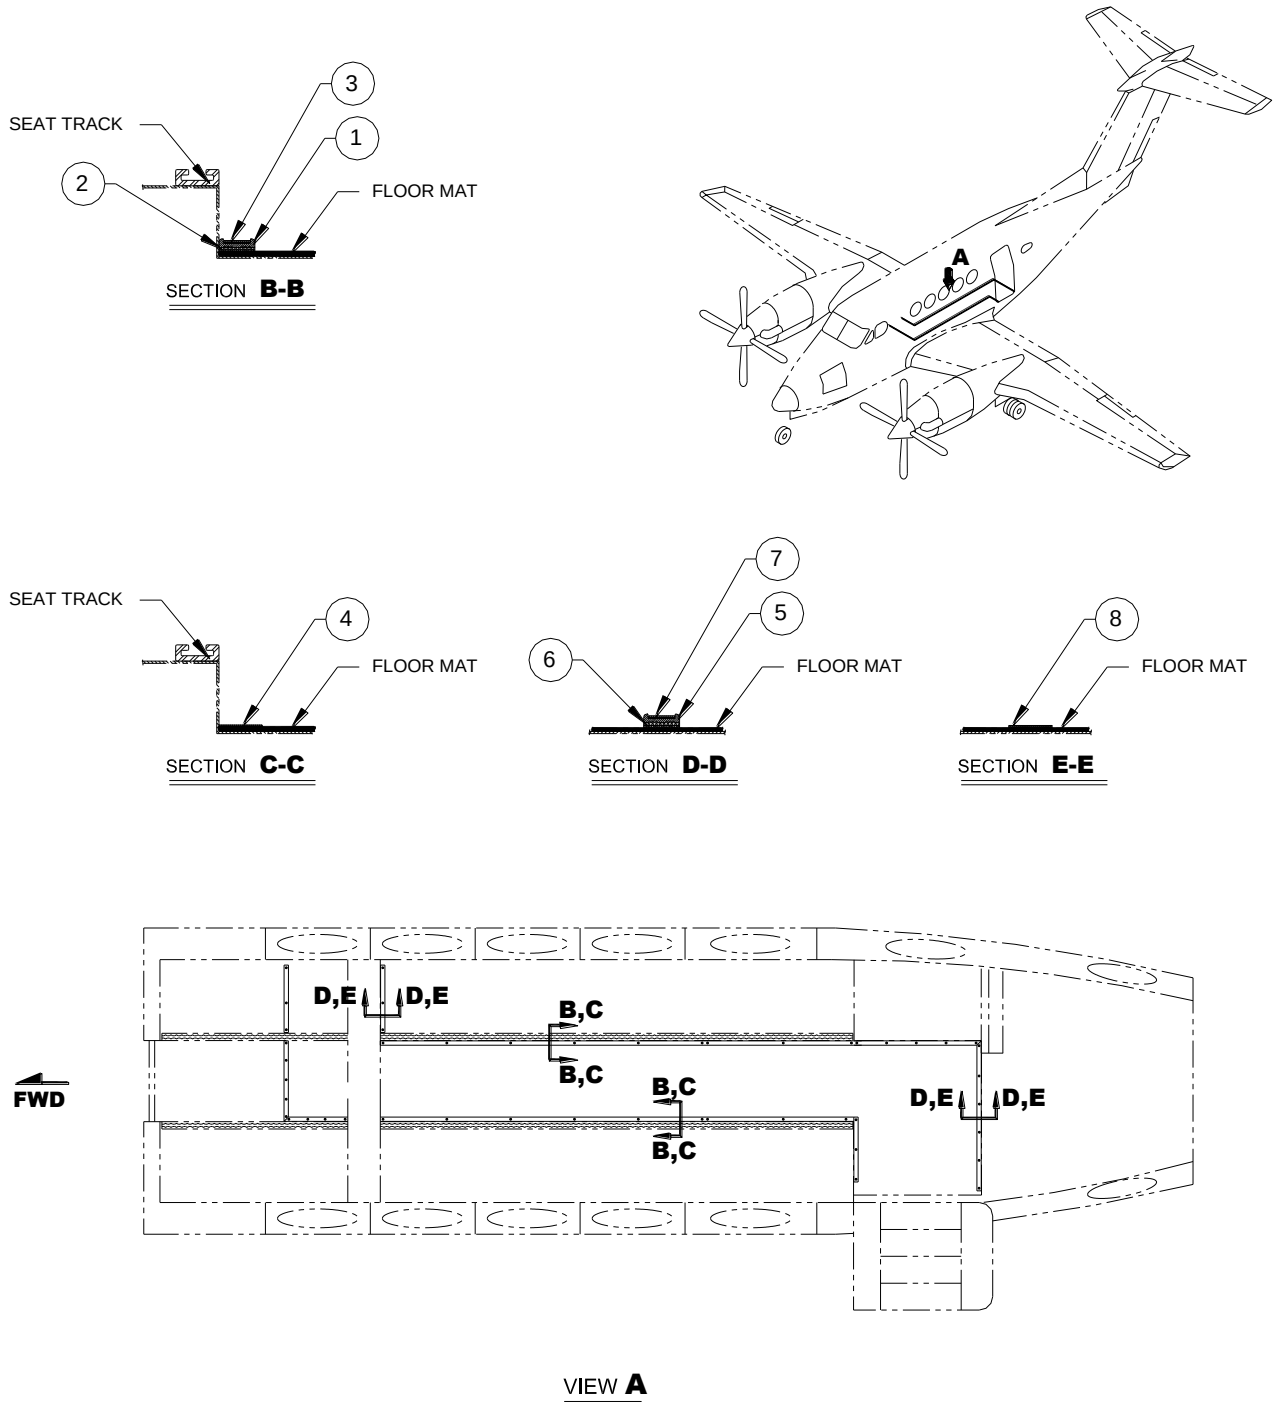

**FIGURE 10-00, FLOOR PATH MARKING
SHEET 1 OF 1**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1003-0000	INSTALLATION, FLOOR PATH MARKING		
1	006-1003-0021-1	. TRACK (5-FT LENGTH)	A	3
		ATTACHING PARTS		
2	SJ3519FR	. HOOK TAPE	A	A/R
	PBLK1.00H	. HOOK TAPE (ALTERNATE)	A	A/R
	9776K22	. HOOK TAPE (ALTERNATE)	A	A/R
	SJ3518FR	. LOOP TAPE	A	A/R
	PBLK1.00L	. LOOP TAPE (ALTERNATE)	A	A/R
	9776K27	. LOOP TAPE (ALTERNATE)	A	A/R
		-----*-----		
3	006-1003-0021-2	. GUIDANCE STRIP (5-FT LENGTH)	A	3
4	GT6001	. GUIDANCE TAPE (ALTERNATE)		A/R
5	006-1003-0021-1	. TRACK (5-FT LENGTH)	A	3
		ATTACHING PARTS		
6	SJ3519FR	. HOOK TAPE	A	A/R
	PBLK1.00H	. HOOK TAPE (ALTERNATE)	A	A/R
	9776K22	. HOOK TAPE (ALTERNATE)	A	A/R
	SJ3518FR	. LOOP TAPE	A	A/R
	PBLK1.00L	. LOOP TAPE (ALTERNATE)	A	A/R
	9776K27	. LOOP TAPE (ALTERNATE)	A	A/R
		-----*-----		
7	006-1003-0021-2	. GUIDANCE STRIP (5-FT LENGTH)	A	3
8	GT6001	. GUIDANCE TAPE (ALTERNATE)		A/R
	A	BB1438 & UP; BL0001 & UP; BT0001 & UP, (W/O CARPETING)		
		"END"		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

**25-20-50
EMERGENCY EXIT SIGNS
(SELF LUMINESCENT)**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

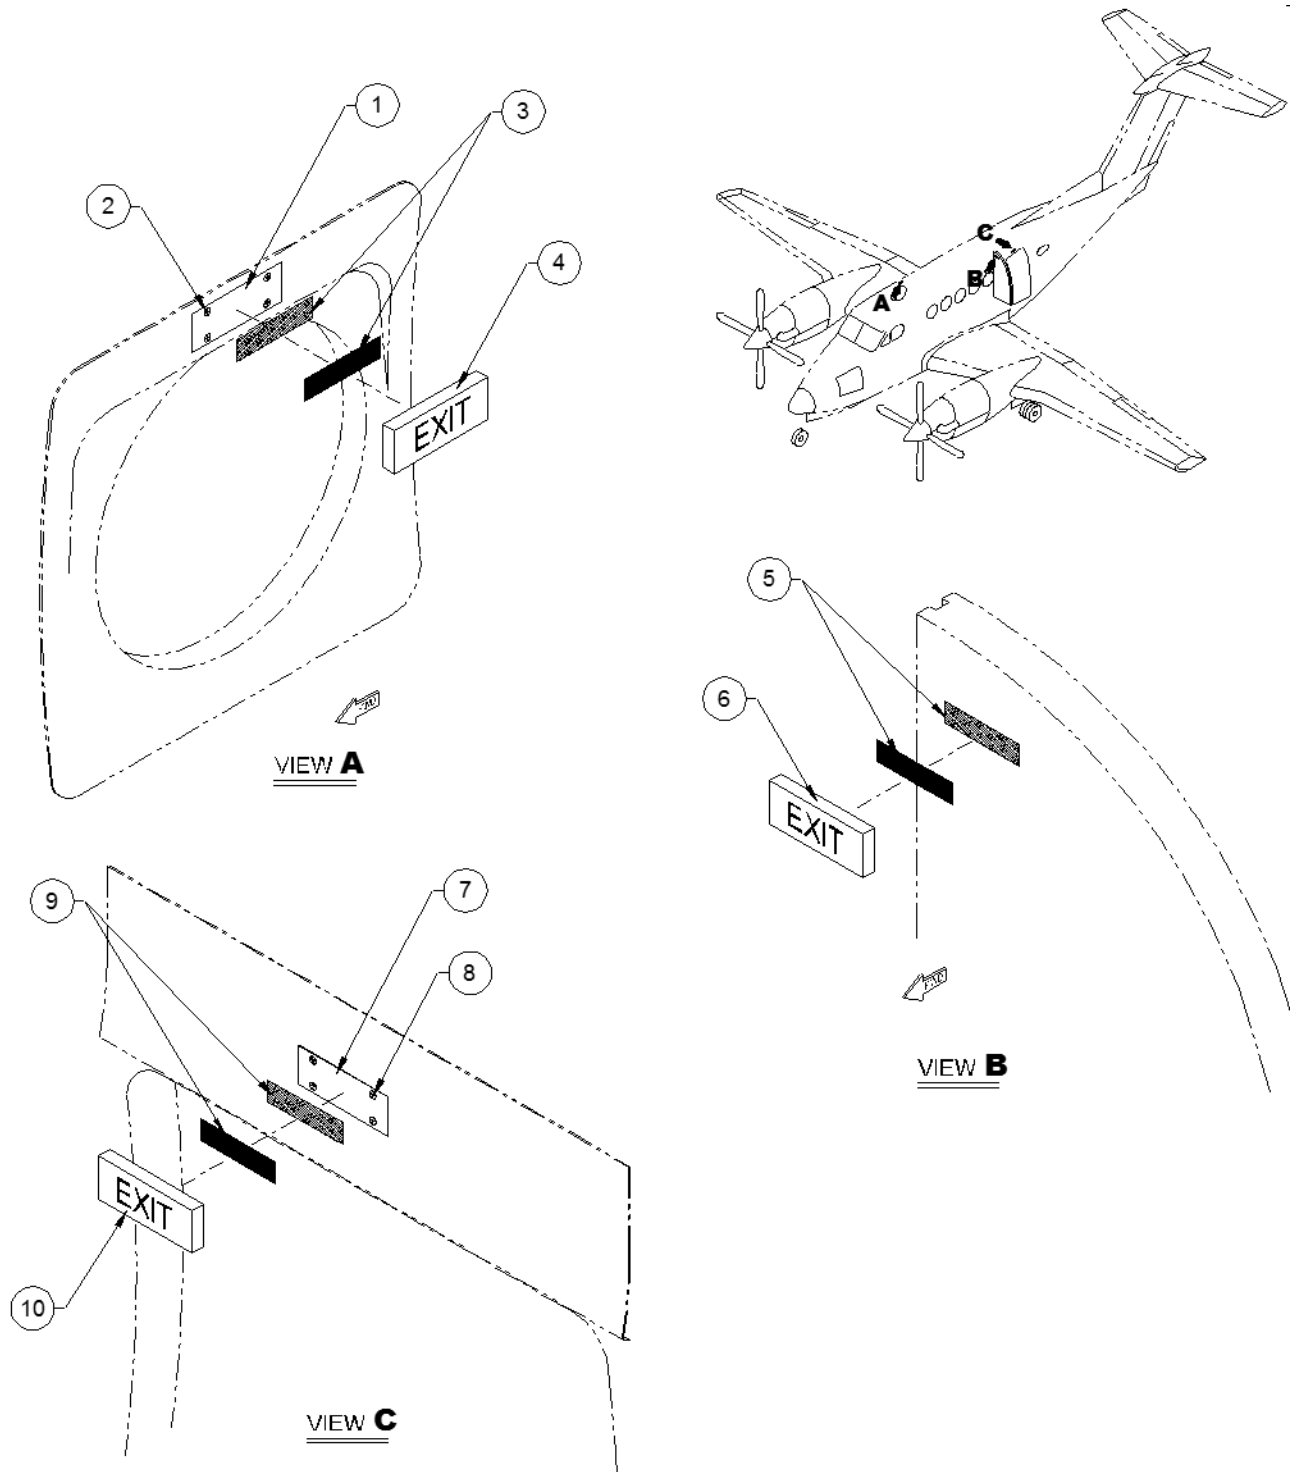


FIGURE 20-50, EMERGENCY EXIT SIGNS (SELF LUMINESCENT)



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1004-0000-1	INSTALLATION, EMERGENCY EXIT SIGN (SELF LUMINESCENT)		
1	006-1004-0001-1	. MOUNTING PLATE ATTACHING PARTS		1
2	MS24639S27	. SCREW		4
	MS35333-37	. LOCK WASHER		4
	MS35649-262	. NUT -----*-----		4
3	006-1004-0001-2	. HOOK & LOOP TAPE		1
4	99-384009-5	. EXIT SIGN		1
5	006-1004-0001-2	. HOOK & LOOP TAPE		1
6	99-384009-5	. EXIT SIGN		1
7	006-1004-0001-1	. MOUNTING PLATE ATTACHING PARTS		1
8	MS24639S27	. SCREW		4
	MS35333-37	. LOCK WASHER		4
	MS35649-262	. NUT -----*-----		4
9	006-1004-0001-2	. HOOK & LOOP TAPE		1
10	99-384009-5	. EXIT SIGN		1
"END"				



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

**25-20-51
EMERGENCY EXIT SIGNS
(POWERED)**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

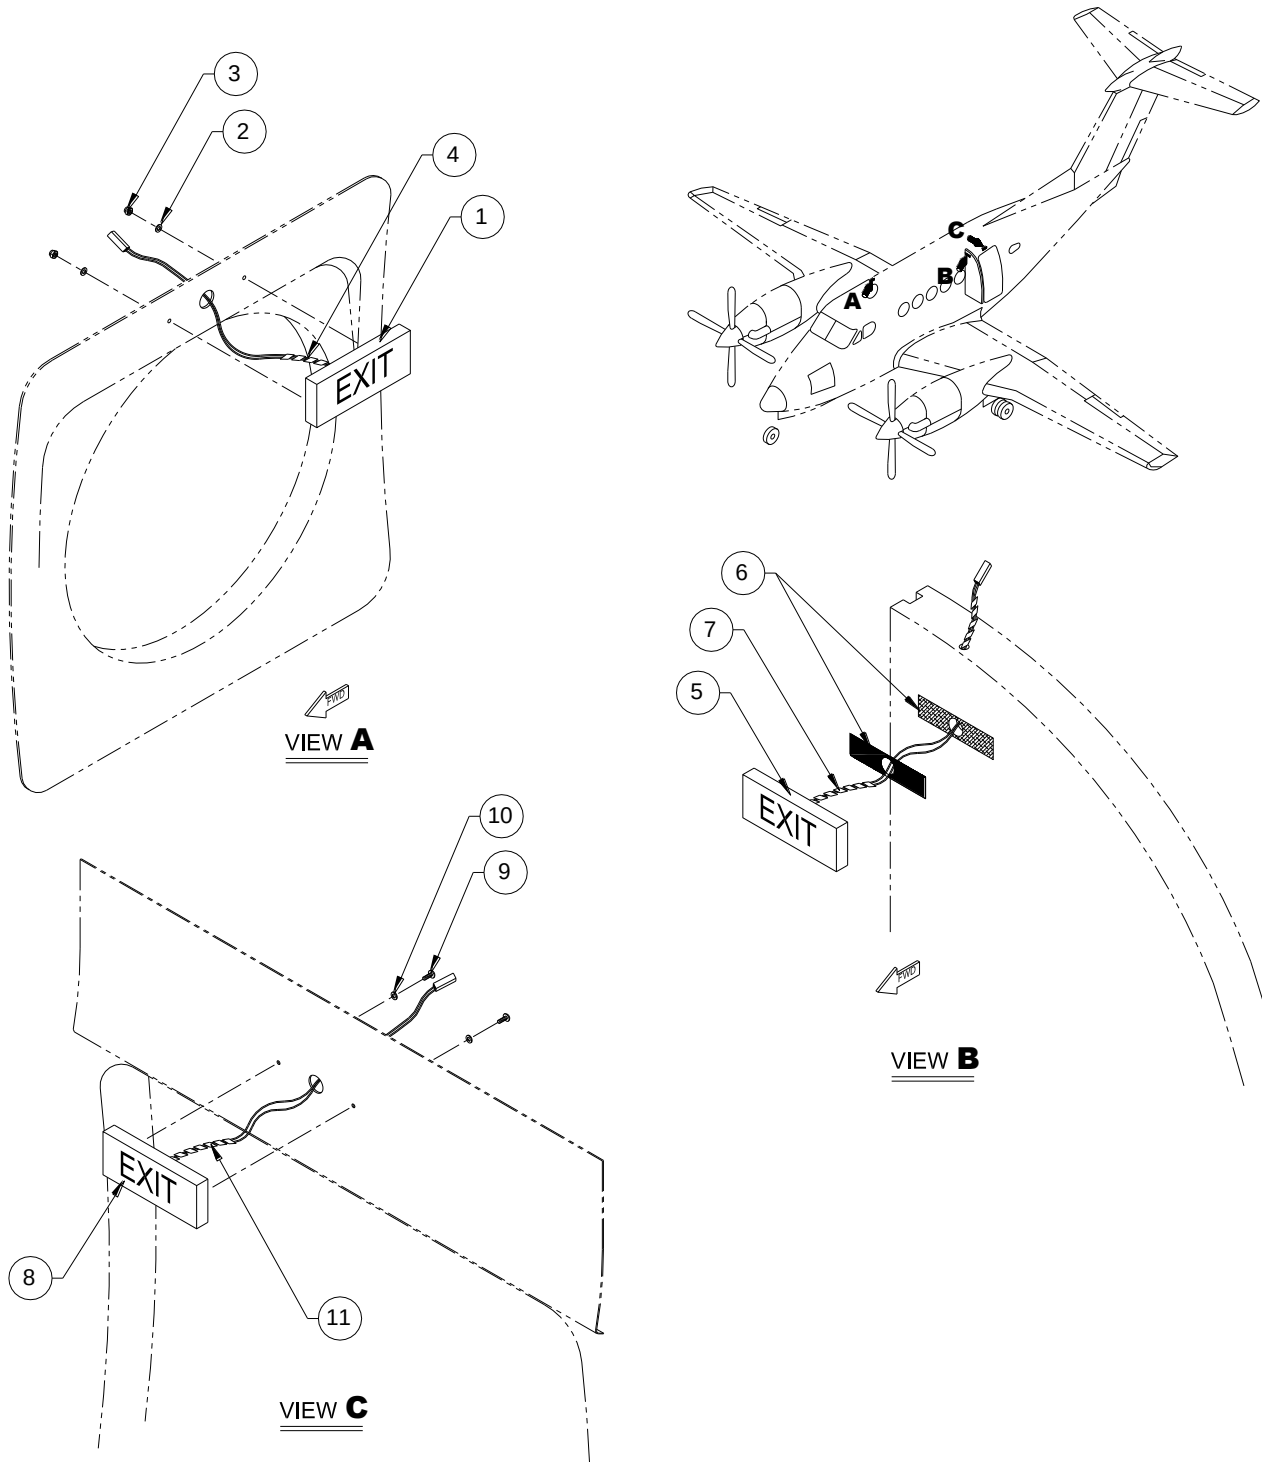


FIGURE 20-51, EMERGENCY EXIT SIGNS (POWERED)



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1004-0000-2	INSTALLATION, EMERGENCY EXIT SIGN (POWERED)		
1	ELES-500-002	. EXIT SIGN		1
		ATTACHING PARTS		
	MS35206-231	. SCREW		2
2	NAS1149FN632P	. WASHER		2
3	MS21044N06	. NUT		2
4	SW-20	. SPIRAL WRAP TUBING		A/R
		-----*-----		
5	ELES-500-002	. EXIT SIGN		1
6	006-1004-0001-2	. HOOK & LOOP TAPE		1
7	SW-20	. SPIRAL WRAP TUBING		A/R
8	ELES-500-002	. EXIT SIGN		1
		ATTACHING PARTS		
9	MS35206-231	. SCREW		2
10	NAS1149FN632P	. WASHER		2
	MS21044N06	. NUT		2
11	SW-20	. SPIRAL WRAP TUBING		A/R
		-----*-----		
		“END”		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

CHAPTER 26 – FIRE PROTECTION

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION	FIGURE	EFFECTIVITY
EXTINGUISHING ENGINE FIRE EXTINGUISHER	26-20	00	



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**26-20-00
ENGINE FIRE EXTINGUISHER**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

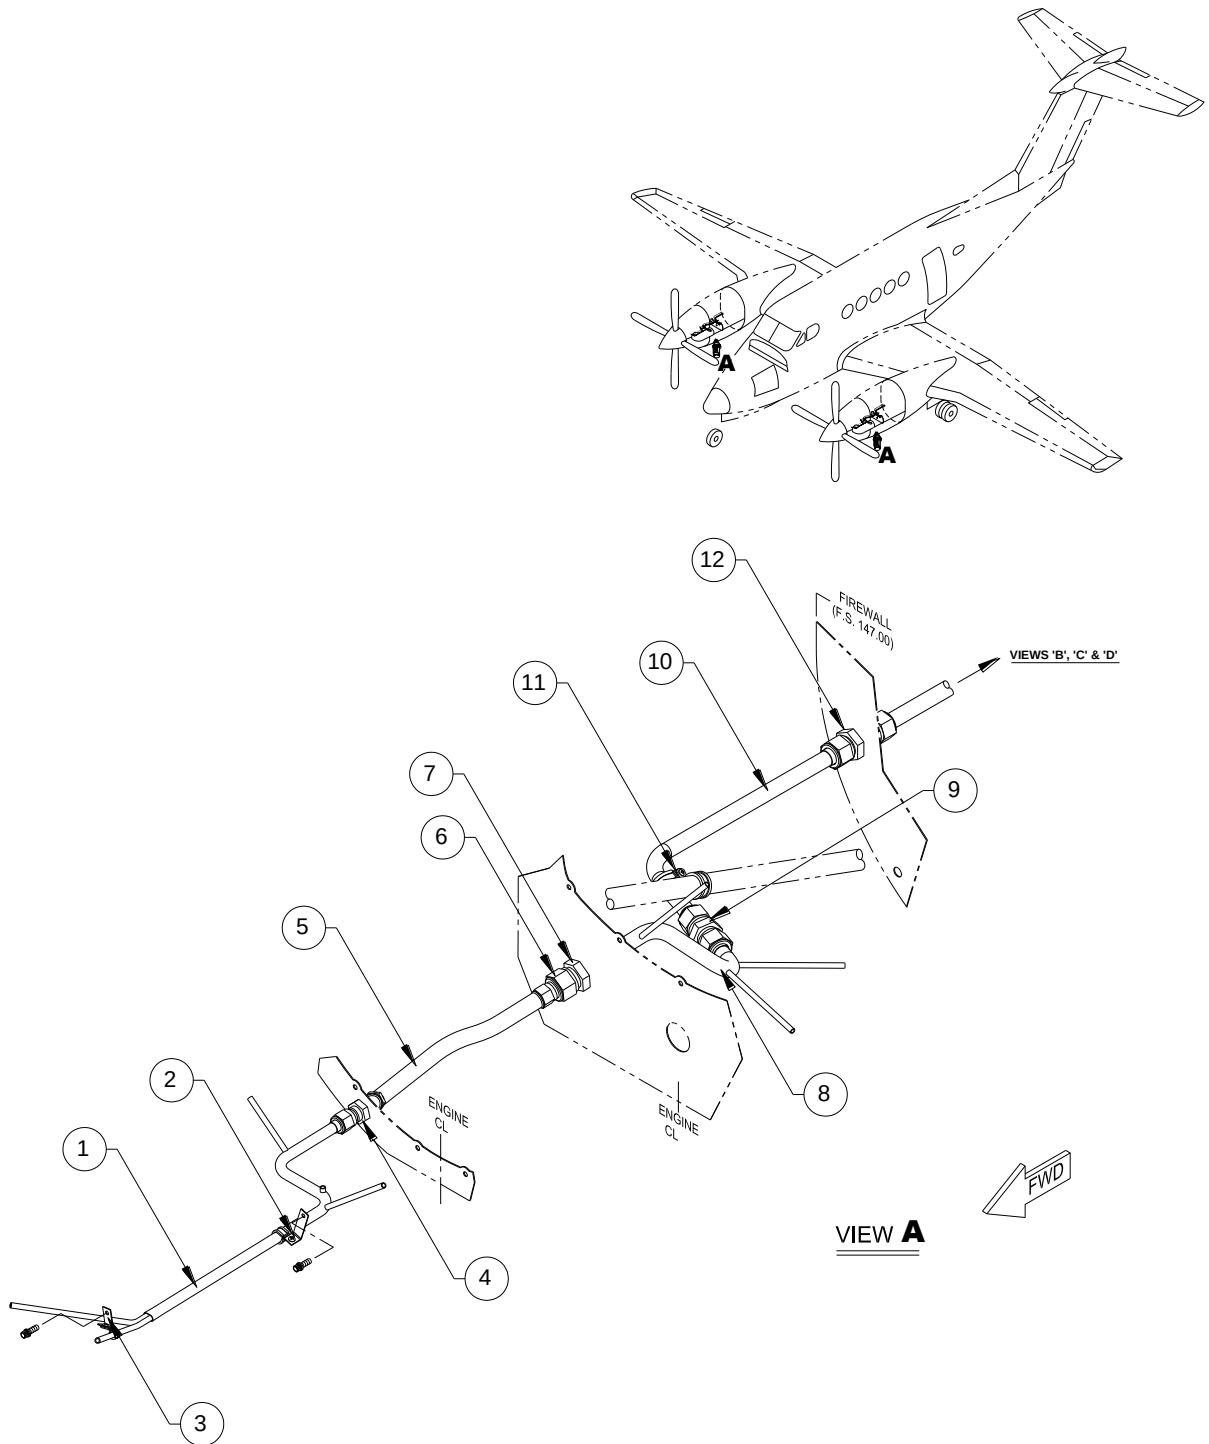


**FIGURE 20-00, ENGINE FIRE EXTINGUISHER
SHEET 1 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

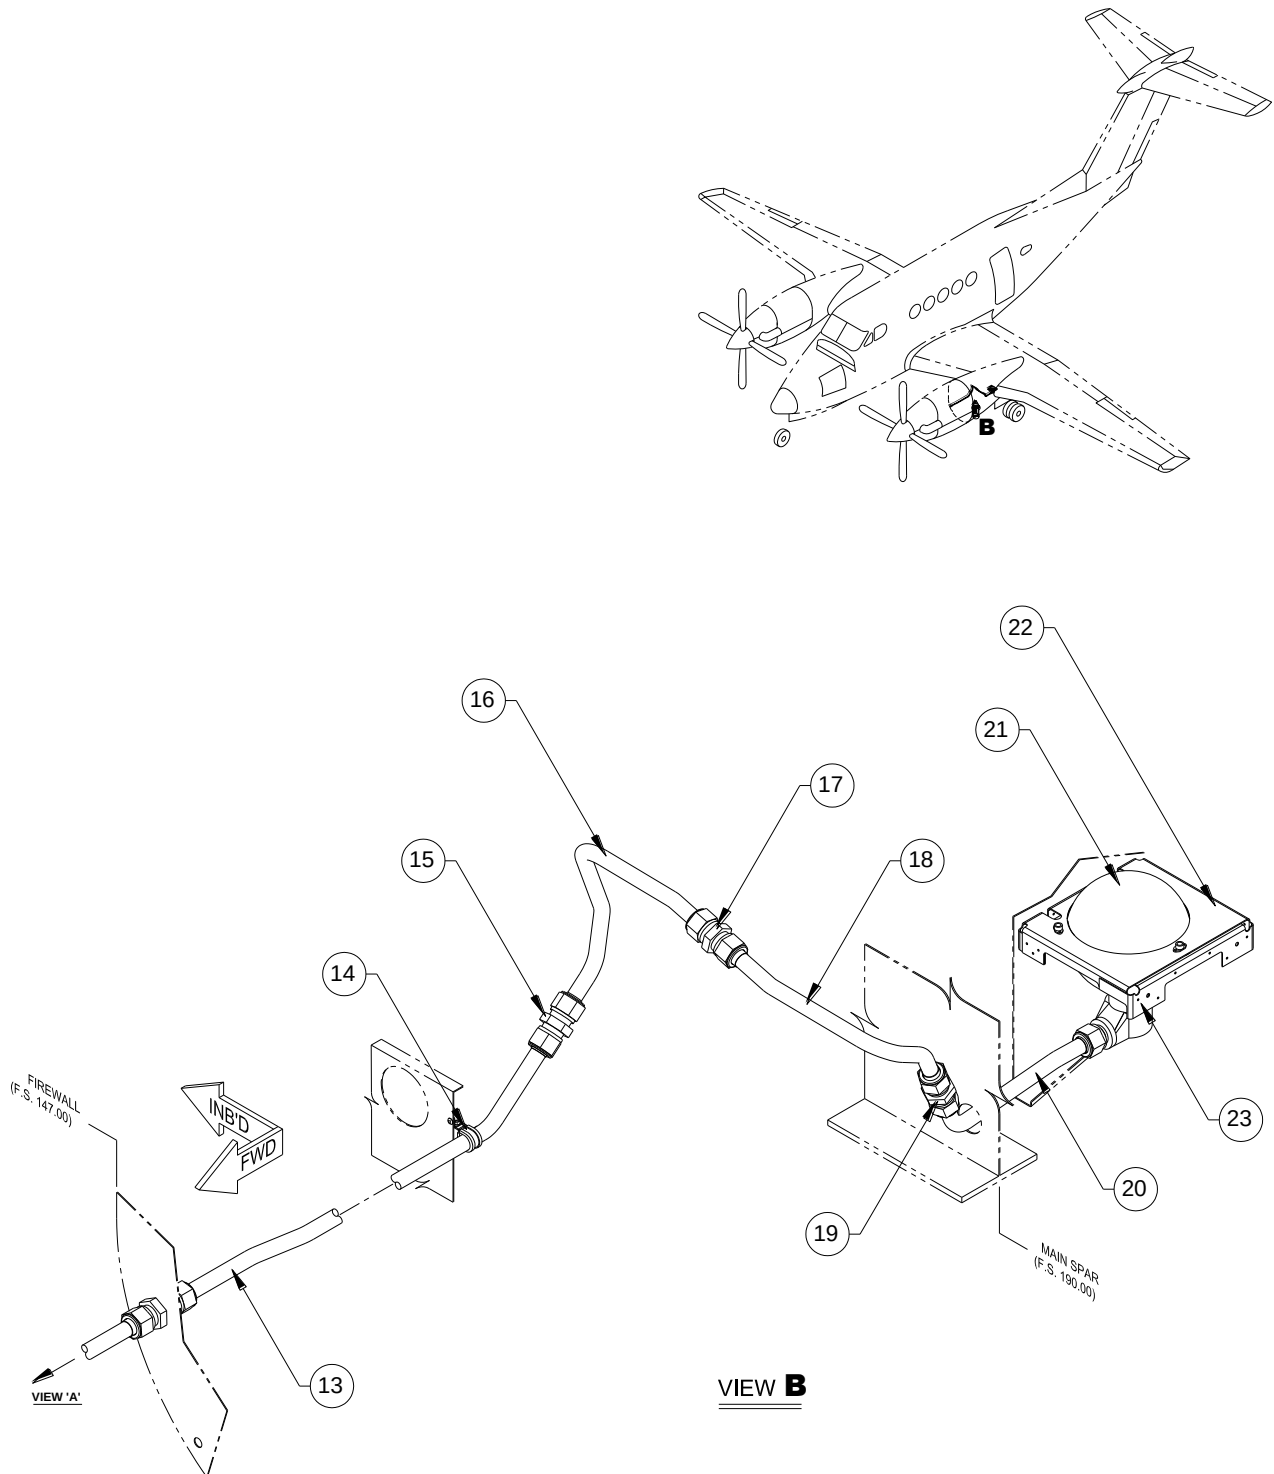


**FIGURE 20-00, ENGINE FIRE EXTINGUISHER
SHEET 2 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

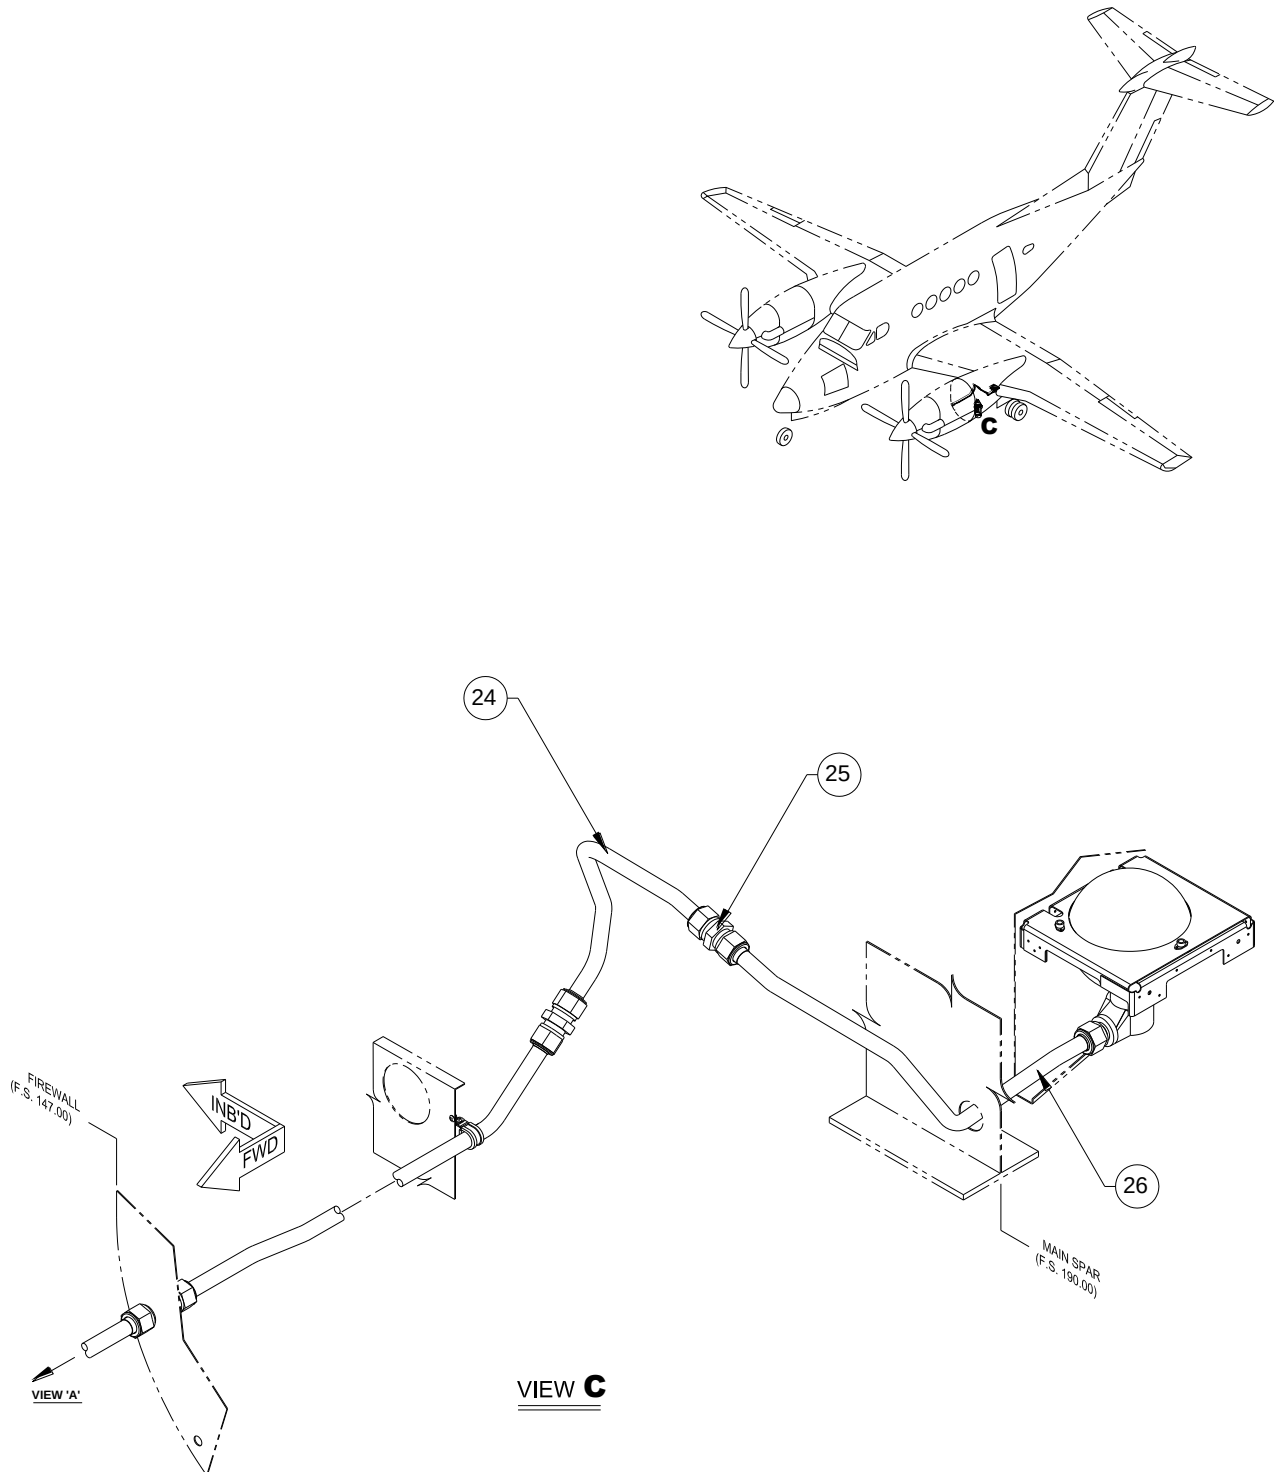


**FIGURE 20-00, ENGINE FIRE EXTINGUISHER
SHEET 3 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

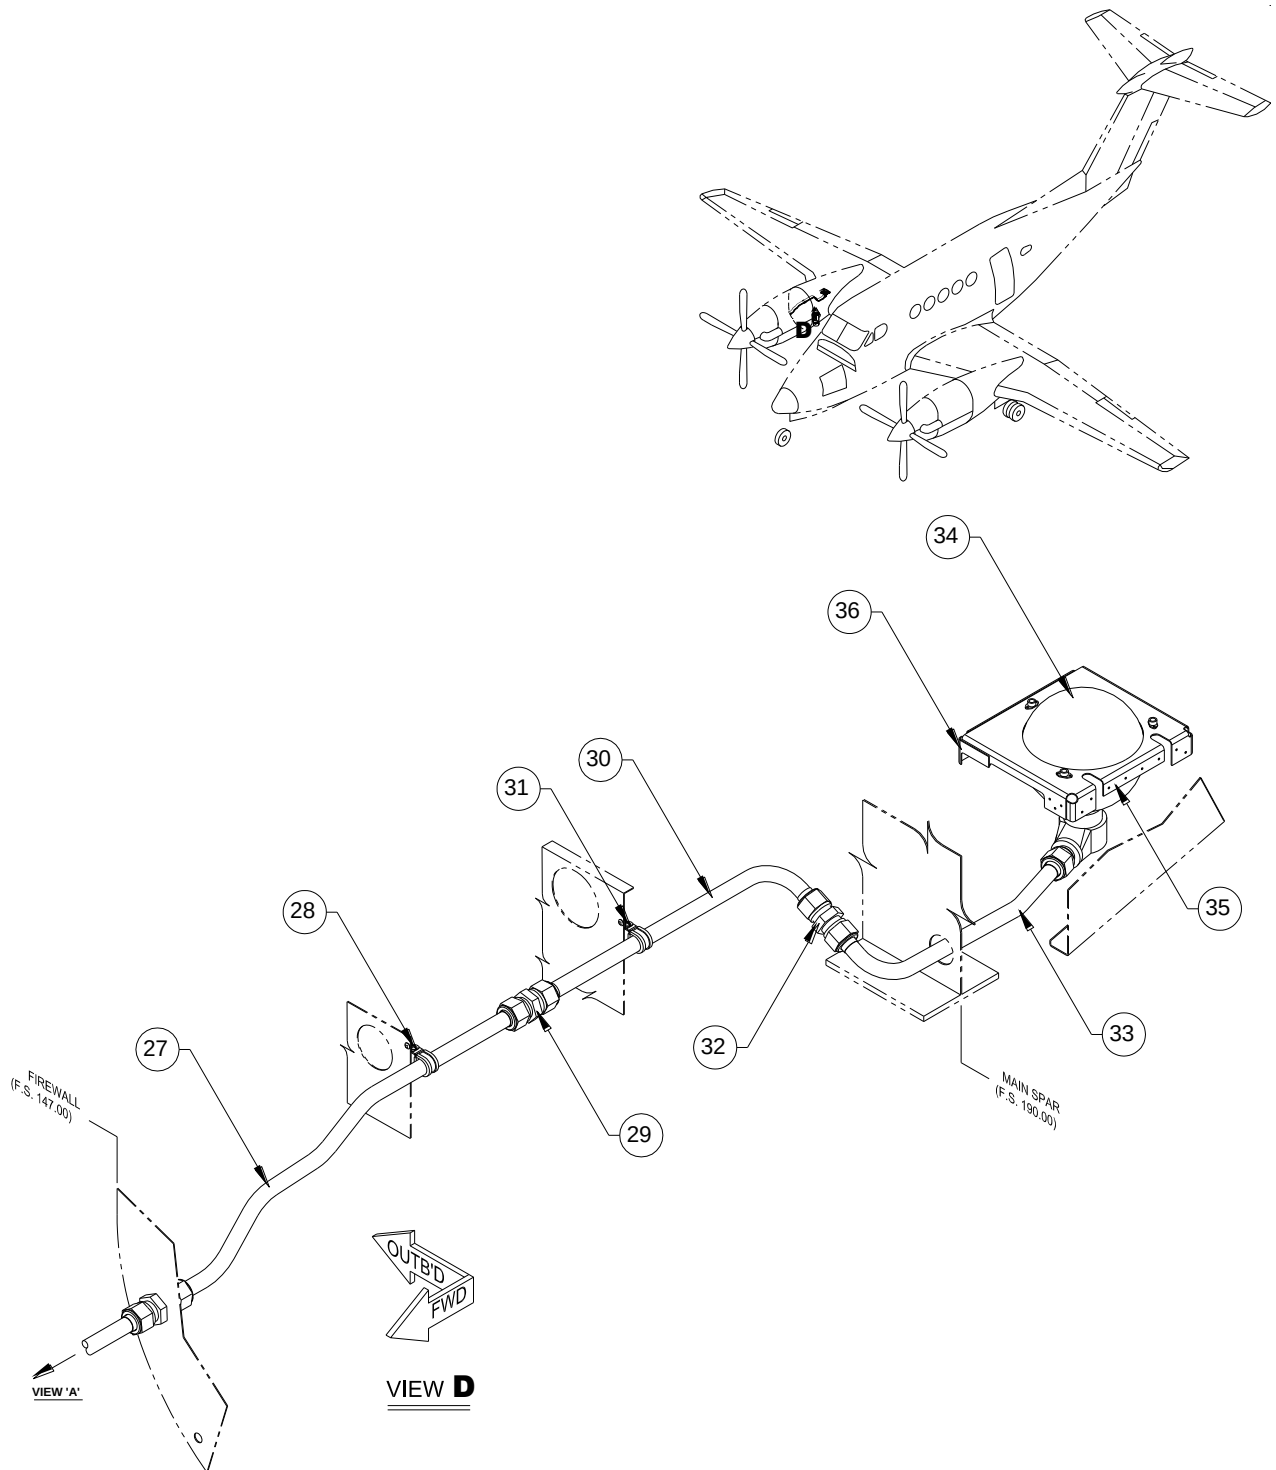

**FIGURE 20-00, ENGINE FIRE EXTINGUISHER
SHEET 4 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

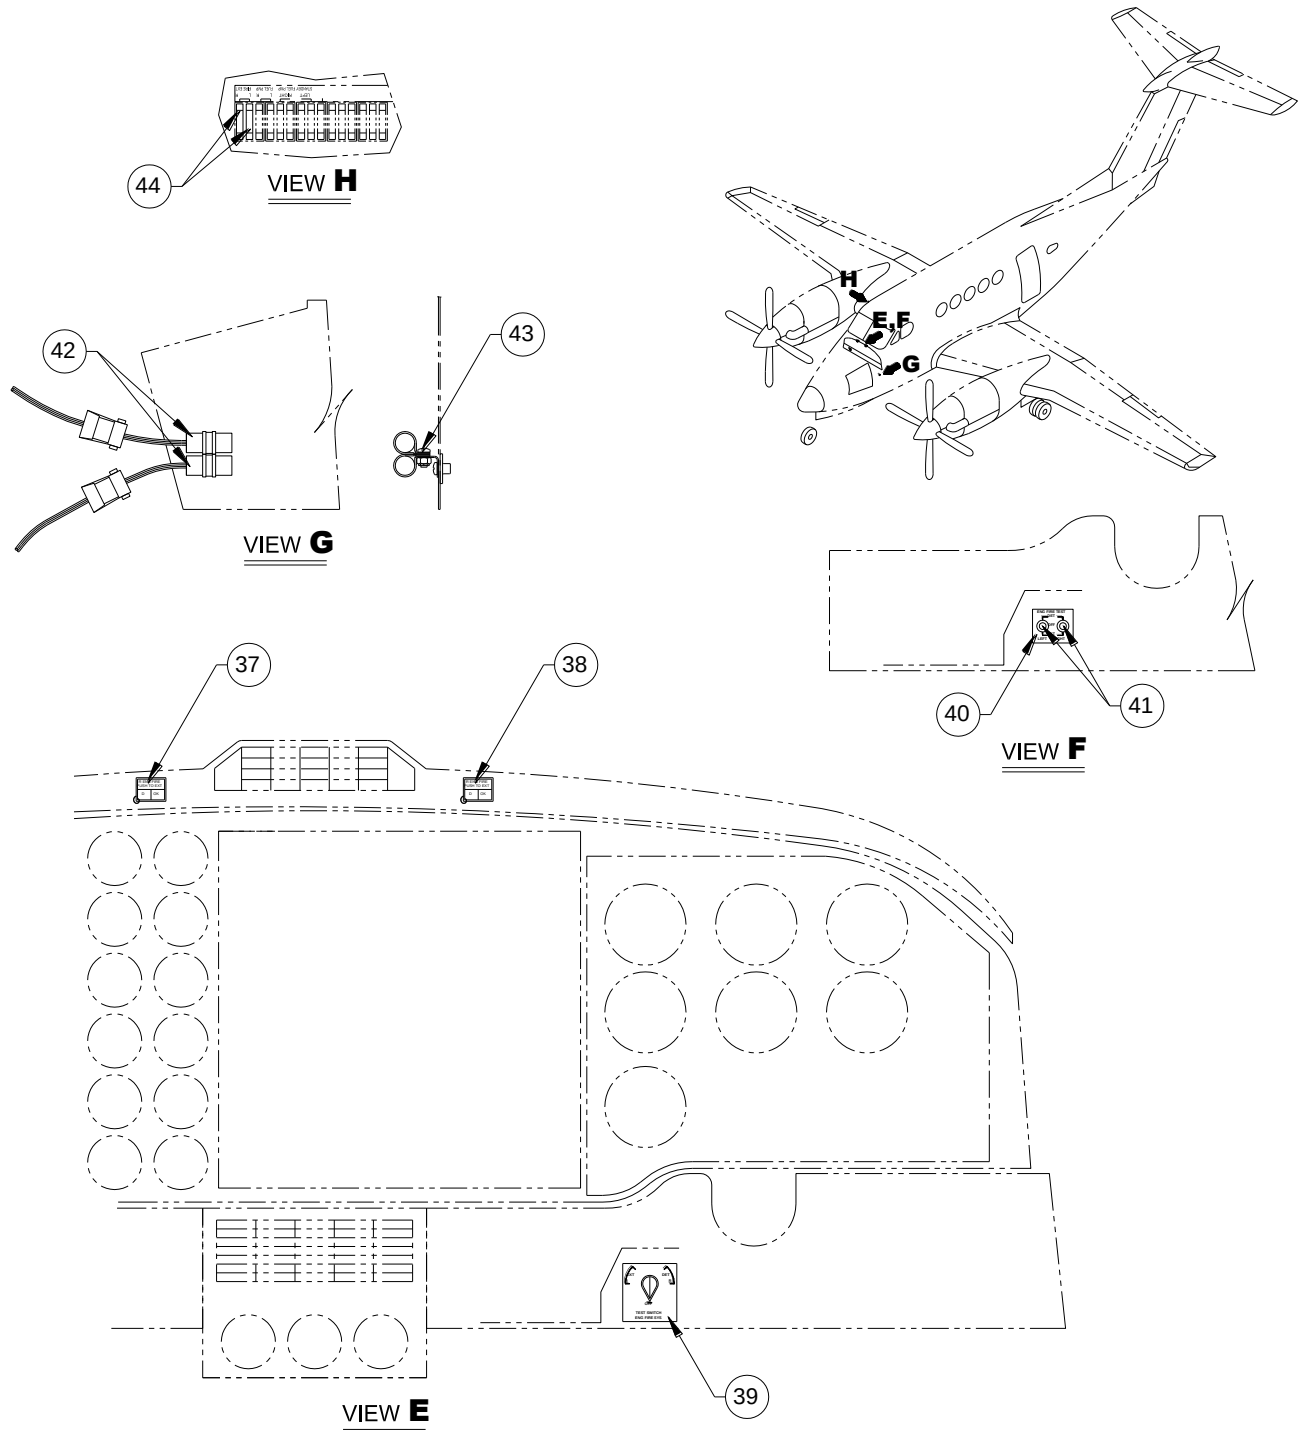

**FIGURE 20-00, ENGINE FIRE EXTINGUISHER
SHEET 5 OF 5**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1009-0000-1	INSTALLATION, ENGINE FIRE EXTINGUISHER	A	
	006-1009-0000-2	INSTALLATION, ENGINE FIRE EXTINGUISHER	B	
	006-1009-0000-3	INSTALLATION, ENGINE FIRE EXTINGUISHER	C	
1	006-1009-0002-1	. NOZZLE ASSEMBLY ATTACHING PARTS		2
2	006-1009-0012-1	. CLIP		1
	MS21122C8	. CLAMP		1
	MS35207-262	. SCREW		1
	AN960-10L	. WASHER		1
	MS21042L3	. NUT		1
3	006-1009-0012-2	. CLIP		1
	MS21122C4	. CLAMP		1
	MS35207-262	. SCREW		1
	AN960-10L	. WASHER		1
	MS21042L3	. NUT		1
		-----*-----		
4	AN837-8J	. BULKHEAD UNION		2
	006-1009-0012-3	. WASHER, AFT FACE		2
	006-1009-0012-4	. WASHER, FWD FACE		2
	AN924-8J	. NUT		2
5	156F001-8D0156	. HOSE ASSEMBLY		2
6	NAS1564K12-8	. REDUCER		2
	AN818-12J	. NUT		2
7	AN832-12J	. BULKHEAD UNION		2
	AN960-1716	. WASHER		2
	AN924-12J	. NUT		2
8	006-1009-0011-1	. NOZZLE ASSEMBLY		2
9	AN815-12J	. UNION		2
10	006-1009-0005-1	. TUBE ASSEMBLY ATTACHING PARTS		2
11	MS21919DG16	. CLAMP		1
	MS21919DG12	. CLAMP		1
	MS35207-264	. SCREW		1
	AN960-10L	. WASHER		1
	MS21042L3	. NUT		1
		-----*-----		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
12	AN832-12J	. BULKHEAD UNION		2
	AN960-1716	. WASHER		2
	AN924-12J	. NUT		2
13	006-1009-0010-1	. TUBE ASSEMBLY		1
		ATTACHING PARTS		
14	AN743-12	. BRACKET		1
	MS21919DG12	. CLAMP		1
	MS35207-262	. SCREW		2
	AN960-10L	. WASHER		2
	MS21042L3	. NUT		2
		-----*-----		
15	AN815-12D	. UNION		1
16	006-1009-0007-1	. TUBE ASSEMBLY		1
17	AN815-12D	. UNION		1
18	006-1009-0006-1	. TUBE ASSEMBLY		1
19	AN815-12D	. UNION		1
20	006-1009-0008-1	. TUBE ASSEMBLY		1
21	30301102	. FIRE EXTINGUISHER CYLINDER		1
		ATTACHING PARTS		
	AN5-4A	. BOLT		3
		-----*-----		
22	006-1009-0001-1	. MOUNT ASSEMBLY, LH		1
23	006-1009-0001-5	. SUPPORT BRACKET		1
24	101-570013-5	. TUBE ASSEMBLY (ALTERNATE)	A	1
25	AN815-12D	. UNION (ALTERNATE)	A	1
26	101-570012-5	. TUBE ASSEMBLY (ALTERNATE)	A	1
27	006-1009-0009-1	. TUBE ASSEMBLY		1
		ATTACHING PARTS		
28	AN743-12	. BRACKET		1
	MS21919DG12	. CLAMP		1
	MS35207-262	. SCREW		2
	AN960-10L	. WASHER		2
	MS21042L3	. NUT		2
		-----*-----		
29	AN815-12D	. UNION		1



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
30	006-1009-0003-1	. TUBE ASSEMBLY ATTACHING PARTS		1
31	AN743-12	. BRACKET		1
	MS21919DG12	. CLAMP		1
	MS35207-262	. SCREW		2
	AN960-10L	. WASHER		2
	MS21042L3	. NUT -----*-----		2
32	AN815-12D	. UNION		1
33	006-1009-0004-1	. TUBE ASSEMBLY		1
34	30301102	. FIRE EXTINGUISHER CYLINDER ATTACHING PARTS		1
	AN5-4A	. BOLT -----*-----		3
35	006-1009-0001-2	. MOUNT ASSEMBLY, RH		1
36	006-1009-0001-5	. SUPPORT BRACKET		1
37	006-1011-0004-201	. SWITCH ASSEMBLY, LH		1
	006-1011-0004-203	. SWITCH ASSEMBLY (ALTERNATE)		1
	006-1011-0004-301	. SWITCH ASSEMBLY, LH	BC	1
	10E534	. SWITCH GUARD		1
	10H534	. SWITCH GUARD (ALTERNATE)		1
		. 30 GAUGE COPPER WIRE		A/R
38	006-1011-0004-202	. SWITCH ASSEMBLY, RH		1
	006-1011-0004-203	. SWITCH ASSEMBLY (ALTERNATE)		1
	006-1011-0004-302	. SWITCH ASSEMBLY, RH	BC	1
	10E534	. SWITCH GUARD		1
	10H534	. SWITCH GUARD (ALTERNATE)		1
		. 30 GAUGE COPPER WIRE		A/R
39	006-1001-0001-9	. PLACARD	E	1
	006-1001-0001-10	. PLACARD	F	1
40	006-1001-0001-11	. PLACARD	C	1
41	13AT4-S	. PLACARD	C	2



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
42	33370005	. MODULE ASSEMBLY (ALTERNATE) ATTACHING PARTS		2
43	AN743-12	. BRACKET		1
	MS21122C13	. CLAMP		2
	MS35207-262	. SCREW		2
	AN960-10L	. WASHER		1
	MS21042L3	. NUT		1
		-----*-----		
44	MDA5	. FUSE	D	2
	A	BB0001 – BB1483, BB1485; BL0001 – BL0140; BT0001 – BT0038; BN0001 – BN0004		
	B	BB1484, BB1486 – BB1977; BB1979 – BB1987; BL0141 – BL0151; BT0039 – BT0046; BN0005 – BN0009		
	C	BB1978 – BB1978, BB1988 & UP; BL0152 & UP; BT0047 & UP; BN0010 & UP; BY001 & UP; BZ-1 & UP		
	D	BB0003 – BB0005; BB0734 – BB1095, BB1097; BT0023, BT0024, BT0029; BL0001 – BL0057, BN0001		
	E	BB1439, BB1444 – BB1977, BB1979 – BB1987; BL0139 – BL0151; BT0035 – BT0046; BN0005 – BN0009; A/C WITH BEECHCRAFT KIT 101-9077		
	F	BB0001 - BB1438, BB1440 – BB1443; BL0001 – BL0138, BT0001 – BT0034, BN0001 – BN0004; A/C WITHOUT BEECHCRAFT KIT 101-9077		
		“END”		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

CHAPTER 27 – FLIGHT CONTROLS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION	FIGURE	EFFECTIVITY
STALL WARNING STALL WARNING (ICE MODE)	27-30	00	
ELEVATOR TRIM TRIM OUT OF RANGE WARNING	27-31	00	



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**



**27-30-00
STALL WARNING (ICE MODE)**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

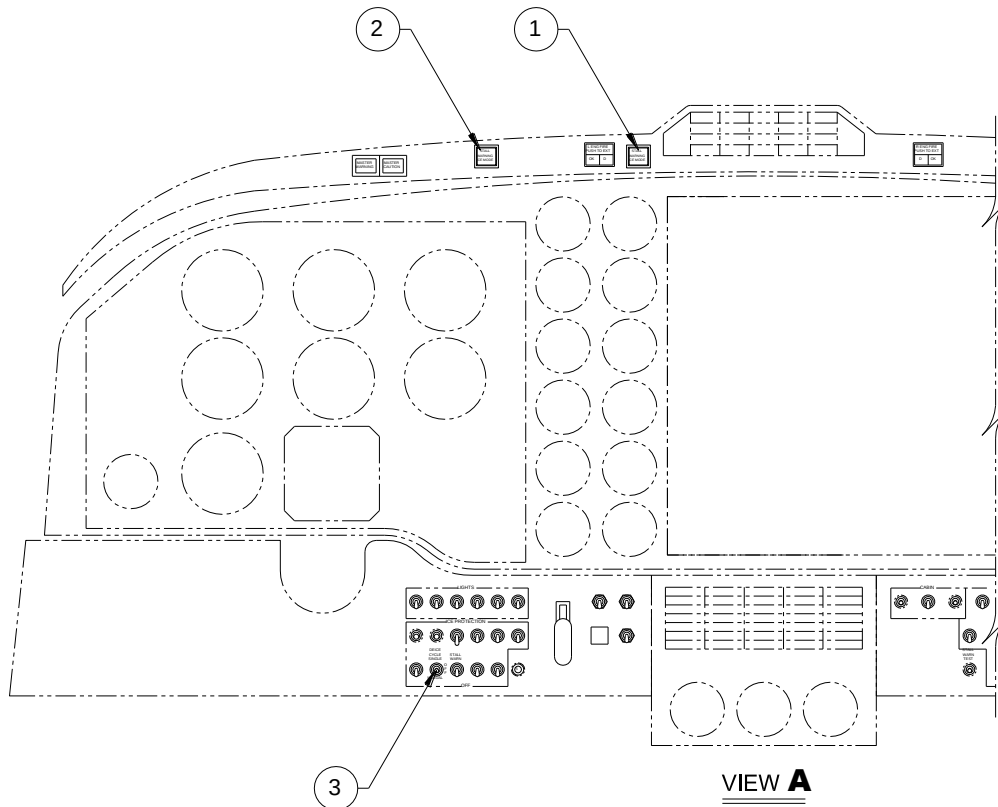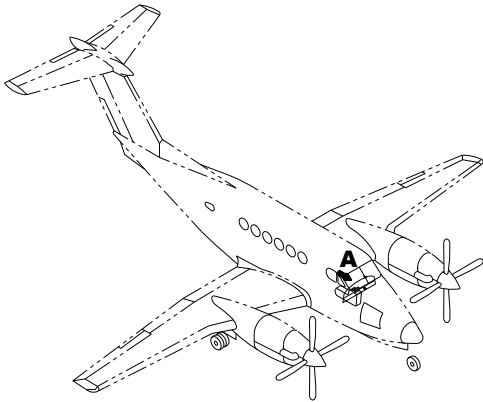


**FIGURE 30-00, STALL WARNING (ICE MODE)
SHEET 1 OF 4**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

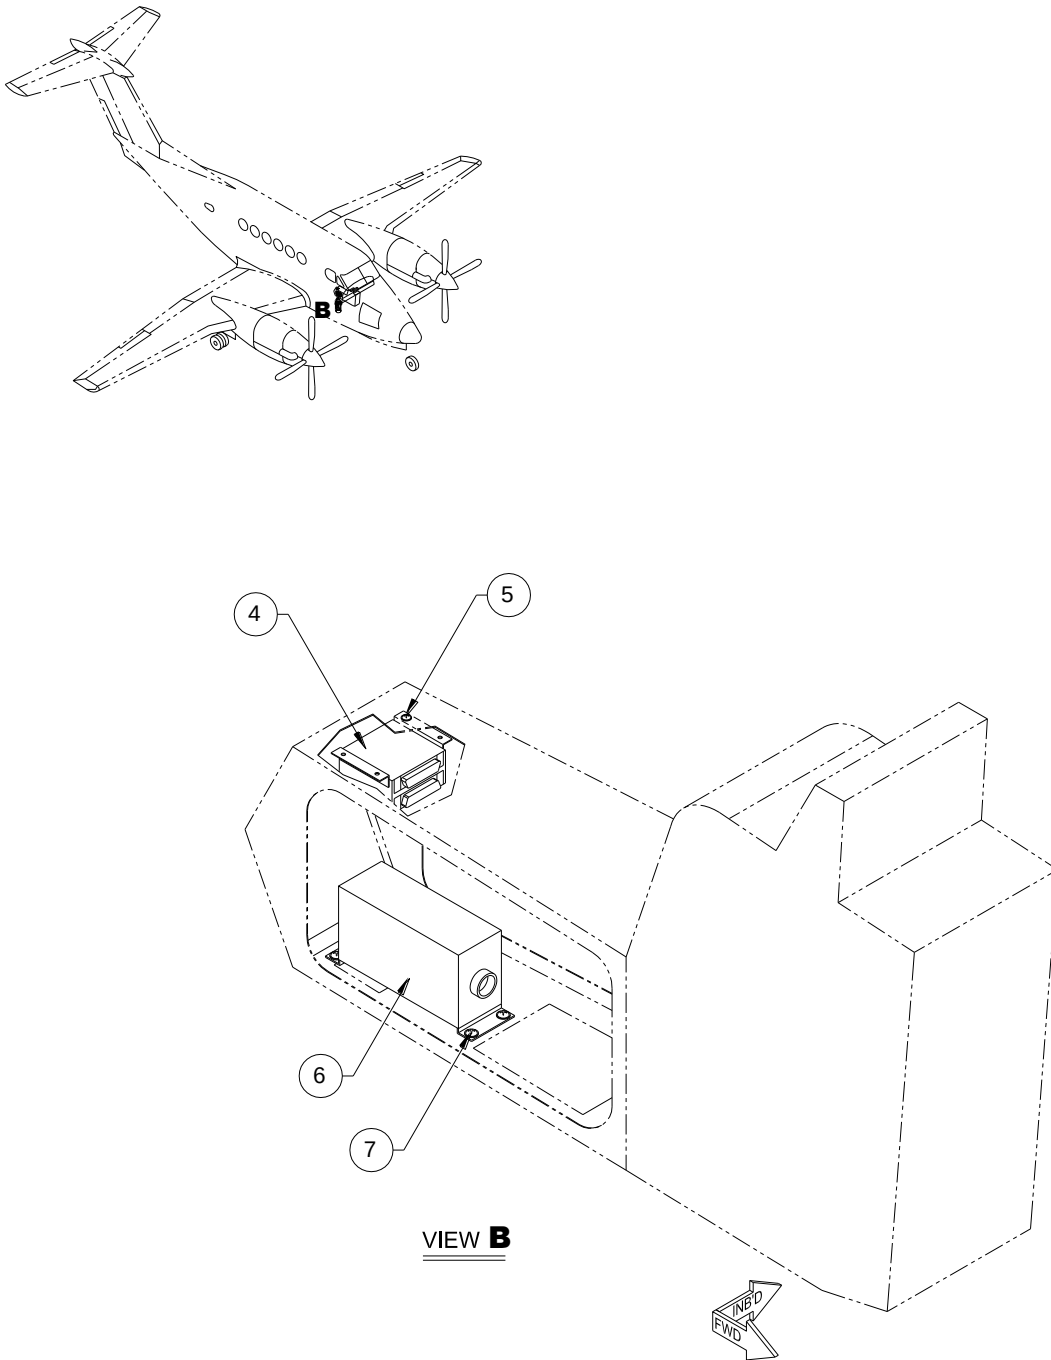


**FIGURE 30-00, STALL WARNING (ICE MODE)
SHEET 2 OF 4**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

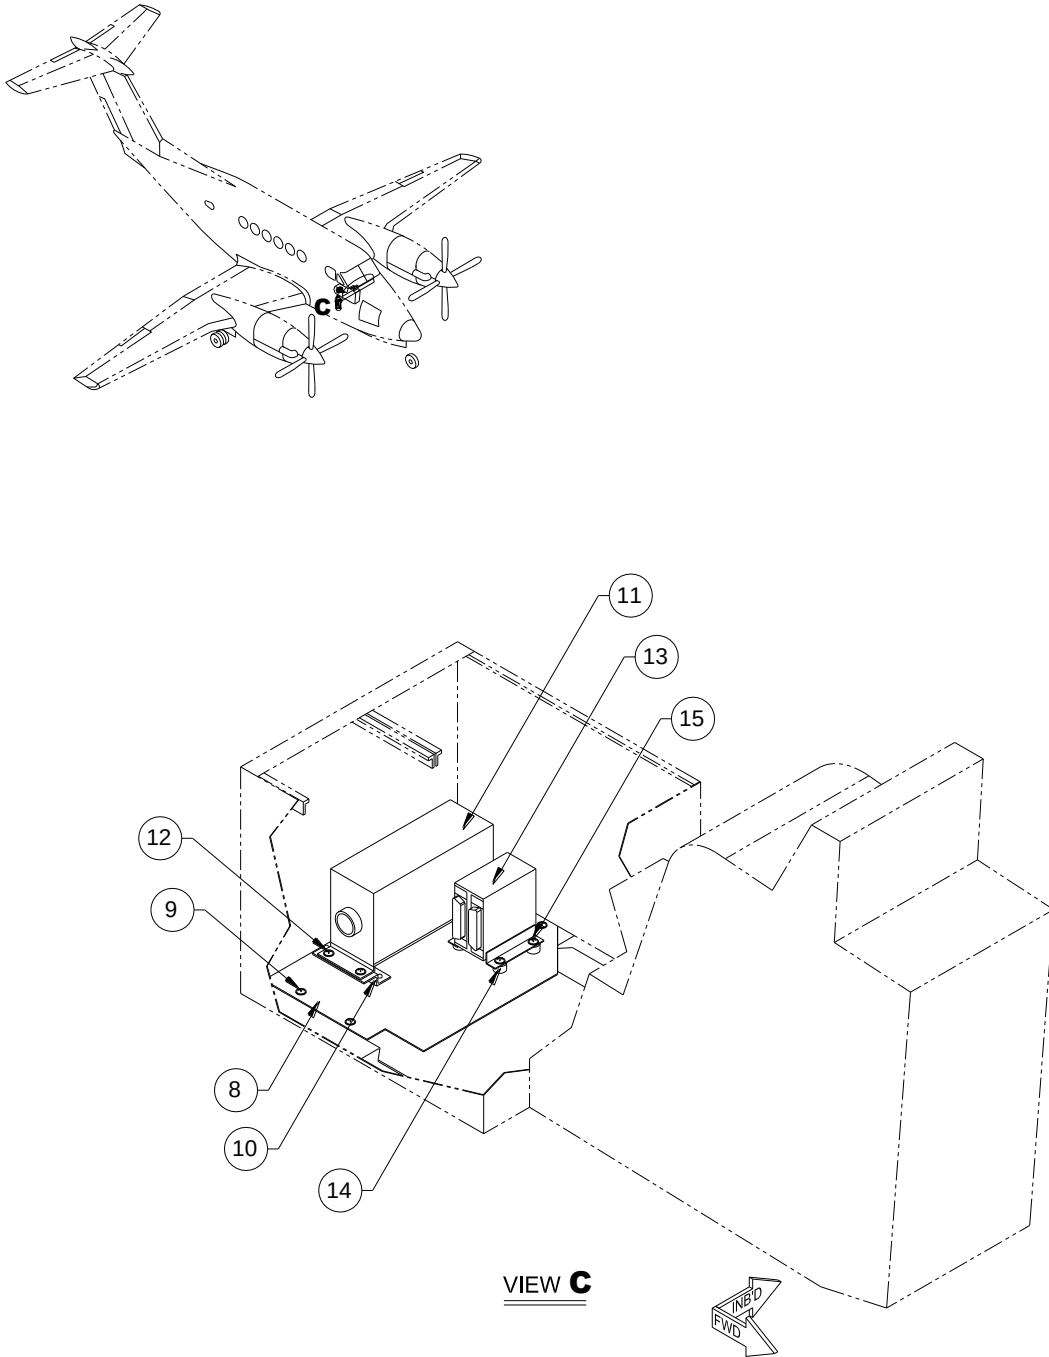

**FIGURE 30-00, STALL WARNING (ICE MODE)
SHEET 3 OF 4**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

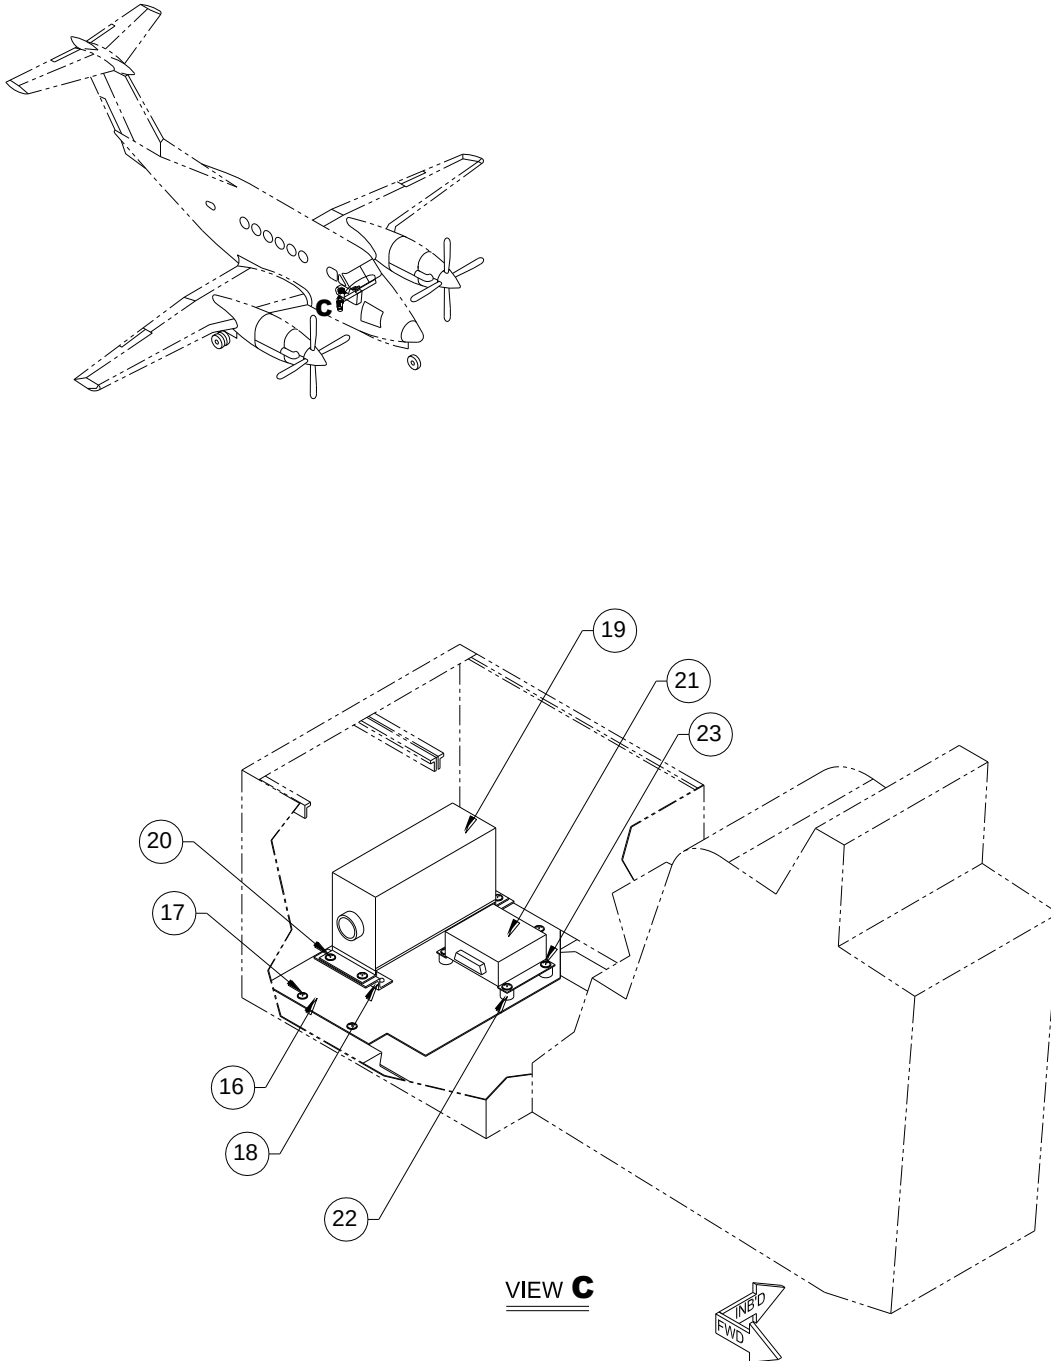

**FIGURE 30-00, STALL WARNING (ICE MODE)
SHEET 4 OF 4**



HALO 250/HALO 275 SUPER KING AIR 200 SERIES ILLUSTRATED PARTS CATALOG

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1010-0000-1	INSTALLATION, ICE MODE STALL WARNING	A	
	006-1010-0000-2	INSTALLATION, ICE MODE STALL WARNING	B	
	006-1010-0000-3	INSTALLATION, ICE MODE STALL WARNING	C	
	006-1010-0000-4	INSTALLATION, ICE MODE STALL WARNING	D	
1	006-1010-0005-402	. SWITCH ASSEMBLY		1
2	006-1010-0005-402	. SWITCH ASSEMBLY (ALT. LOCATION)	E	1
3	MS24524-27	. SWITCH (OBSOLETE)		1
4	MD41-248	. RELAY ASSEMBLY	A	1
	AK-950-R24-28	. RELAY ASSEMBLY (OBSOLETE)		1
		ATTACHING PARTS		
5	AN525-832R6	. SCREW		4
	NAS1149FN832P	. WASHER		4
	MS21044N08	. NUT		4
		-----*-----		
6	C-06106-1	. LIFT COMPUTER	A	1
	101-380005-41	. LIFT COMPUTER (ALTERNATE)	A	1
		ATTACHING PARTS		
7	AN525-832R6	. SCREW		4
	NAS1149FN832P	. NUT PLATE		4
	MS21044N08	. NUT		4
		-----*-----		
	006-1010-0002-1	. PANEL ASSEMBLY (OBSOLETE)		1
8	006-1010-0006-2	. PANEL ASSEMBLY	BD	1
		ATTACHING PARTS		
9	AN525-832R6	. SCREW	BD	4
	NAS1149FN832P	. NUT PLATE	BD	4
	MS21044N08	. NUT	BD	4
		-----*-----		
10	006-1010-0003-1	. ZEE ANGLE	BD	2
		ATTACHING PARTS		
	CR3213-4-02	. RIVET	BD	2
		-----*-----		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
11	C-06106-1	. LIFT COMPUTER (ALT. LOCATION)	BD	1
	101-380005-41	. LIFT COMPUTER (ALTERNATE)	BD	1
		ATTACHING PARTS		
12	AN525-832R6	. SCREW	BD	4
		-----*-----		
13	MD41-248	. RELAY ASSEMBLY	BD	1
		ATTACHING PARTS		
14	006-1010-0005-1	. SPACER	BD	4
15	AN525-832R12	. SCREW	BD	4
		-----*-----		
16	006-1010-0004-1	. PANEL ASSEMBLY	C	1
		ATTACHING PARTS		
17	AN525-832R6	. SCREW	C	4
	NAS1149FN832P	. NUT PLATE	C	4
	MS21044N08	. NUT	C	4
		-----*-----		
18	006-1010-0003-1	. ZEE ANGLE	C	2
		ATTACHING PARTS		
	CR3213-4-02	. RIVET	C	2
		-----*-----		
19	C-06106-1	. LIFT COMPUTER (ALT. LOCATION)	C	1
	101-380005-41	. LIFT COMPUTER (ALTERNATE)	C	1
		ATTACHING PARTS		
20	AN525-832R6	. SCREW	C	4
		-----*-----		
21	AK-950-R24-28	. RELAY ASSEMBLY (OBSOLETE)	C	1
		ATTACHING PARTS		
22	006-1010-0005-1	. SPACER	C	4
23	AN525-832R12	. SCREW	C	4
		-----*-----		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	A	KING AIR 200, 200C, 200T, 200CT, A200, A200C, A200CT (NARROW PEDESTAL)		
	B	KING AIR B200, B200C, B200CT, B200CT, BY0001 – BY0206, BY0208 – BY0238 BY0240 – BY0249		
	C	BB1790		
	D	BY0207, BY0239, BY0250 & UP BZ0001 & UP		
	E	INSTALLATION PRIOR TO MARCH 19, 2013		
		“END”		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**27-31-00
TRIM OUT OF RANGE WARNING**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

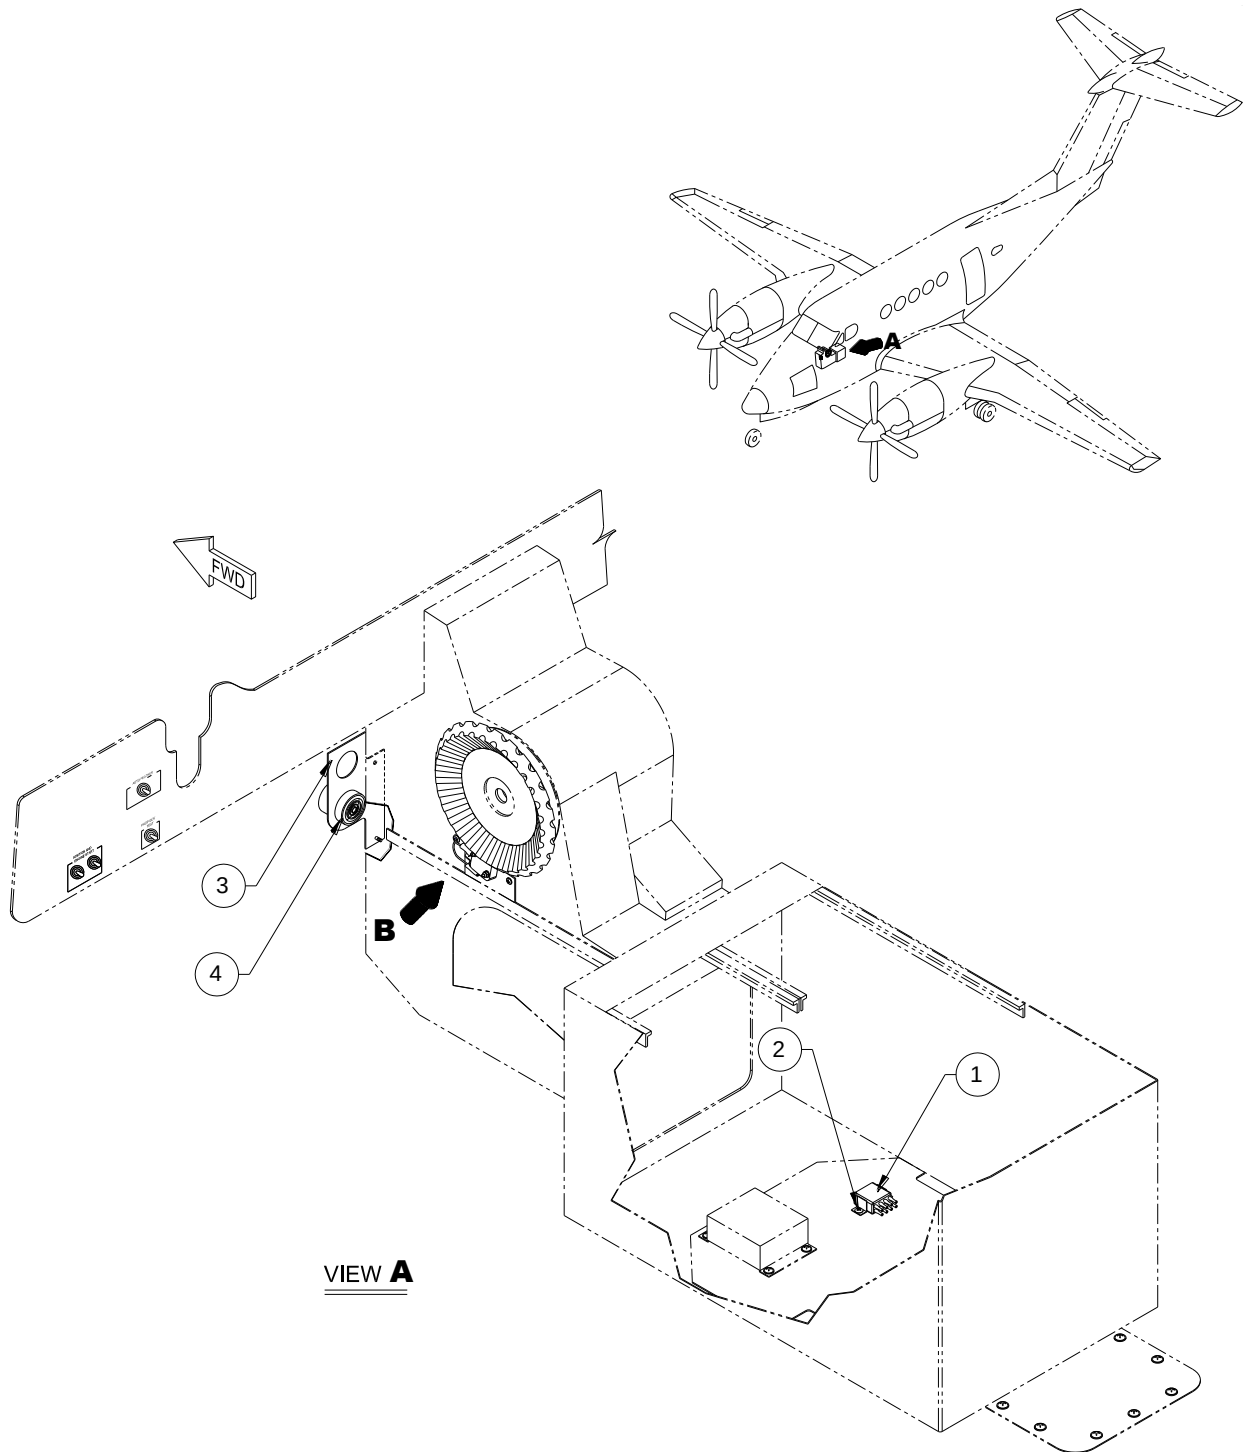

**FIGURE 31-00, TRIM OUT OF RANGE
SHEET 1 OF 2**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

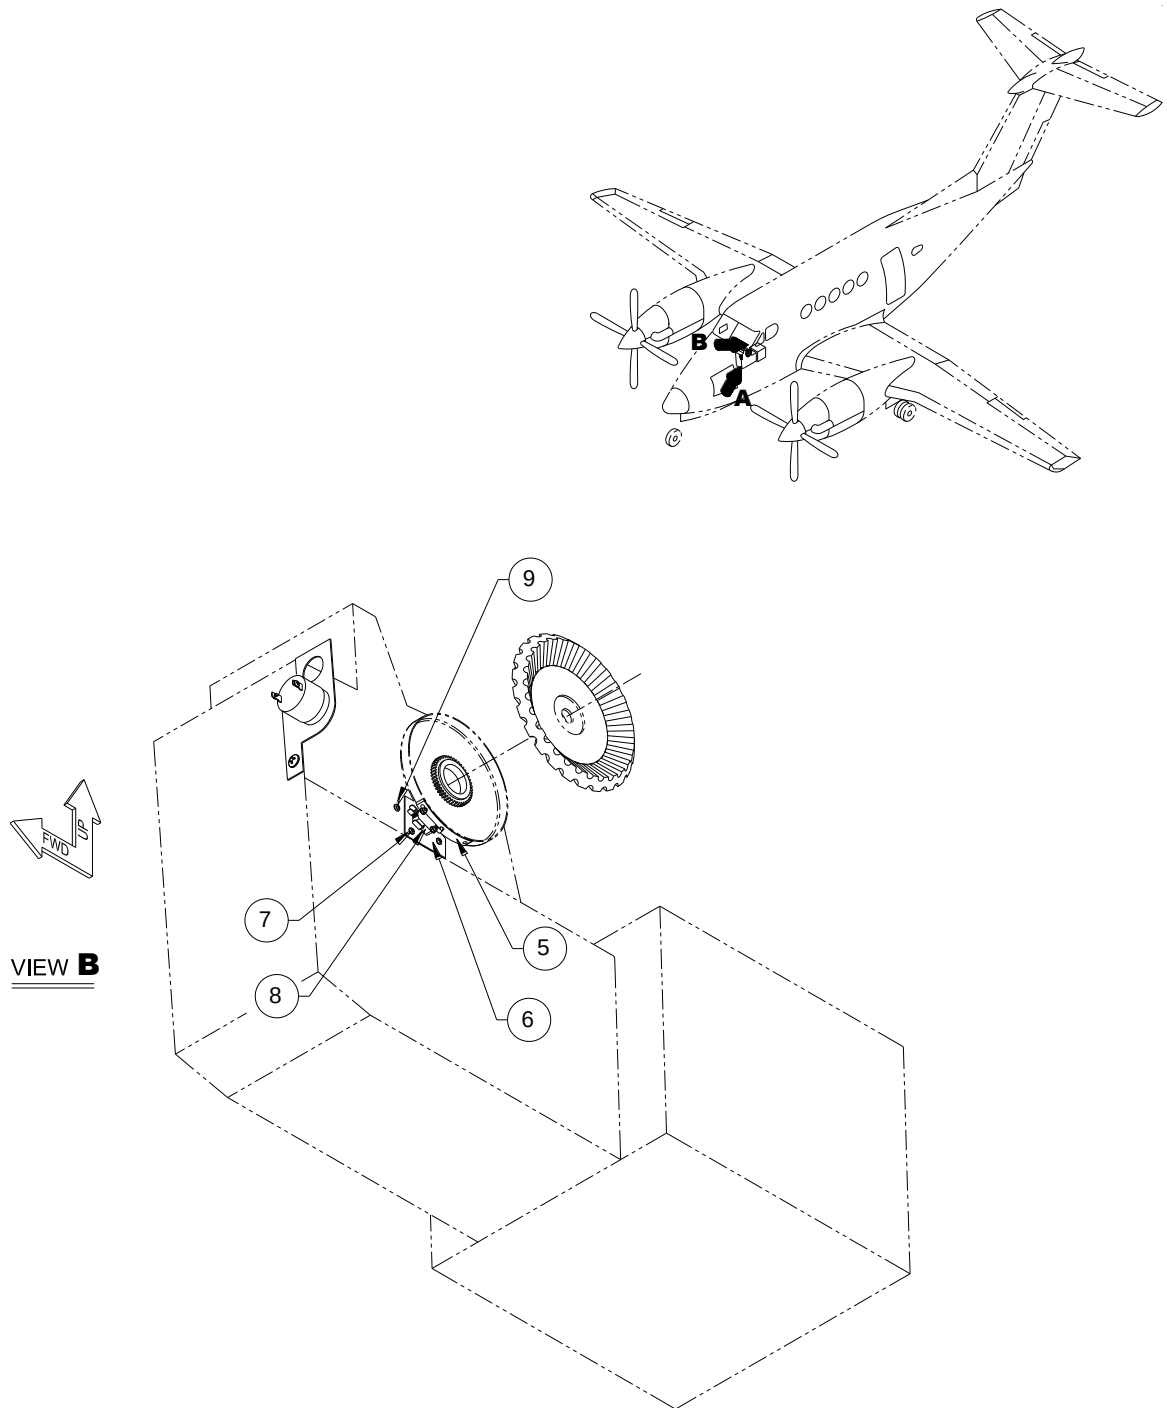

**FIGURE 31-00, TRIM OUT OF RANGE
SHEET 2 OF 2**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1006-0000-1	INSTALLATION, TRIM OUT OF RANGE WARNING	A	
	006-1010-0000-2	INSTALLATION, TRIM OUT OF RANGE WARNING	B	
1	M83536/10-026M	. RELAY		1
		ATTACHING PARTS		
2	AN526-632R5	. SCREW		2
	NAS1149FN616P	. WASHER		2
	MS21042L06	. NUT		2
		-----*-----		
3	006-1006-0002-1	. HORN BRACKET		1
4	SC628	. HORN		1
5	006-1006-0001-1	. TRIGGER PLATE	A	1
	006-1006-0001-5	. TRIGGER PLATE	B	1
6	006-1006-0001-2	. PLATE ASSEMBLY		1
		ATTACHING PARTS		
7	AN526-632R7	. SCREW		3
	MS35333-37	. LOCK WASHER		3
	NAS1329A06-75	. RIVET NUT		3
		-----*-----		
8	006-1010-0006-2	. . LEVER SWITCH		1
9	MS35489-143	. GROMMET		1
	MS35489-2	. GROMMET (ALTERNATE)		1
	MS21266-1N	. GROMMET		A/R
	A	BB1833 & PRIOR; BB1835 - BB1842; BL0147 & PRIOR		
	B	BB1834, BB1843 & UP; BL00148 & UP BY0001 & UP; BZ0001 & UP		
		"END"		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

CHAPTER 31 – INSTRUMENTS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION	FIGURE	EFFECTIVITY
CENTRAL WARNING			
OVERSPEED WARNING (S/N BB0877, BB1194, BB1278, BB1681, BL0041)	31-50	10	
OVERSPEED WARNING	31-50	11	



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**31-50-10
OVERSPEED WARNING
(S/N BB0877, BB1194, BB1278, BB1681, BL0041)**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

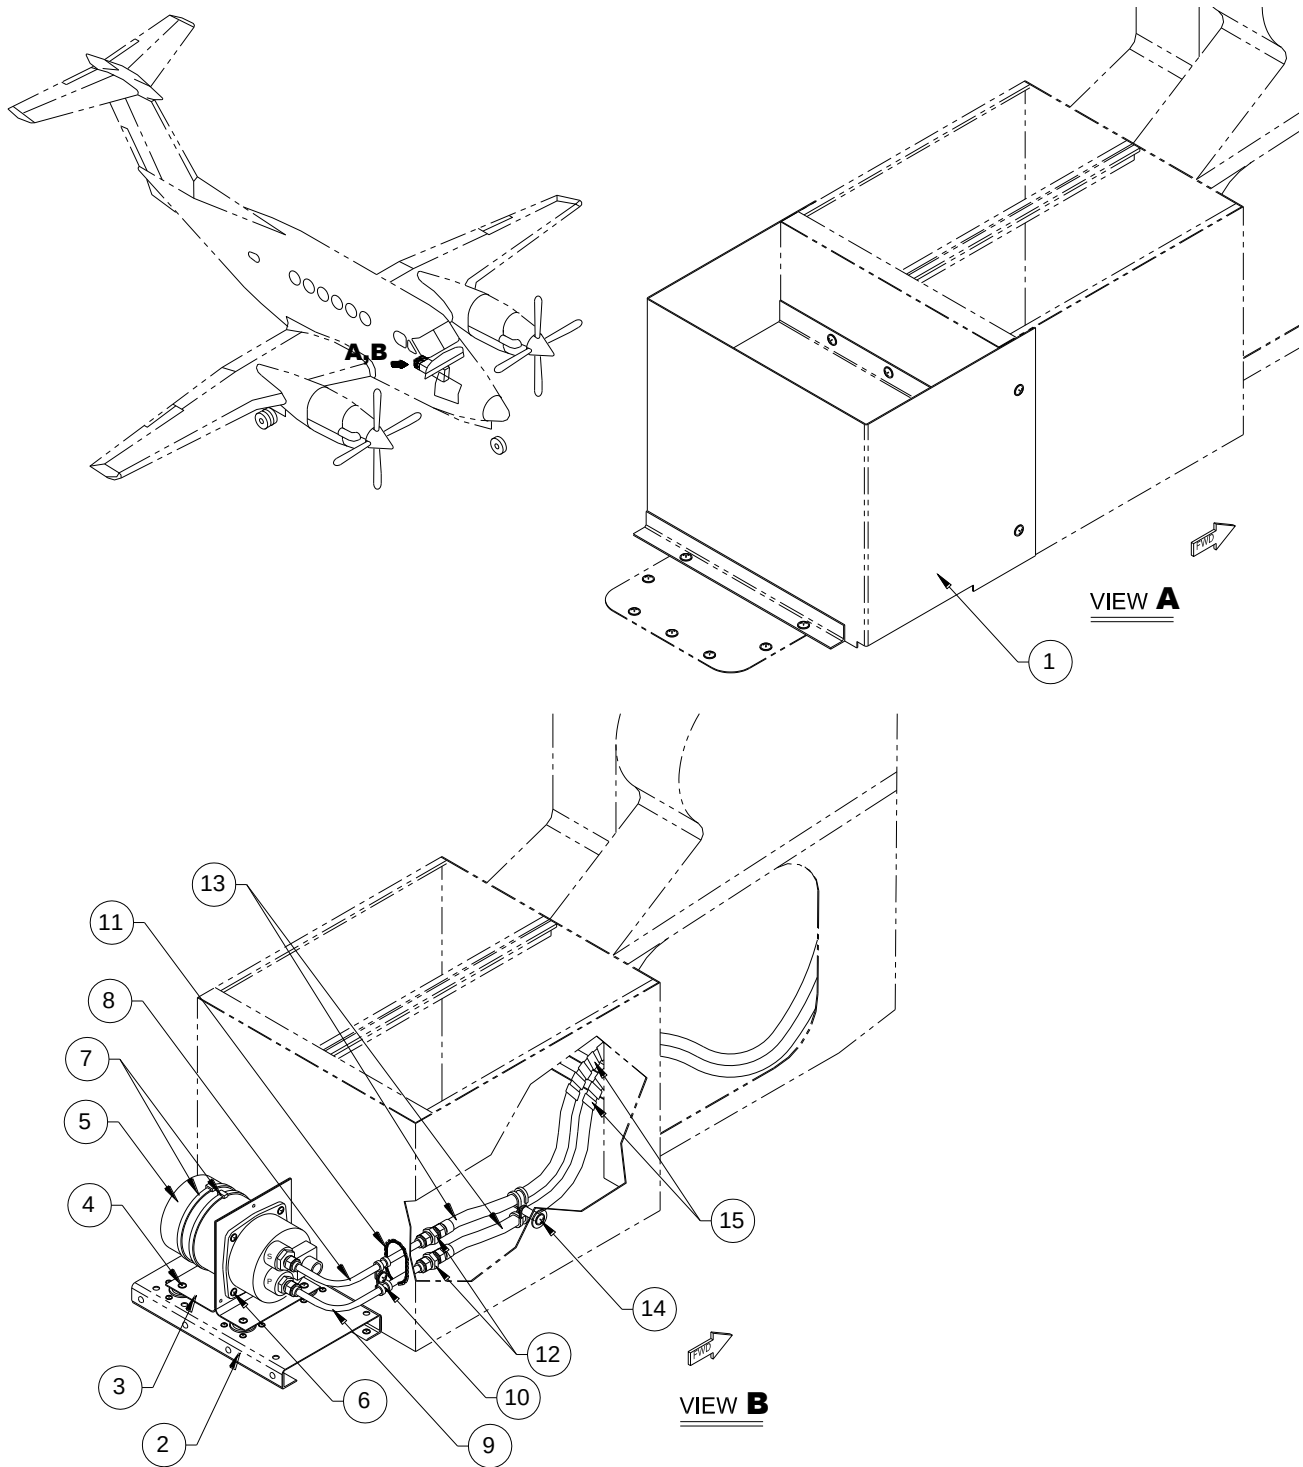


**FIGURE 50-10, OVERSPEED WARNING
SHEET 1 OF 3**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

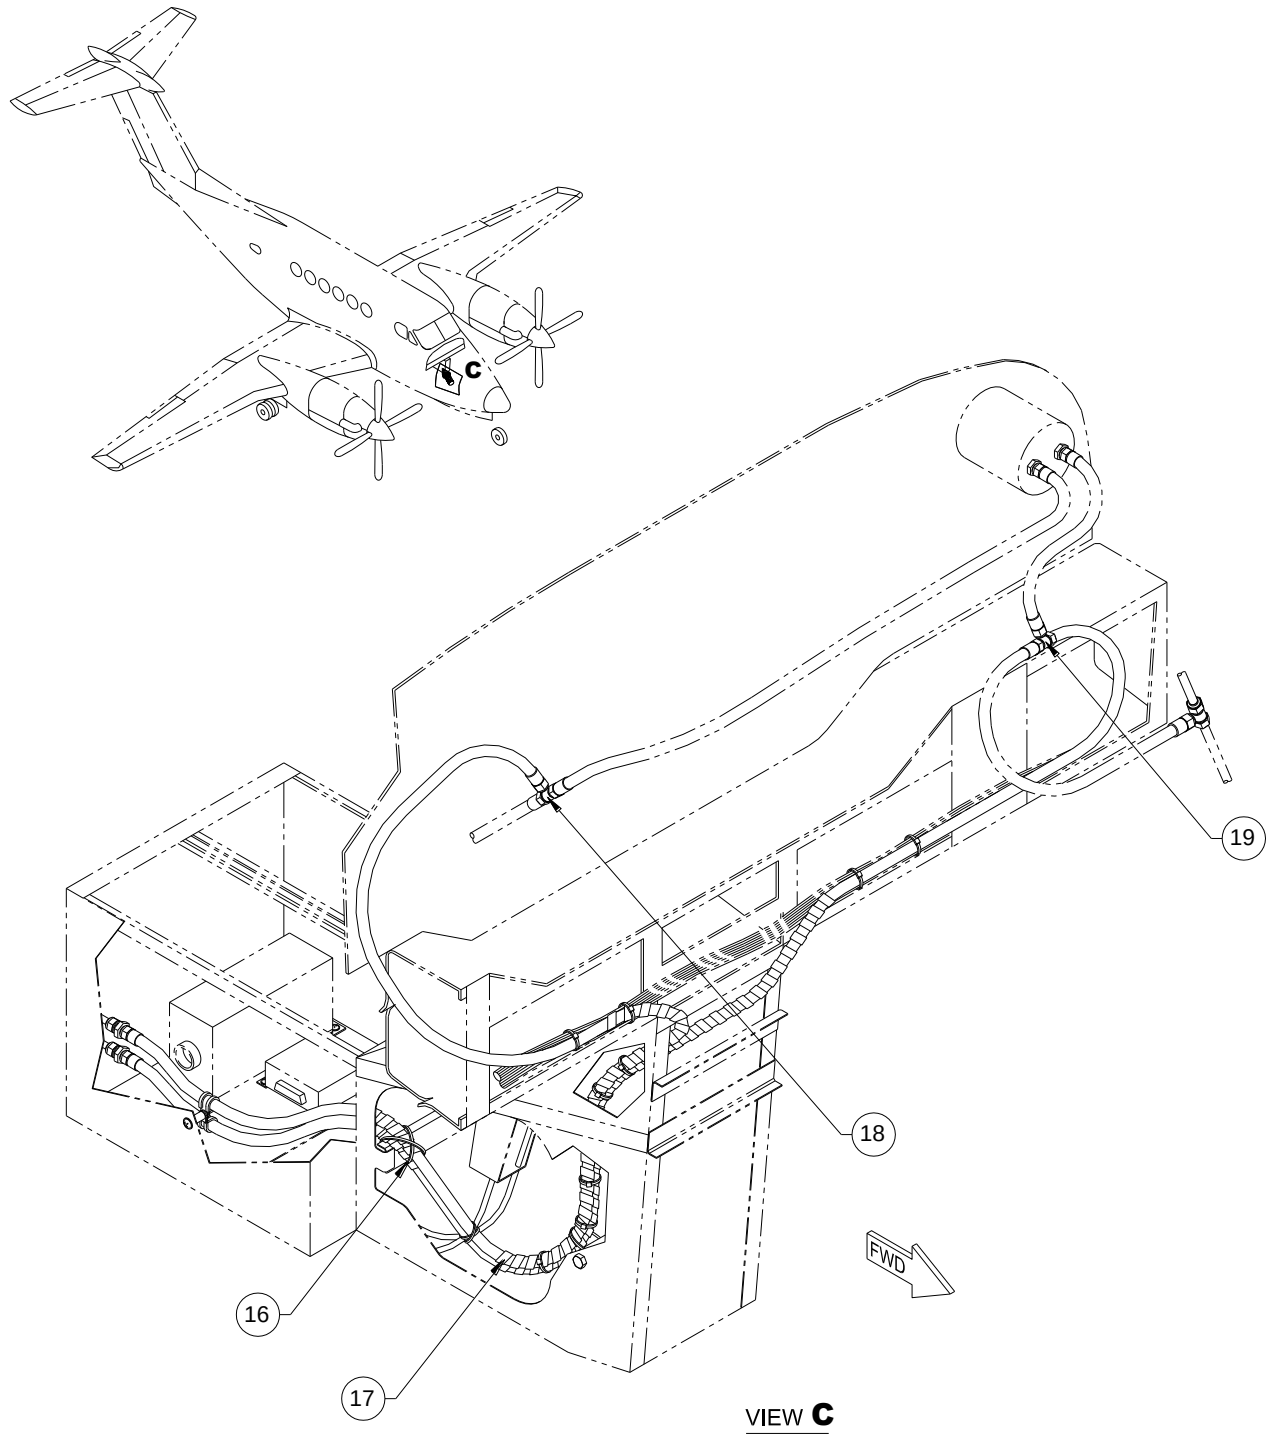

**FIGURE 50-10, OVERSPEED WARNING
SHEET 2 OF 3**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

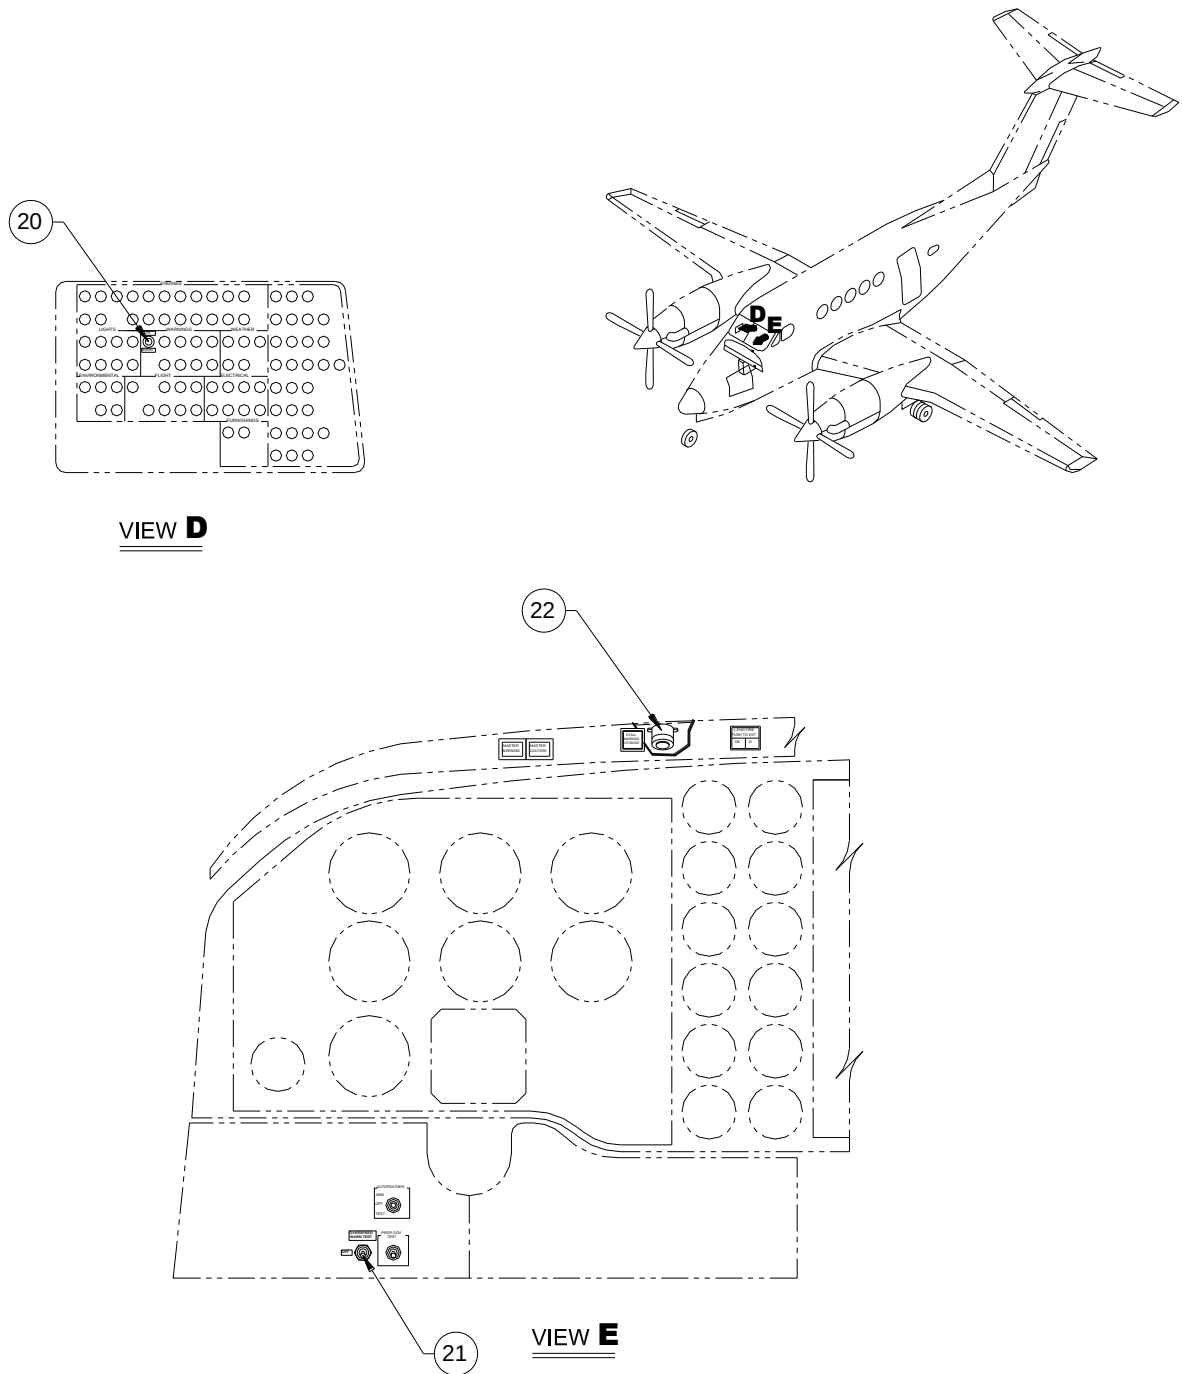

**FIGURE 50-10, OVERSPEED WARNING
SHEET 3 OF 3**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1002-0000-1	INSTALLATION, OVERSPEED WARNING		
1	006-1002-0003-1	. BOX ASSEMBLY		1
2	006-1002-0001-1	. CHANNEL ASSEMBLY		1
3	006-1002-0002-1	. SUPPORT ASSEMBLY		1
		ATTACHING PARTS		
4	MS27039-0812	. SCREW		4
	AN960-8L	. WASHER		4
	MS21042L08	. NUT		4
		-----*-----		
5	101-380081-1	. OVERSPEED WARNING SWITCH		1
		ATTACHING PARTS		
6	MS27039-0810	. SCREW		4
	AN960-8L	. WASHER		4
	MS21042L08	. NUT		4
7	MS3367	. WIRE TIE		2
		-----*-----		
8	006-1002-0004-1	. TUBE ASSEMBLY		1
	AN919-3D	. REDUCER		1
	MS28778-5	. O-RING		1
9	006-1002-0004-1	. TUBE ASSEMBLY		1
	AN815-4D	. UNION		1
	MS28778-4	. O-RING		1
10	MS21919-DG4	. CLAMP		2
		ATTACHING PARTS		
	MS27039-1-08	. . SCREW		1
	MS21042L3	. . NUT		1
		-----*-----		
11	MS21266-1N	. GROMMET, EDGE		A/R
12	AN815-4D	. UNION		2
13	193000-4D0680	. HOSE ASSEMBLY		2
		ATTACHING PARTS		
14	006-1002-0022-1	. STAND-OFF		1
	MS21919WDG8	. CLAMP		2
	AN525-10R22	. SCREW		1
	AN970-3	. WASHER		1
	MS21042L3	. NUT		1
		-----*-----		
15	SW-23	. SPIRAL WRAP TUBING		A/R

HALO 250/HALO 275 SUPER KING AIR 200 SERIES ILLUSTRATED PARTS CATALOG

[illegible]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**31-50-11
OVERSPEED WARNING**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

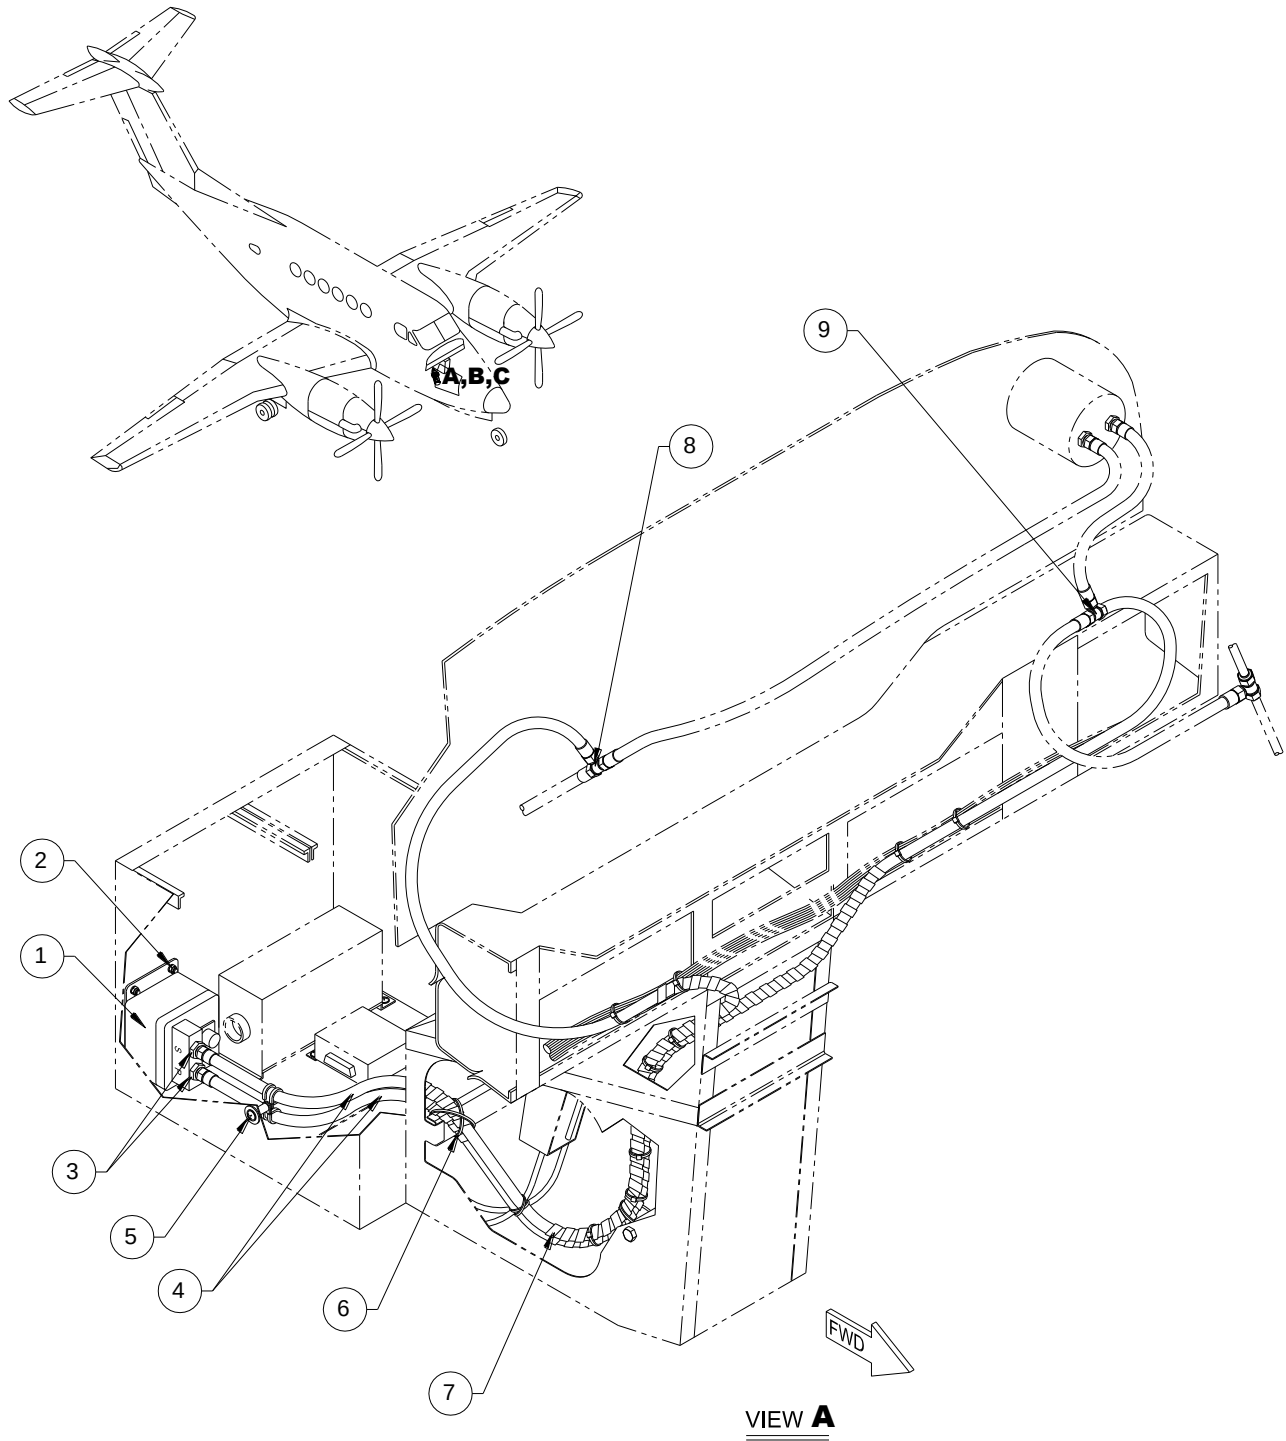


**FIGURE 50-11, OVERSPEED WARNING
SHEET 1 OF 4**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

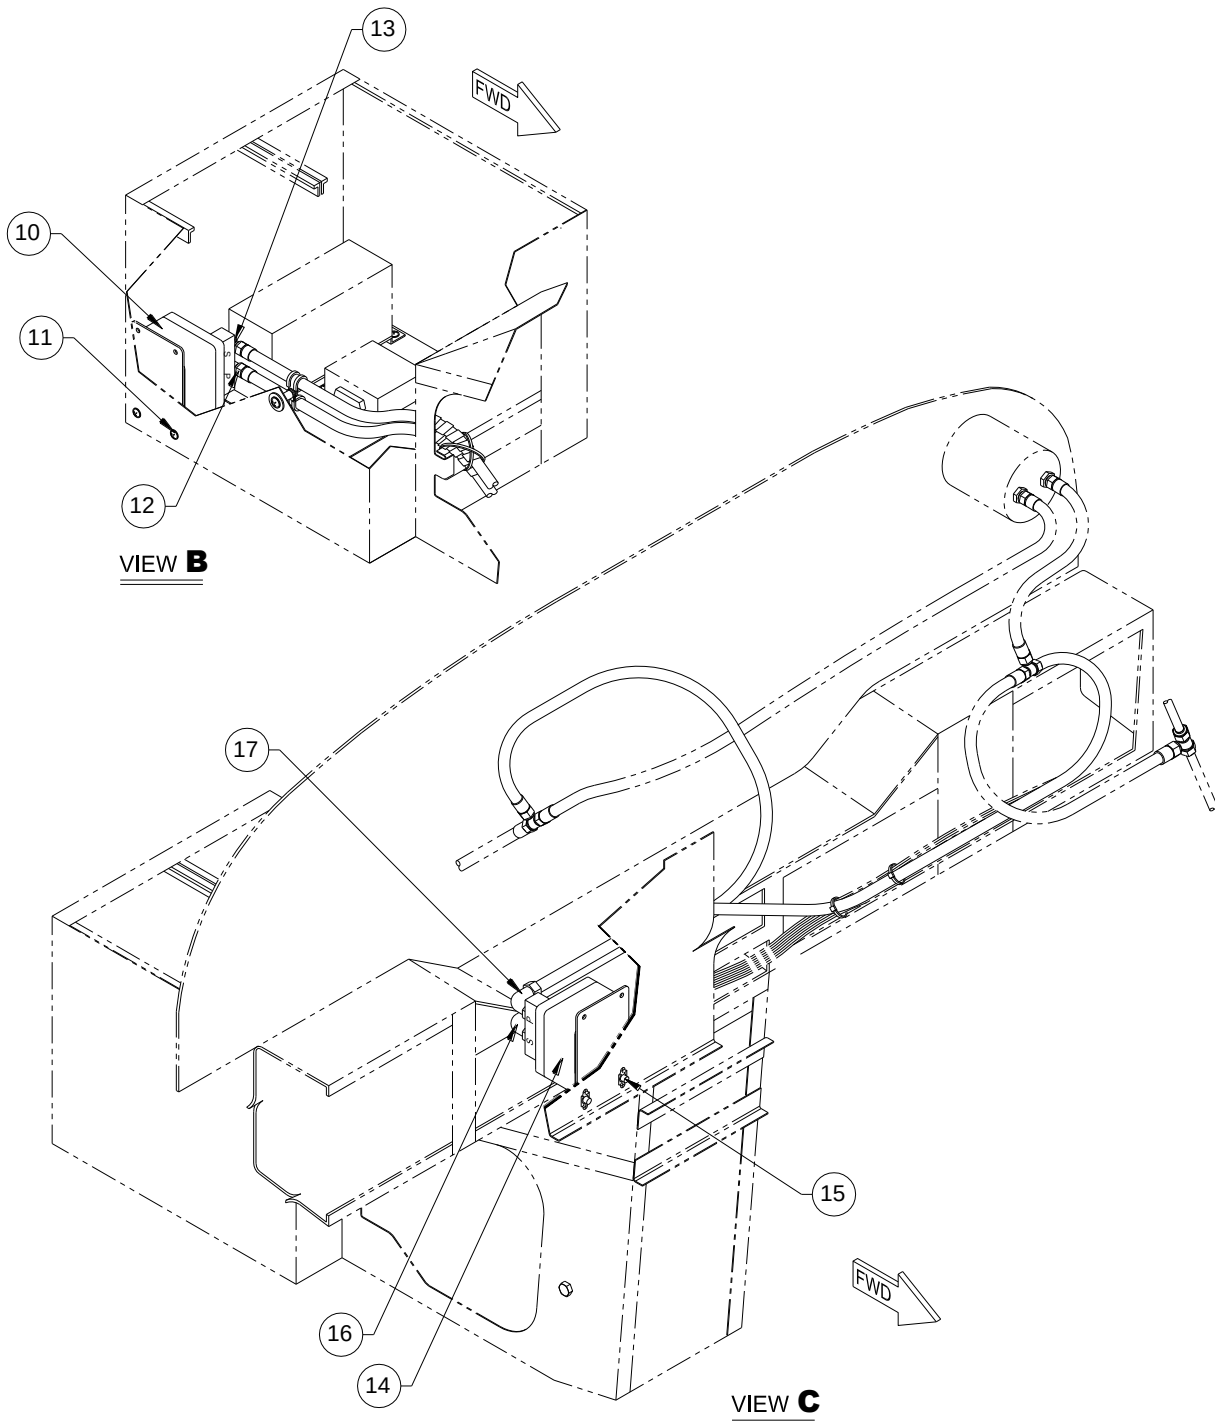


**FIGURE 50-11, OVERSPEED WARNING
SHEET 2 OF 4**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

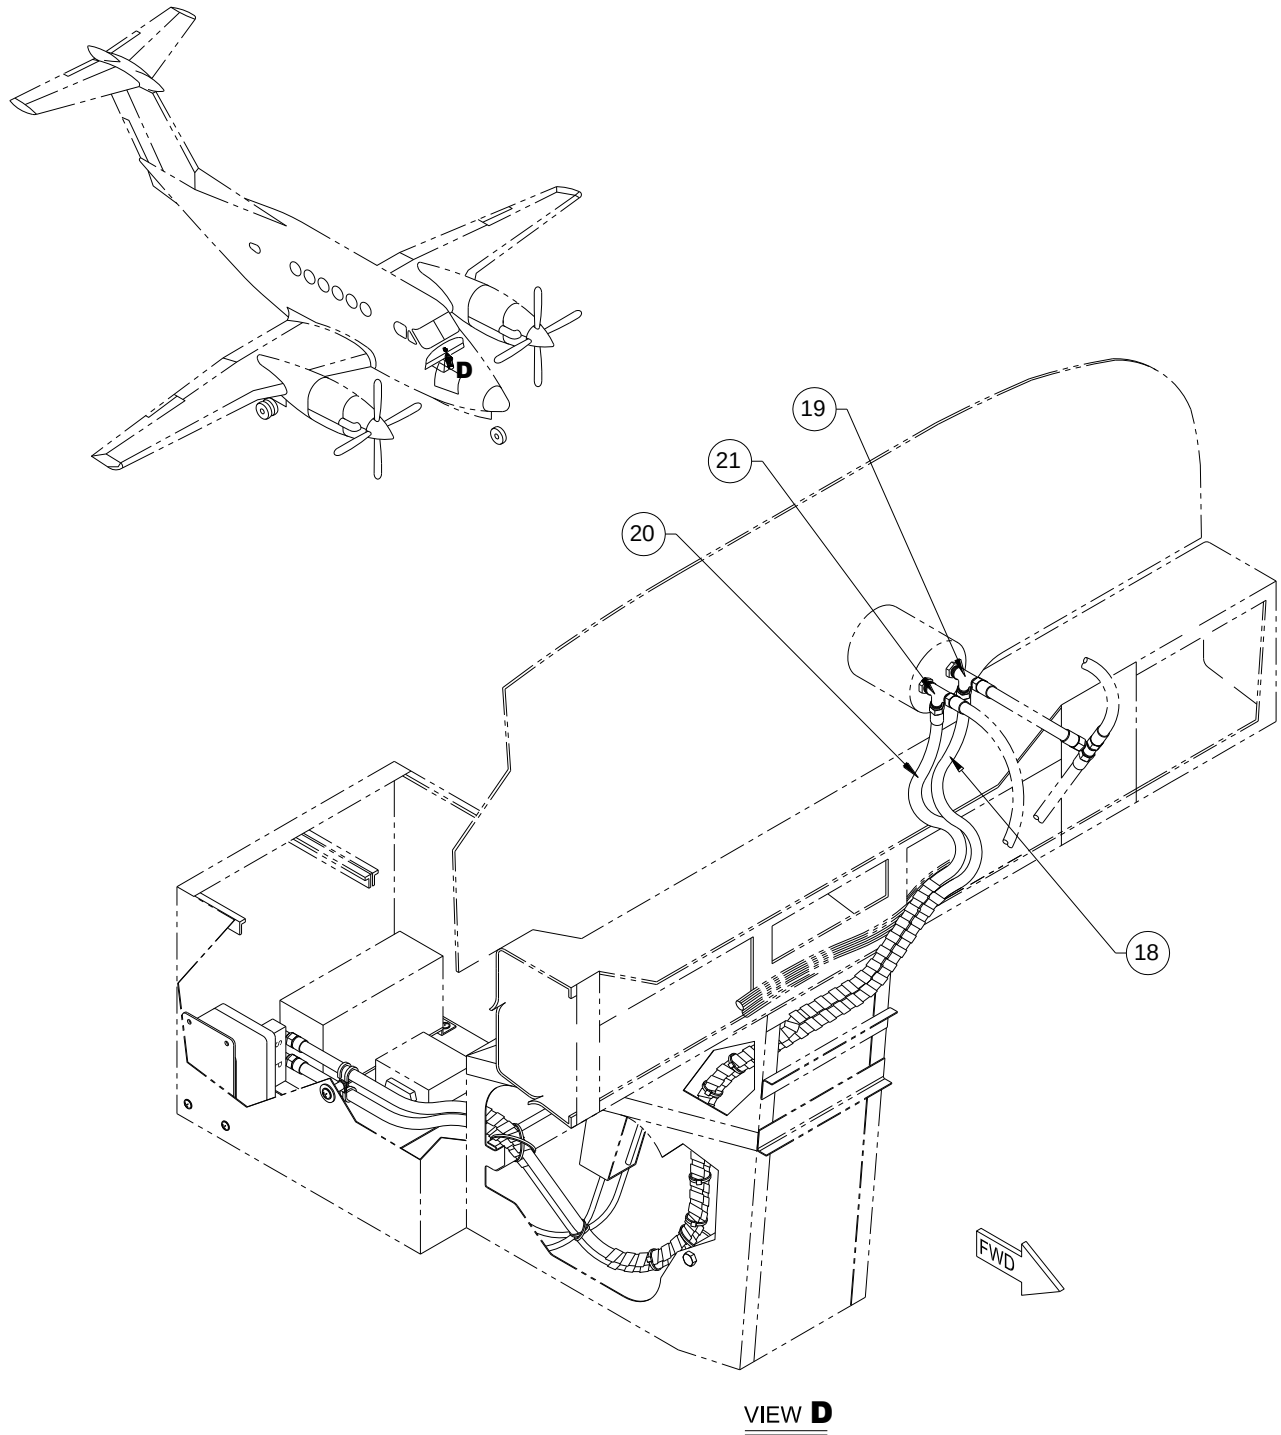

**FIGURE 50-11, OVERSPEED WARNING
SHEET 3 OF 4**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

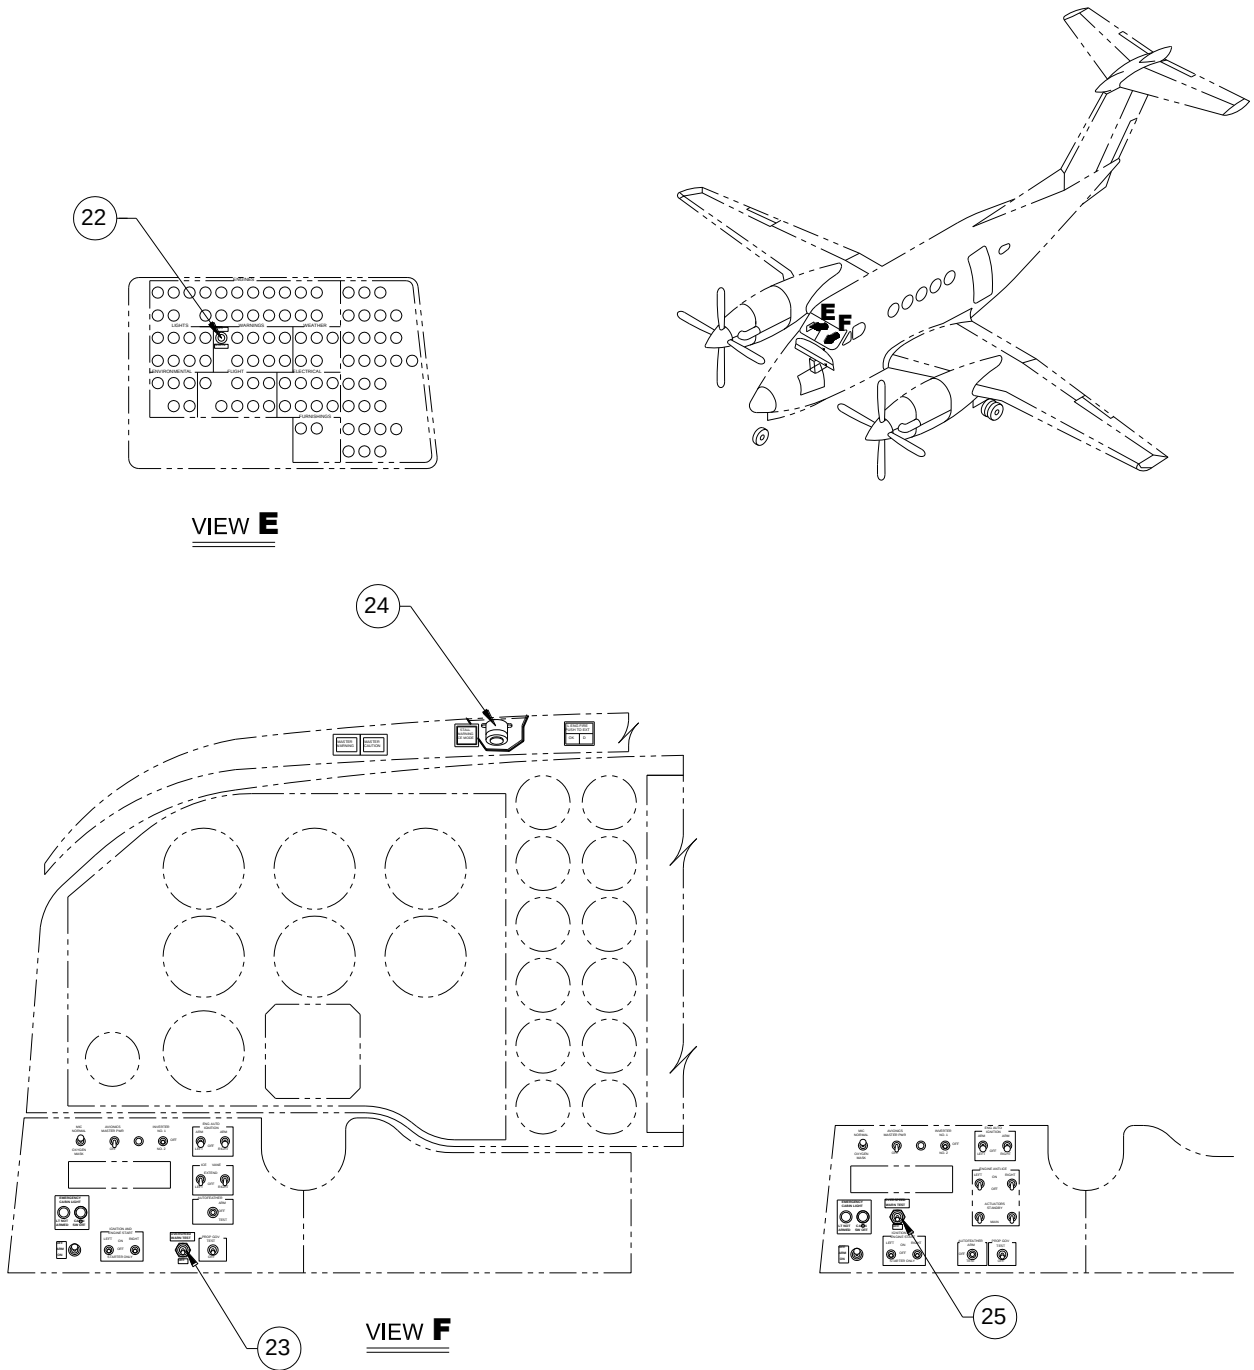

**FIGURE 50-11, OVERSPEED WARNING
SHEET 4 OF 4**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1002-0000-2	INSTALLATION, OVERSPEED WARNING		
1	006-1002-0005-1	. OVERSPEED WARNING SWITCH ATTACHING PARTS		1
2	AN525-832R7	. SCREW		4
	NAS1149FN816P	. WASHER		4
	MS21042L08	. NUT		4
		-----*-----		
3	AN816-4D	. ADAPTER		2
4	193000-4D0680	. HOSE ASSEMBLY ATTACHING PARTS		2
5	006-1002-0022-1	. STAND-OFF		1
	MS21919WDG8	. CLAMP		2
	AN525-10R22	. SCREW		1
	AN970-3	. WASHER		1
	MS21042L3	. NUT		1
		-----*-----		
6	MS3367	. WIRE TIE		A/R
7	SW-23	. SPIRAL WRAP TUBING		A/R
8	AN824-4D	. TEE		1
9	AN824-4D	. TEE		1
10	006-1002-0005-1	. O/S WARNING SWITCH (ALT. LOCATION) ATTACHING PARTS		1
11	AN525-832R7	. SCREW		4
	NAS1149FN816P	. WASHER		4
	MS21042L08	. NUT		4
		-----*-----		
	AN816-4D	. ADAPTER		2
12	4 C6X-S	. ELBOW		1
13	MS20822-4D	. ELBOW		1
14	006-1002-0005-1	. O/S WARNING SWITCH (ALT. LOCATION) ATTACHING PARTS		1
15	AN525-832R7	. SCREW		4
	NAS1149FN816P	. WASHER		4
	MS21059L08	. NUT PLATE		4
	MS21042L08	. NUT (ALTERNATE)		4
		-----*-----		
	AN816-4D	. ADAPTER		2
16	4 C6X-S	. ELBOW		1
17	MS20822-4D	. ELBOW		1



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
18	193000-4D0680	. HOSE ASSEMBLY	A	1
19	MS20826-4D	. TEE	A	1
20	193000-4D0680	. HOSE ASSEMBLY	A	1
21	MS20826-4D	. TEE	A	1
22	7277-2-5	. CIRCUIT BREAKER		1
23	MS24523-26	. TOGGLE SWITCH		1
	1TL1-8	. TOGGLE SWITCH (ALTERNATE)		1
24	PF-20A35EWQ	. HORN		1
		ATTACHING PARTS		
	MS35206-217	. SCREW		2
	NAS1149FN432P	. WASHER		2
	MS21044N04	. NUT		2
		-----*-----		
25	MS24523-26	. TOGGLE SWITCH	B	1
	1TL1-8	. TOGGLE SWITCH (ALTERNATE)		1
	A	GARMIN G1000 EQUIPPED AIRPLANES		
	B	BB1439, BB1444 – BB1842; BL0139 – BL0147		
		“END”		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

CHAPTER 33 – LIGHTS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION	FIGURE	EFFECTIVITY
CABIN LIGHTING			
EMERGENCY LIGHTING	33-50	10	
EMERGENCY LIGHTING	33-50	11	



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


**33-50-10
EMERGENCY LIGHTING**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**



[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

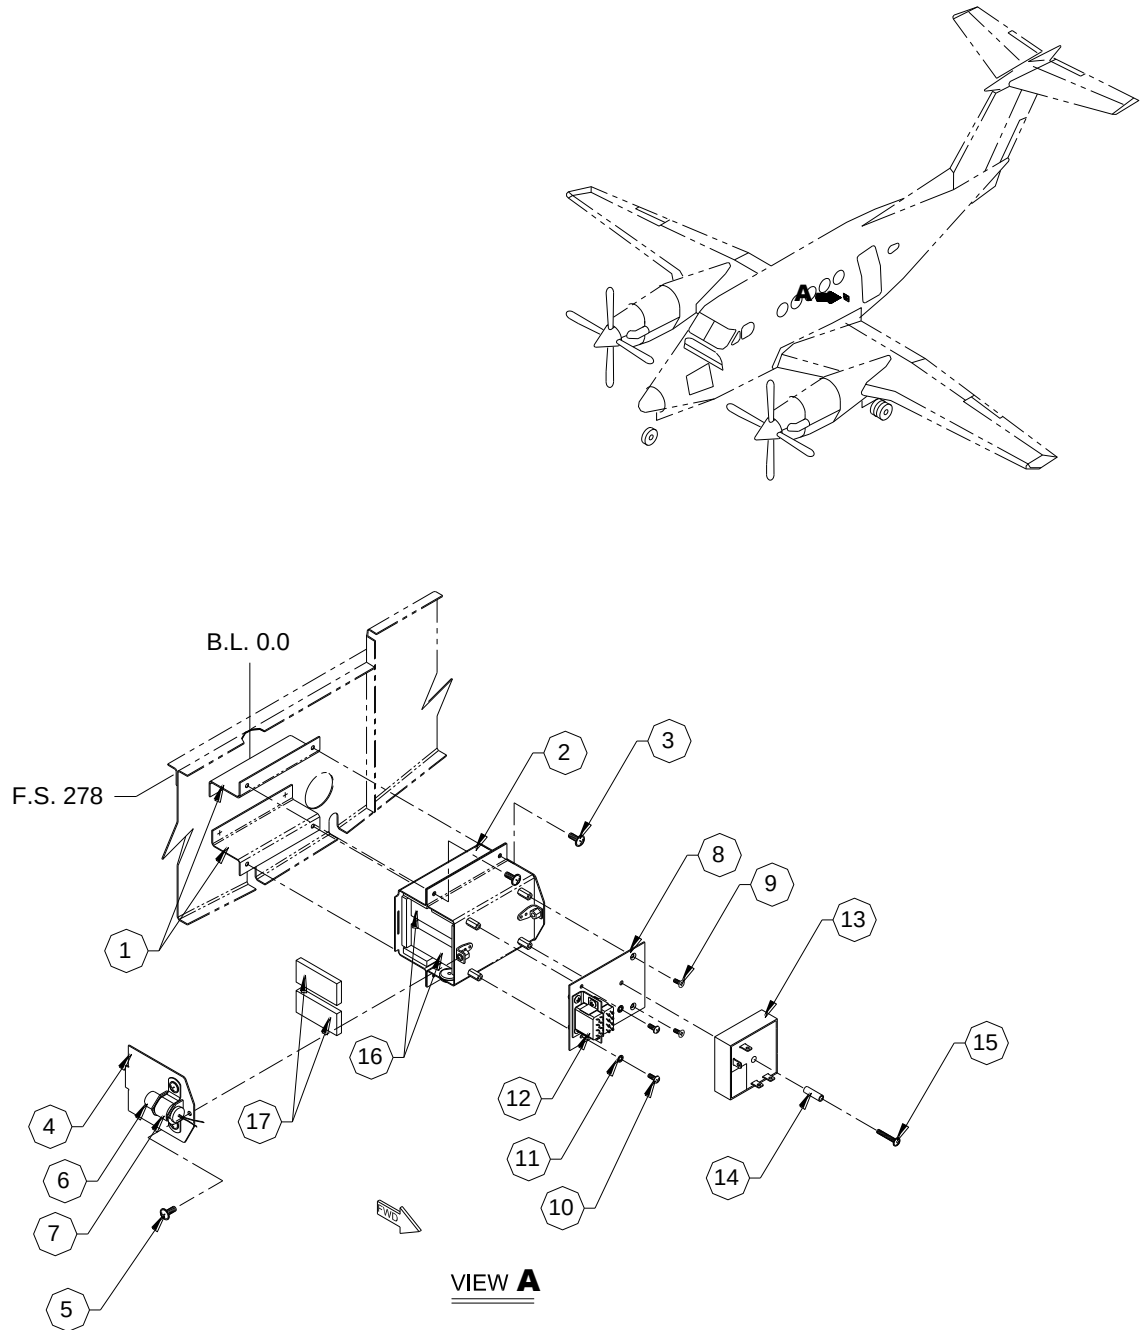


**FIGURE 50-10, EMERGENCY LIGHTING
SHEET 1 OF 6**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

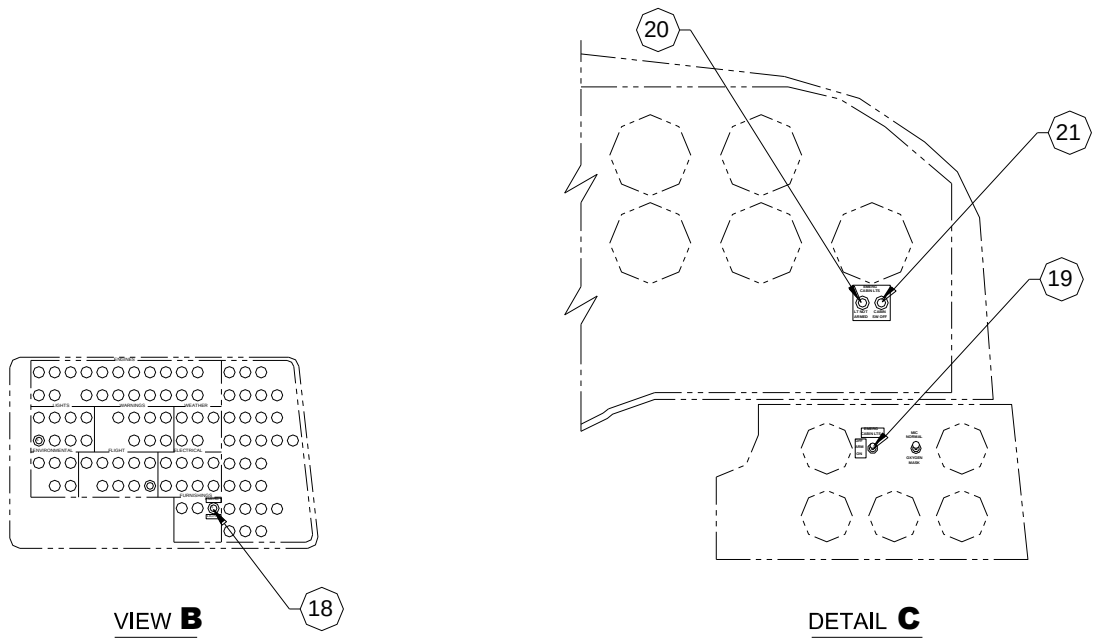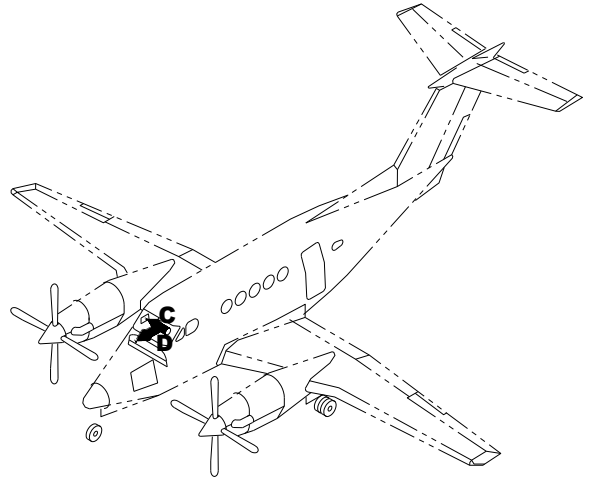


**FIGURE 50-10, EMERGENCY LIGHTING
SHEET 2 OF 6**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

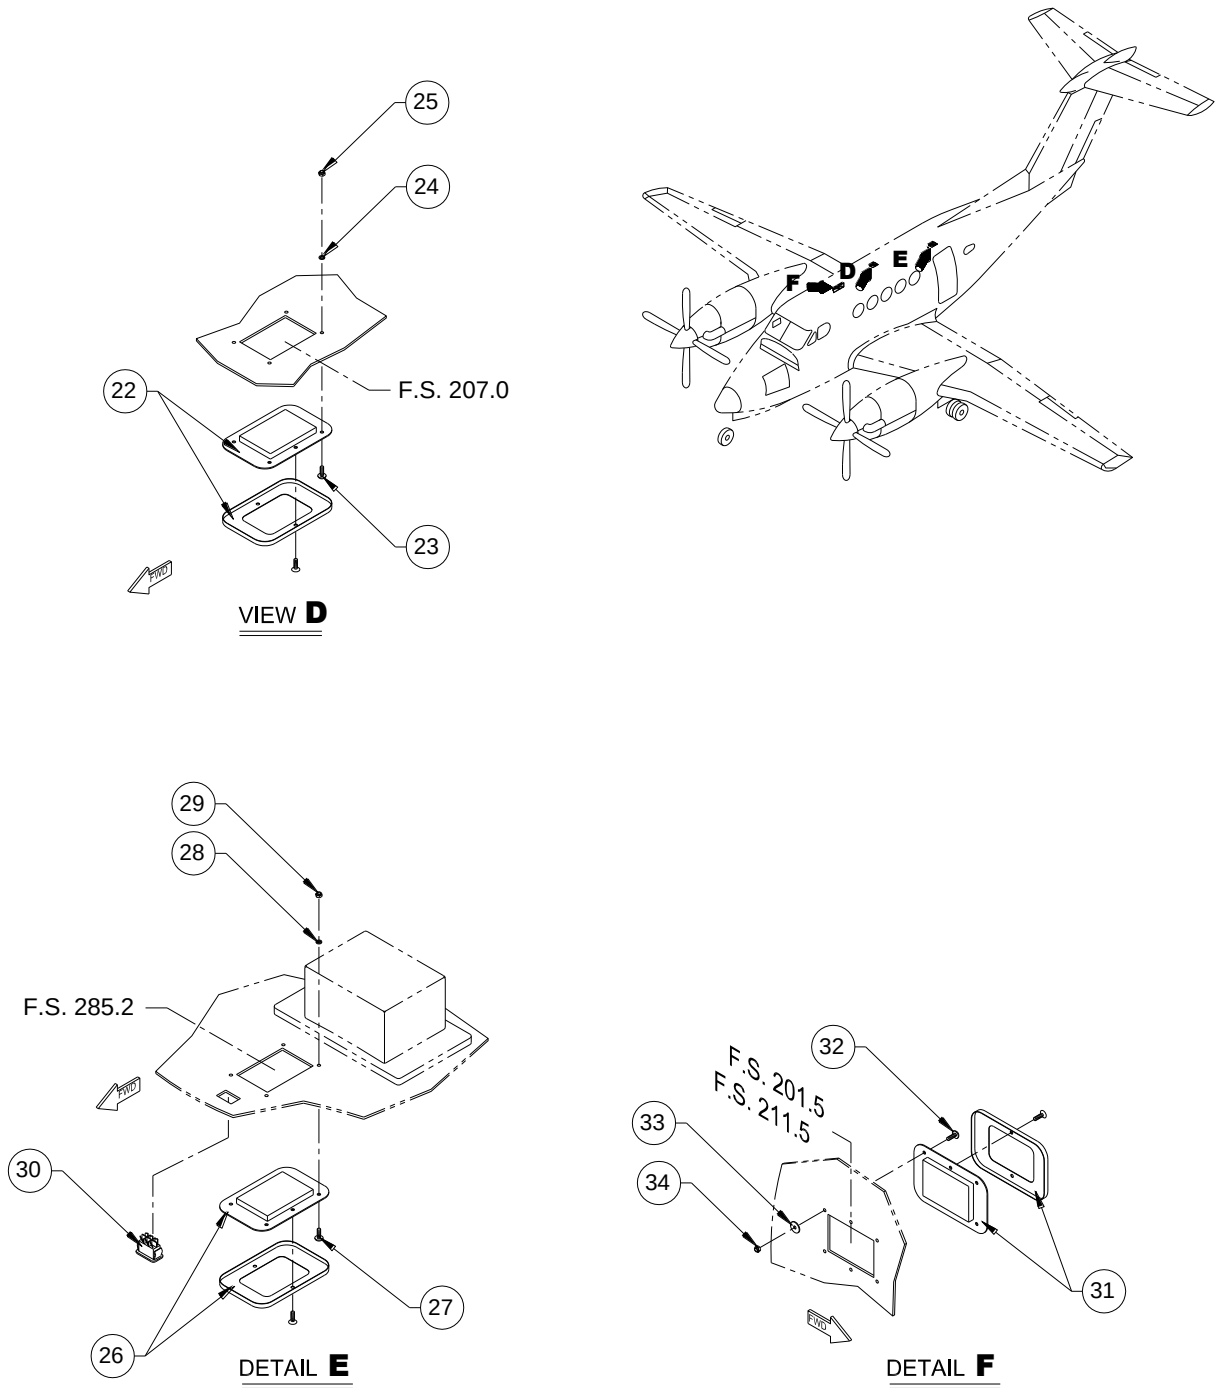



**FIGURE 50-10, EMERGENCY LIGHTING
SHEET 3 OF 6**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

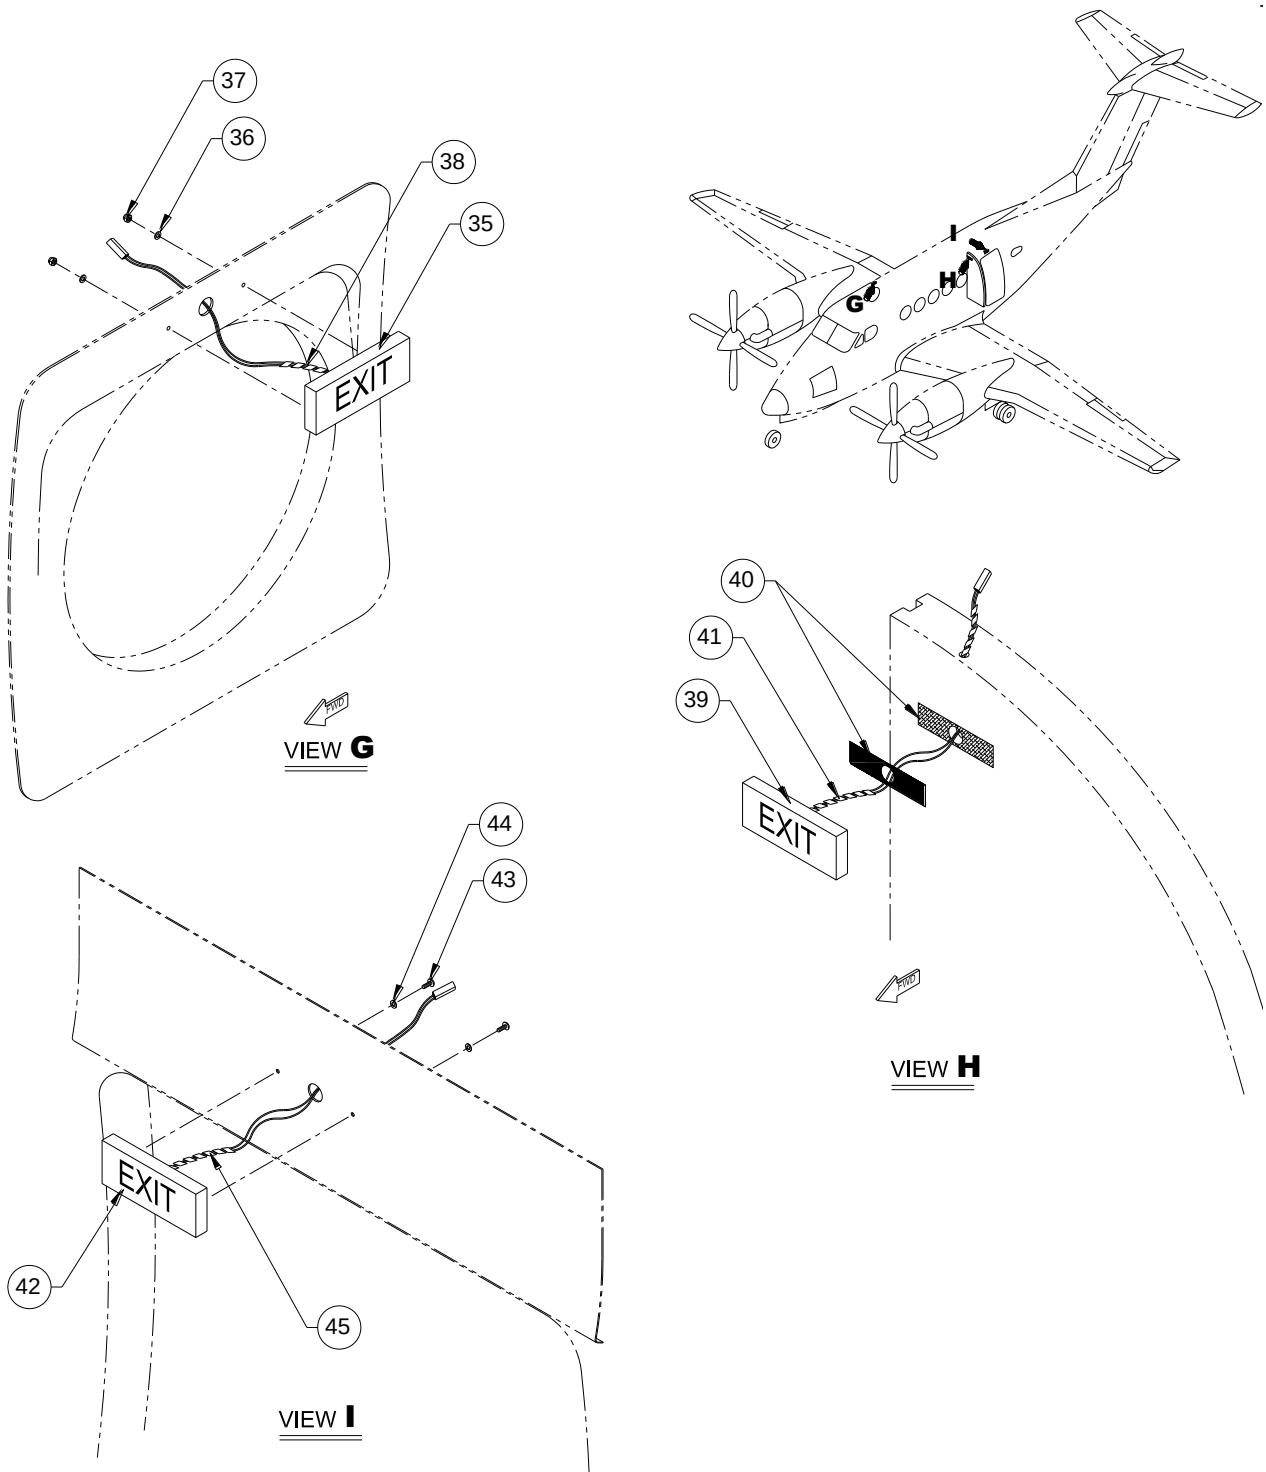

**FIGURE 50-10, EMERGENCY LIGHTING
SHEET 4 OF 6**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

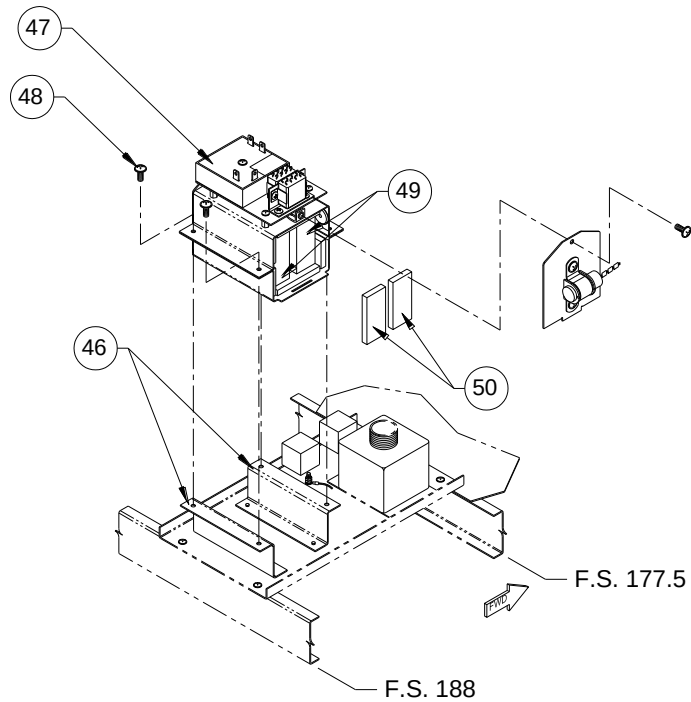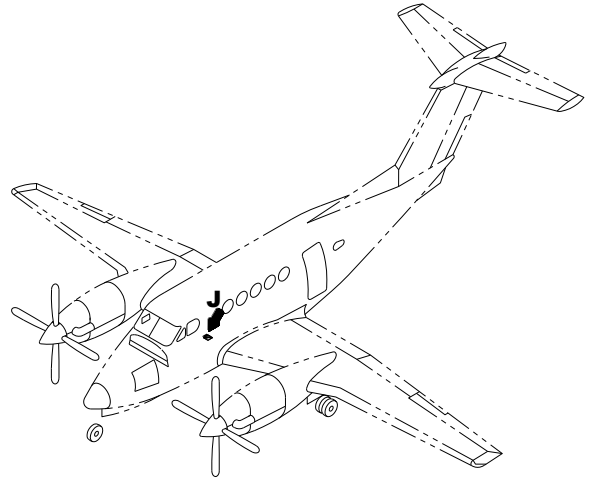

VIEW J

**FIGURE 50-10, EMERGENCY LIGHTING
SHEET 5 OF 6**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

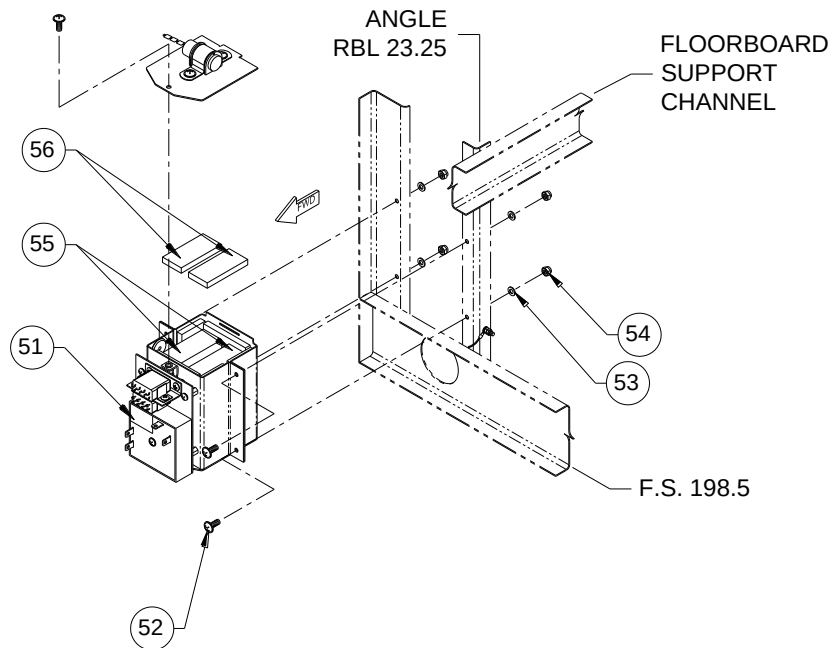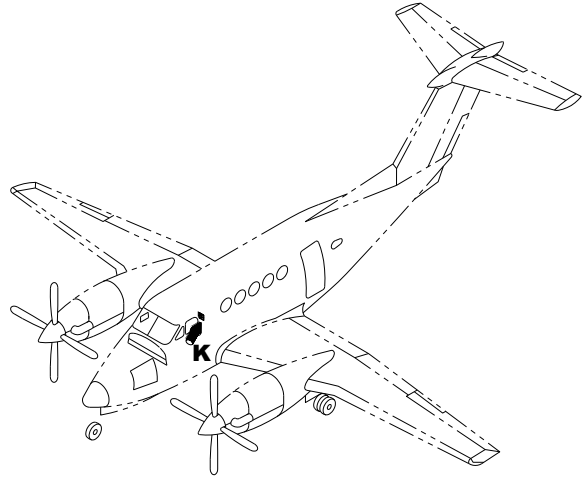

VIEW K

**FIGURE 50-10, EMERGENCY LIGHTING
SHEET 6 OF 6**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1005-0000-1	INSTALLATION, EMERGENCY LIGHTING		1
1	006-1005-0005-1	. ANGLE ASSEMBLY		2
		ATTACHING PARTS		
	CR3213-4-02	. RIVET		2
		-----*-----		
2	006-1005-0003-1	. POWER SUPPLY ASSEMBLY		1
		ATTACHING PARTS		
3	AN525-832R7	. SCREW		4
		-----*-----		
	006-1005-0001-1	. . BOX ASSEMBLY		1
4	006-1005-0001-5	. . LID ASSEMBLY		1
		ATTACHING PARTS		
5	AN525-832R7	. . SCREW		1
		-----*-----		
6	6UO-627/2	. . G-SWITCH		1
		ATTACHING PARTS		
7	006-1005-0029-1	. . CLAMP		1
	AN525-832R5	. . SCREW		2
		-----*-----		
8	006-1005-0002-1	. . RELAY PANEL ASSEMBLY		1
		ATTACHING PARTS		
9	MS24693S26	. . SCREW		2
10	MS35206-228	. . SCREW		2
11	MS35333-37	. . LOCK WASHER		2
		-----*-----		
12	006-1005-0002-3	. . . RELAY BRACKET		1
		ATTACHING PARTS		
	MS35206-228	. . . SCREW		2
		-----*-----		
	M83536/10-026M	. . . RELAY		2
		ATTACHING PARTS		
	MS35206-228	. . . SCREW		2
	NAS1149FN632P	. . . WASHER		2
	MS21042L06	. . . NUT		2
		-----*-----		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
13	THR-10568-F11MJ	. . TIMER RELAY ATTACHING PARTS		1
14	006-1005-0031-2	. . SPACER		1
15	AN526-832R20	. . SCREW -----*-----		1
16	PS1208	. BATTERY		2
17	006-1005-0001-10	. FOAM RUBBER GASKET		2
18	7277-2-5	. CIRCUIT BREAKER		1
19	2TL1-10A	. SWITCH		1
	MS27408-4A	. SWITCH (ALTERNATE)		1
20	249-8072-3333504F	. INDICATOR, "LT NOT ARMED"		1
21	249-8072-3333504F	. INDICATOR, "CABIN SW OFF"		1
22	006-1005-0004-1	. CABIN LIGHT ASSEMBLY ATTACHING PARTS		1
23	MS35206-219	. SCREW		4
24	NAS1149FN432P	. WASHER		4
25	MS21044N04	. NUT -----*-----		4
26	006-1005-0004-1	. CABIN LIGHT ASSEMBLY ATTACHING PARTS		1
27	MS35206-219	. SCREW		4
28	NAS1149FN432P	. WASHER		4
29	MS21044N04	. NUT -----*-----		4
30	DM61J12S205PQ	. ROCKER SWITCH		1
31	006-1005-0004-1	. CABIN LIGHT ASSEMBLY (ALT. LOC.) ATTACHING PARTS		1
32	MS35206-219	. SCREW		4
33	006-1005-0033-1	. WASHER		4
34	MS21044N04	. NUT -----*-----		4
35	ELES-500-002	. EXIT SIGN (OPTIONAL) (SEE 25-20-51) ATTACHING PARTS		1
	MS35206-231	. SCREW		2
36	NAS1149FN632P	. WASHER		2
37	MS21044N06	. NUT -----*-----		2
38	SW-20	. SPIRAL WRAP		A/R



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
39	ELES-500-002	. EXIT SIGN (OPTIONAL) (SEE 25-20-51) ATTACHING PARTS		1
40	006-1004-0001-2	. HOOK & LOOP TAPE -----*-----		1
41	SW-20	. SPIRAL WRAP		A/R
42	ELES-500-002	. EXIT SIGN (OPTIONAL) (SEE 25-20-51) ATTACHING PARTS		1
43	MS35206-231	. SCREW		2
44	NAS1149FN632P	. WASHER		2
	MS21044N06	. NUT -----*-----		2
45	SW-20	. SPIRAL WRAP		A/R
46	006-1005-0005-1	. ANGLE ASSEMBLY (ALT. LOCATION) ATTACHING PARTS		2
	CR3213-4-02	. RIVET -----*-----		2
47	006-1005-0003-1	. POWER SUPPLY ASSY. (ALT. LOCATION) (SEE ITEM 2 FOR COMPONENT LIST) ATTACHING PARTS		1
48	AN525-832R7	. SCREW -----*-----		4
49	PS1208	. BATTERY		2
50	006-1005-0001-10	. FOAM RUBBER GASKET		2
51	006-1005-0003-1	. POWER SUPPLY ASSY. (ALT. LOCATION) (SEE ITEM 2 FOR COMPONENT LIST) ATTACHING PARTS		1
52	AN525-832R7	. SCREW		4
53	NAS1149FN832P	. WASHER		4
54	MS21044N08	. NUT -----*-----		4
55	PS1208	. BATTERY		2
56	006-1005-0001-10	. FOAM RUBBER GASKET		2
		200, A200, B200 SERIES; BY0001-BY0206, BY0208-BY0238, BY0240-BY0249 "END"		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**



**33-50-11
EMERGENCY LIGHTING**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**


[Intentional Blank Page]

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

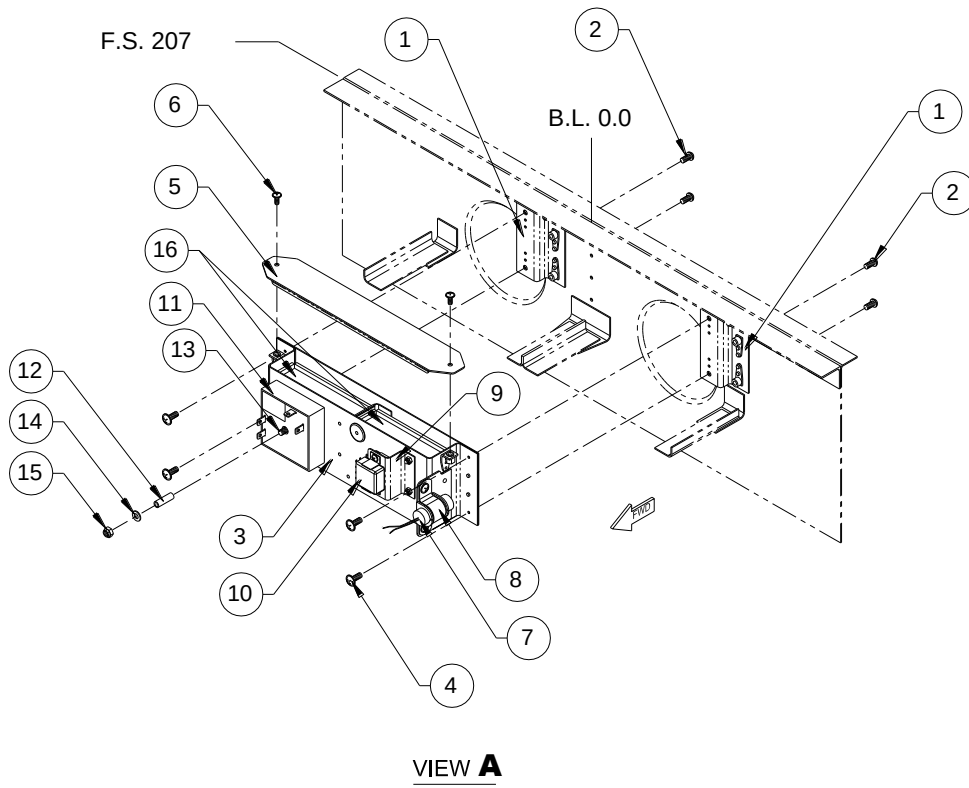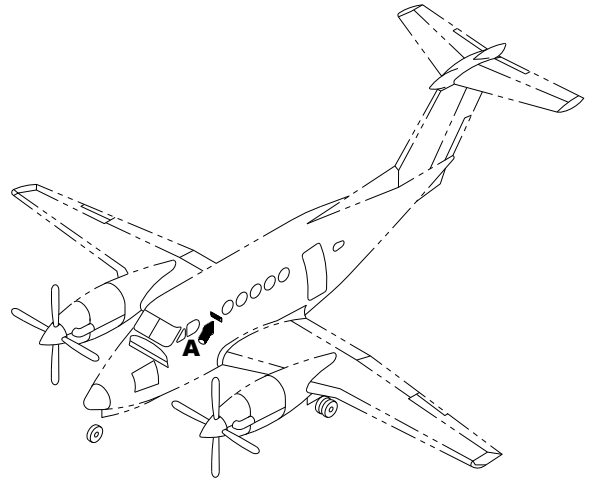


**FIGURE 50-11, EMERGENCY LIGHTING
SHEET 1 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

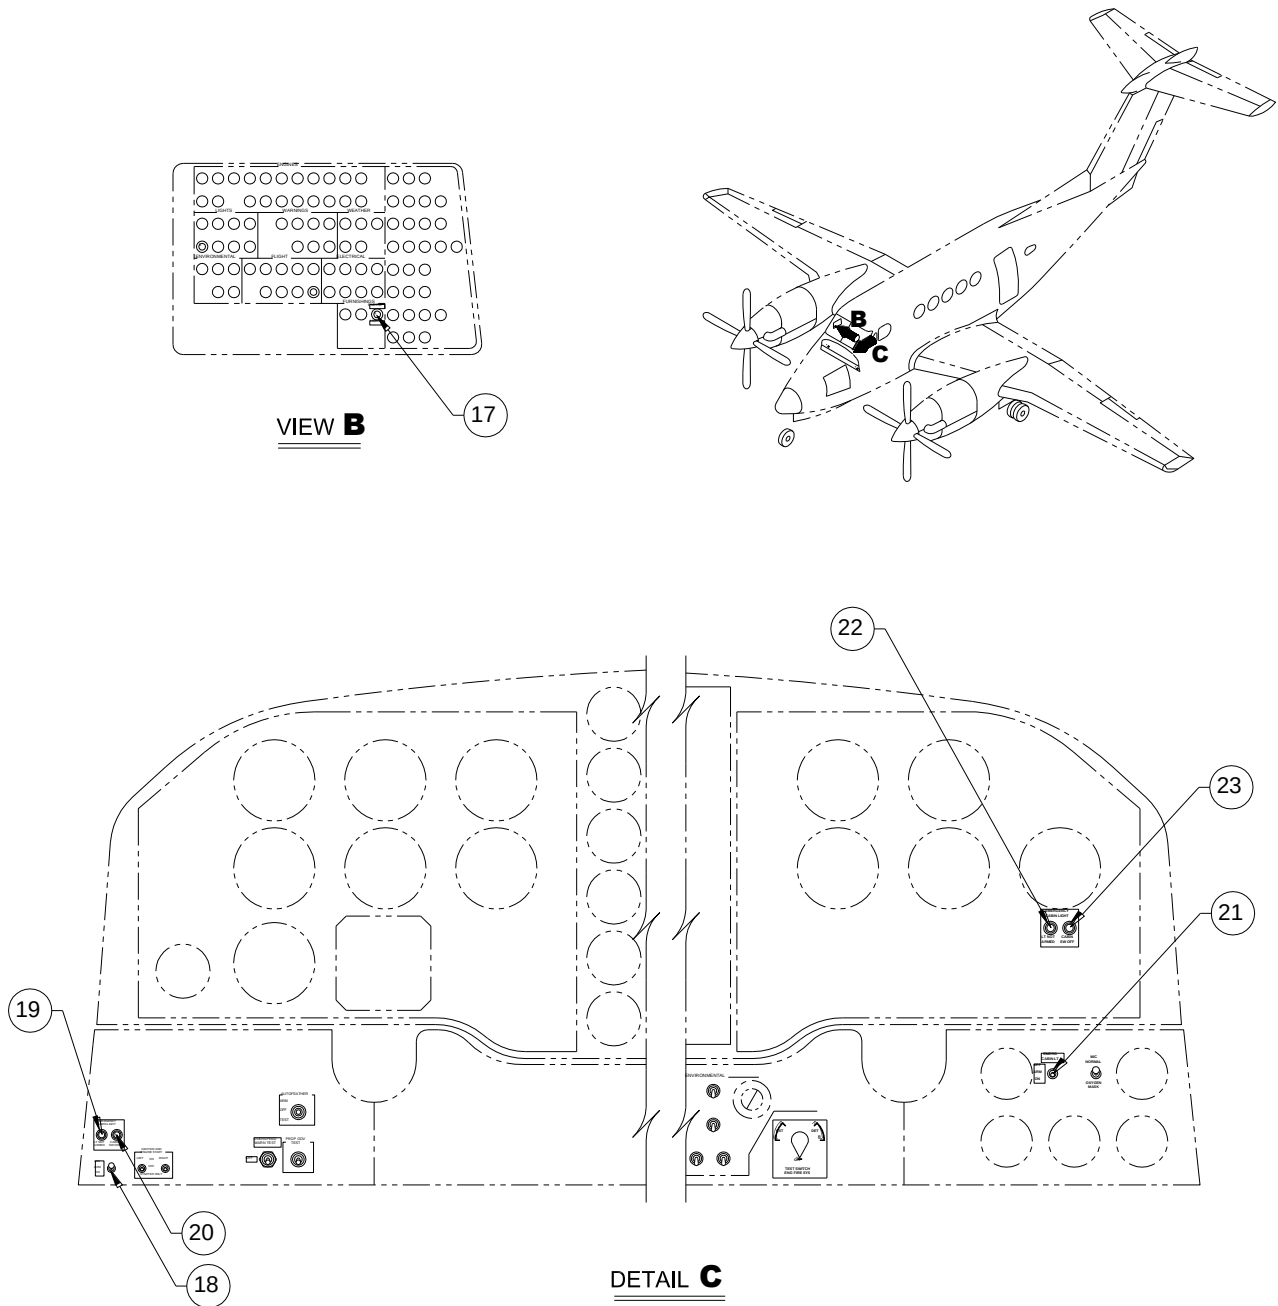


**FIGURE 50-11, EMERGENCY LIGHTING
SHEET 2 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

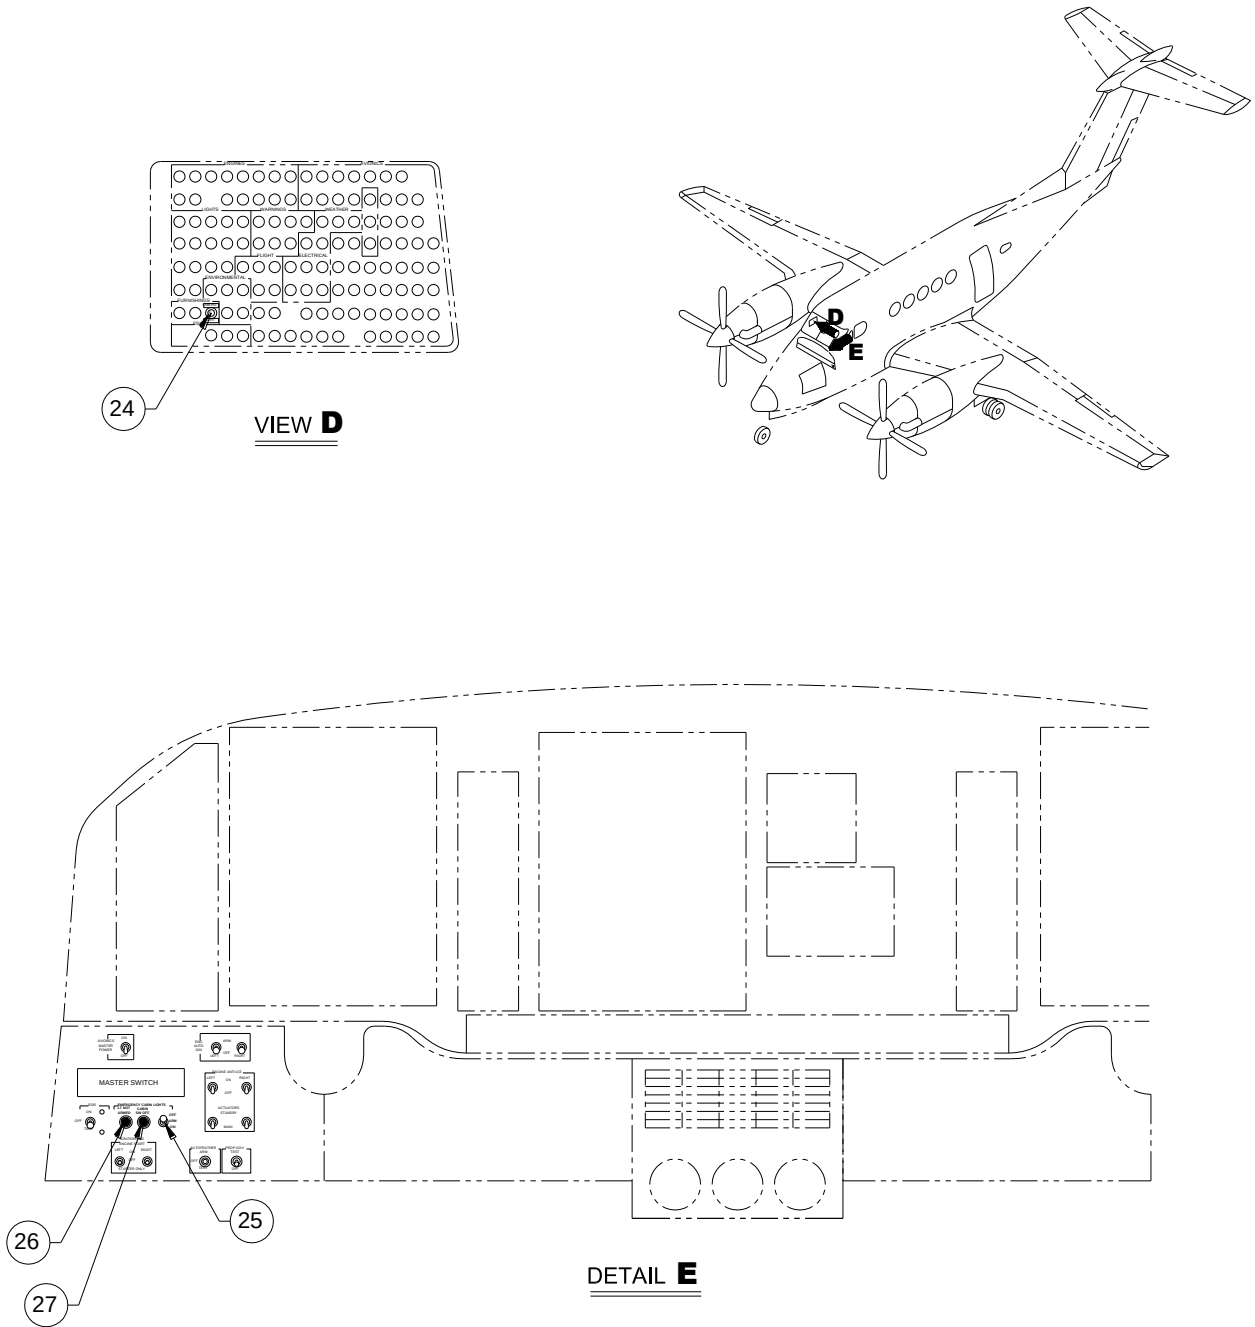


**FIGURE 50-11, EMERGENCY LIGHTING
SHEET 3 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

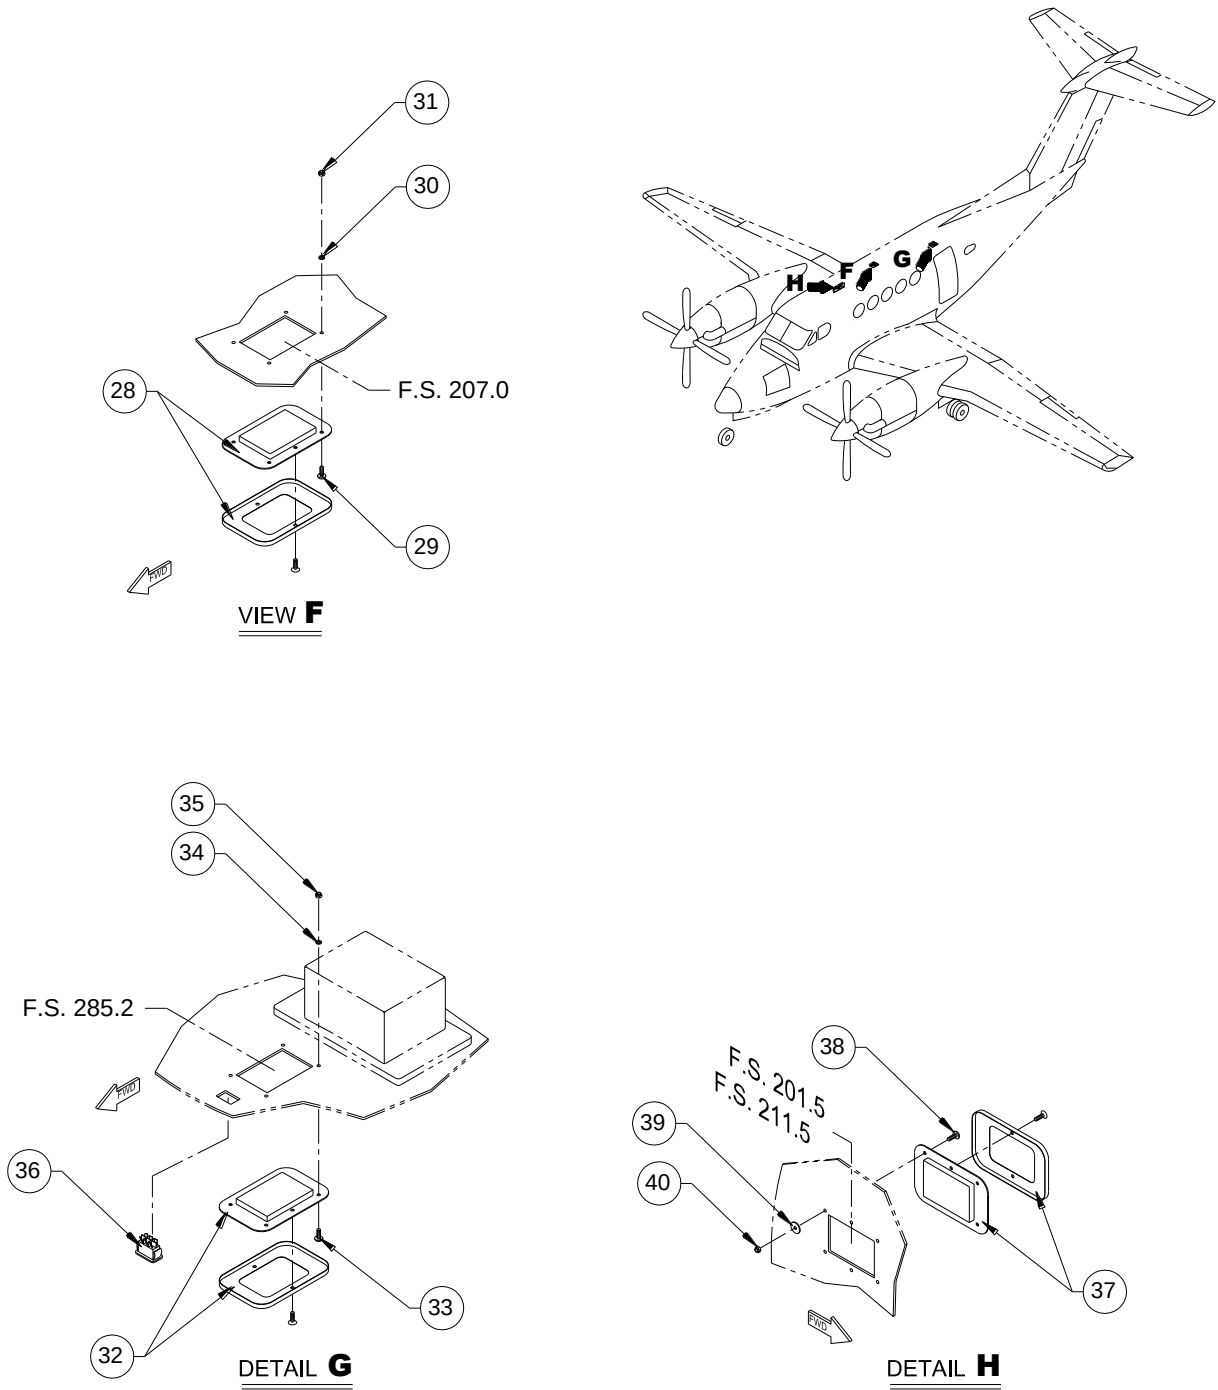

**FIGURE 50-11, EMERGENCY LIGHTING
SHEET 4 OF 5**

**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

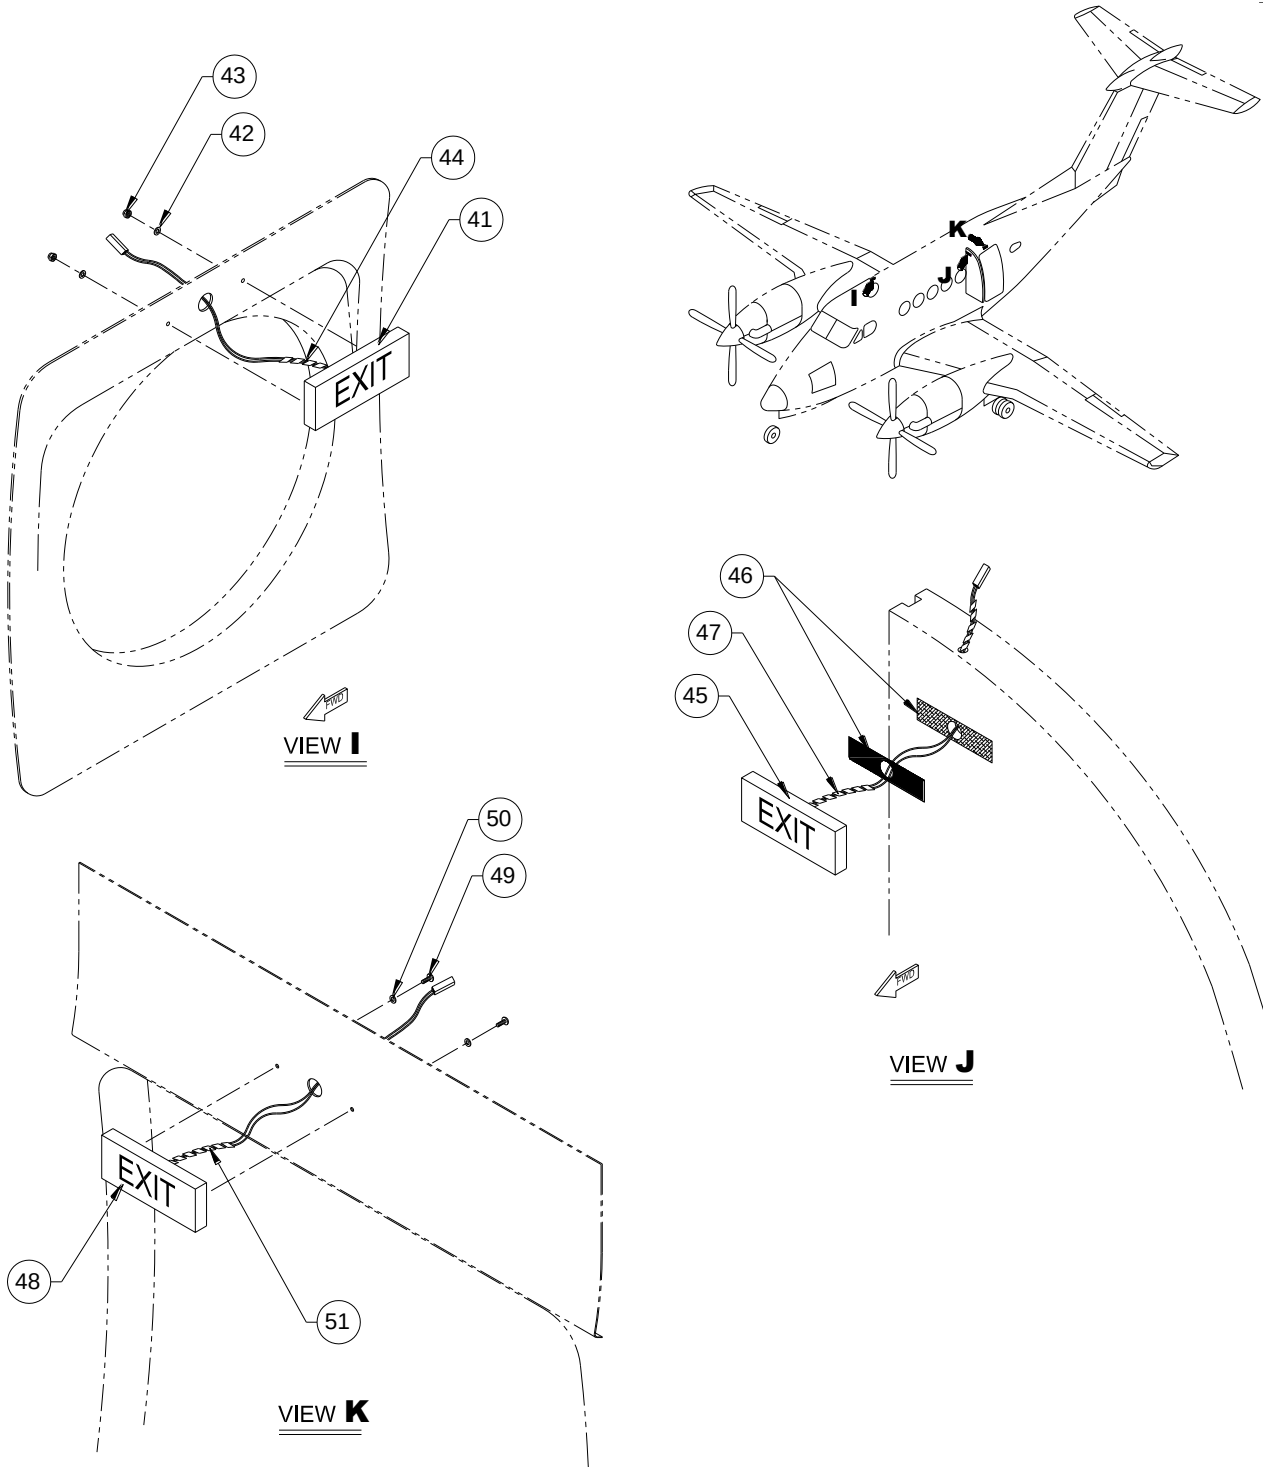

**FIGURE 50-11, EMERGENCY LIGHTING
SHEET 5 OF 5**



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
	006-1005-0000-2	INSTALLATION, EMERGENCY LIGHTING		1
1	006-1005-0007-1	. ANGLE ASSEMBLY		2
		ATTACHING PARTS		
2	AN525-832R7	. SCREW		2
		-----*-----		
3	006-1005-0008-1	. POWER SUPPLY ASSEMBLY		1
		ATTACHING PARTS		
4	AN525-832R7	. SCREW		4
		-----*-----		
	006-1005-0006-1	. . BOX ASSEMBLY		1
5	006-1005-0006-9	. . LID ASSEMBLY		1
		ATTACHING PARTS		
6	AN525-832R7	. . SCREW		2
		-----*-----		
7	6UO-627/2	. . G-SWITCH		1
		ATTACHING PARTS		
8	006-1005-0029-1	. . CLAMP		1
	AN525-832R5	. . SCREW		2
	MS21044N08	. . NUT		2
		-----*-----		
9	006-1005-0006-10	. . RELAY PANEL ASSEMBLY		1
		ATTACHING PARTS		
	MS35206-228	. . SCREW		2
	MS21044N08	. . NUT		2
		-----*-----		
	006-1005-0006-6	. . . RELAY BRACKET		1
10	M83536/10-026M	. . . RELAY		2
		ATTACHING PARTS		
	MS35206-228	. . . SCREW		2
	NAS1149FN632P	. . . WASHER		2
	MS21042L06	. . . NUT		2
		-----*-----		
11	THR-10568-F11MJ	. . TIMER RELAY		1
		ATTACHING PARTS		
12	006-1005-0031-2	. . SPACER		1
13	AN526-832R20	. . SCREW		1
14	NAS1149FN832P	. . WASHER		1
15	MS21044N08	. . NUT		1
		-----*-----		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
16	PS1208	. BATTERY		2
17	7277-2-5	. CIRCUIT BREAKER		1
18	2TL1-10A	. SWITCH		1
	MS27408-4A	. SWITCH (ALTERNATE)		1
19	249-8072-3333504F	. INDICATOR, "LT NOT ARMED"		1
20	249-8072-3333504F	. INDICATOR, "CABIN SW OFF"		1
21	2TL1-10A	. SWITCH (ALTERNATE LOCATION)		1
	MS27408-4A	. SWITCH (ALTERNATE)		1
22	249-8072-3333504F	. INDICATOR, "LT NOT ARMED" (ALT. LOC.)		1
23	249-8072-3333504F	. INDICATOR, "CABIN SW OFF" (ALT. LOC.)		1
24	7277-2-5	. CIRCUIT BREAKER	A	1
25	2TL1-10A	. SWITCH	A	1
	MS27408-4A	. SWITCH (ALTERNATE)	A	1
26	249-8072-3333504F	. INDICATOR, "LT NOT ARMED"	A	1
27	249-8072-3333504F	. INDICATOR, "CABIN SW OFF"	A	1
28	006-1005-0004-1	. CABIN LIGHT ASSEMBLY		1
		ATTACHING PARTS		
29	MS35206-219	. SCREW		4
30	NAS1149FN432P	. WASHER		4
31	MS21044N04	. NUT		4
		-----*-----		
32	006-1005-0004-1	. CABIN LIGHT ASSEMBLY		1
		ATTACHING PARTS		
33	MS35206-219	. SCREW		4
34	NAS1149FN432P	. WASHER		4
35	MS21044N04	. NUT		4
		-----*-----		
36	DM61J12S205PQ	. ROCKER SWITCH		1
37	006-1005-0004-1	. CABIN LIGHT ASSEMBLY (ALT. LOC.)		1
		ATTACHING PARTS		
38	MS35206-219	. SCREW		4
39	006-1005-0033-1	. WASHER		4
40	MS21044N04	. NUT		4
		-----*-----		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

ITEM	PART NUMBER	NOMENCLATURE 1 2 3	EFFECTIVITY	UNITS/ ASSY
41	ELES-500-002	. EXIT SIGN (OPTIONAL) (SEE 25-20-51) ATTACHING PARTS		1
	MS35206-231	. SCREW		2
42	NAS1149FN632P	. WASHER		2
43	MS21044N06	. NUT -----*-----		2
44	SW-20	. SPIRAL WRAP		A/R
45	ELES-500-002	. EXIT SIGN (OPTIONAL) (SEE 25-20-51) ATTACHING PARTS		1
46	006-1004-0001-2	. HOOK & LOOP TAPE -----*-----		1
47	SW-20	. SPIRAL WRAP		A/R
48	ELES-500-002	. EXIT SIGN (OPTIONAL) (SEE 25-20-51) ATTACHING PARTS		1
49	MS35206-231	. SCREW		2
50	NAS1149FN632P	. WASHER		2
	MS21044N06	. NUT -----*-----		2
51	SW-20	. SPIRAL WRAP		A/R
		200, A200, B200 SERIES; BY0001 & UP; BZ0001 & UP		
	A	B200, B200GT WITH PRO LINE 21, B200GT WITH PRO LINE FUSION		
		"END"		



**HALO 250/HALO 275 SUPER KING AIR 200 SERIES
ILLUSTRATED PARTS CATALOG**

[Intentional Blank Page]

